



IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

PLEASE READ THE ENTIRE CONTENTS OF THIS MANUAL PRIOR TO INSTALLATION AND OPERATION. BY PROCEEDING WITH TIRE CHANGER INSTALLATION AND OPERATION YOU AGREE THAT YOU FULLY UNDERSTAND AND COMPREHEND THE FULL CONTENTS OF THIS MANUAL. FORWARD THIS MANUAL TO ALL OPERATORS. FAILURE TO OPERATE THIS EQUIPMENT AS DIRECTED MAY CAUSE INJURY OR DEATH.

MAN REV B 04-20-11

P/N 5900380

INSTALLATION AND OPERATION MANUAL

AUTOMOBILE AND LIGHT TRUCK SINGLE PIECE WHEEL TIRE CHANGER

**MODEL:
R30XLT**



RECEIVING

The shipment should be thoroughly inspected as soon as it is received. The signed Bill of Lading is acknowledgement by the shipping carrier as receipt of this product as listed in your invoice as being in a good condition of shipment. If any of these goods listed on this Bill of Lading are missing or damaged, do not accept goods until the shipping carrier makes a notation on the freight bill of the missing or damaged goods. Do this for your own protection.

BE SAFE

Your new tire changer was designed and built with safety in mind. However, your overall safety can be increased with proper training and thoughtful operation on the part of the operator. DO NOT operate or repair this equipment without reading this manual and the important safety instructions shown inside. Keep this operation manual near the tire changer at all times. Make sure that ALL USERS read and understand this manual.



1645 Lemonwood Dr.
Santa Paula, CA. 93060, USA
Toll Free 1-800-253-2363
Tel: 1-805-933-9970
Fax: 1-805-933-9160
www.bendpak.com

RANGER R30XLT TIRE CHANGER

This instruction manual has been prepared specifically for you. Your new Ranger Tire Changer is the product of over 40 years of continuing research, testing and development; it is the most technically advanced tire changer on the market today. The manner in which you care for and maintain your tire changer will have a direct effect on it's overall performance and longevity.

READ THIS ENTIRE MANUAL BEFORE INSTALLATION & OPERATION BEGINS.

RECORD THE TIRE CHANGER INFORMATION HERE. YOU MAY FIND THIS INFORMATION LOCATED ON THE SERIAL NUMBER DATA PLATE.

Model No.	
Revision	
Serial No.	
Date of Mfg.	
Voltage	

This information will be required when calling for parts or warranty issues.
Only replace parts with Ranger approved parts.

PRODUCT WARRANTY

Your new tire changer is covered under warranty for one year on equipment structure; one year on all operating components and tooling/accessories, to the original purchaser, to be free of defects in material and workmanship. The manufacturer shall repair or replace at their option for this period those parts returned to the factory freight prepaid which prove upon inspection to be defective. The manufacturer will pay labor costs for the first 12 months only on parts returned as previously described.

The warranty does not extend to...

- ◆ defects caused by ordinary wear, abuse, misuse, negligence, shipping damage, improper installation, voltage or lack of required maintenance;
- ◆ damages resulting from purchaser's neglect or failure to operate products in accordance with instructions provided in the owner's manual(s) and/or other accompanying instructions supplied;
- ◆ normal wear items or service normally required to maintain the product in a safe operating condition;
- ◆ any component damaged in shipment;
- ◆ other items not listed but may be considered general wear parts;
- ◆ damage caused by rain, excessive humidity, corrosive environments or other contaminants.

THESE WARRANTIES DO NOT EXTEND TO ANY COSMETIC DEFECT NOT INTERFERING WITH EQUIPMENT FUNCTIONALITY OR ANY INCIDENTAL, INDIRECT, OR CONSEQUENTIAL LOSS, DAMAGE, OR EXPENSE THAT MAY RESULT FROM ANY DEFECT, FAILURE, OR MALFUNCTION OF A BENDPAK INC. / RANGER PRODUCT OR THE BREACH OR DELAY IN PERFORMANCE OF THE WARRANTY.

WARRANTY IS NOT VALID UNLESS WARRANTY CARD IS RETURNED.

IMPORTANT NOTE

ALTHOUGH EVERY EFFORT HAS BEEN TAKEN TO ENSURE COMPLETE AND ACCURATE INSTRUCTIONS HAVE BEEN INCLUDED IN THIS MANUAL, POSSIBLE PRODUCT UPDATES, REVISIONS AND OR CHANGES MAY HAVE OCCURRED SINCE THE PRINTING OF THIS MANUAL. BENDPAK / RANGER RESERVES THE RIGHT TO CHANGE SPECIFICATIONS WITHOUT INCURRING ANY OBLIGATION FOR EQUIPMENT PREVIOUSLY OR SUBSEQUENTLY SOLD. BENDPAK / RANGER IS ALSO NOT RESPONSIBLE FOR TYPOGRAPHICAL ERRORS.

BEFORE YOU BEGIN

NOTIFY THE CARRIER AT ONCE if any hidden loss or damage is discovered after receipt, request the carrier to make an inspection. If the carrier will not do so, prepare a signed statement to the effect that you have notified the carrier (on a specific date) and that the carrier has failed to comply with your request.

IT IS DIFFICULT TO COLLECT FOR LOSS OR DAMAGE AFTER YOU HAVE GIVEN THE CARRIER A CLEAR RECEIPT. Support claim with copies of the bill of lading, freight bill, invoice, and photographs, if available. BendPak's willingness to assist in helping you process your claim does not make BendPak responsible for collection of claims or replacement of lost or damaged materials.

IMPORTANT NOTICE

Do not attempt to install this tire changer if you have never been trained on basic automotive service equipment installation procedures. Never attempt to lift components without proper lifting tools such as a forklift or cranes. Stay clear of any moving parts that can fall and cause injury. These instructions must be followed to ensure proper installation and operation of your tire changer. Failure to comply with these instructions can result in serious bodily harm and void product warranty. Manufacturer will assume no liability for loss or damage of any kind, expressed or implied resulting from improper installation or use of this product.

SECTION 1 PLEASE READ ENTIRE MANUAL PRIOR TO INSTALLATION.

OWNER'S RESPONSIBILITY

To maintain the equipment and user safety, the responsibility of the owner is to read and follow these instructions:

- ◆ Follow all installation and operation instructions.
- ◆ Make sure installation conforms to all applicable Local, State, and Federal Codes, Rules, and Regulations; such as State and Federal OSHA Regulations and Electrical Codes.
- ◆ Carefully check the equipment for correct initial function.
- ◆ Read and follow the safety instructions. Keep them readily available for machine operators.
- ◆ Make certain all operators are properly trained, know how to safely and correctly operate the unit, and are properly supervised.
- ◆ Allow unit operation only with all parts in place and operating safely.
- ◆ Carefully inspect the unit on a regular basis and perform all maintenance as required.
- ◆ Service and maintain the unit only with authorized or approved replacement parts.
- ◆ Keep all instructions permanently with the unit and all decals on the unit clean and visible.

DEFINITIONS OF HAZARD LEVELS

Identify the hazard levels used in this manual with the following definitions and signal words:



DANGER !

Watch for this symbol as it means: Immediate hazards which will result in severe personal injury or death.



WARNING !

Watch for this symbol as it means: Hazards or unsafe practices which could result in severe personal injury or death.



CAUTION !

Watch for this symbol as it means: Hazards or unsafe practices which may result in minor personal injury, product or property damage.

INSTALLER / OPERATOR PROTECTIVE EQUIPMENT

Personal protective equipment helps make installation and operation safer, however, it does not take the place of safe operating practices. Always wear durable work clothing during any installation and/or service activity. Shop aprons or shop coats may also be worn, however loose-fitting clothing should be avoided.

Tight-fitting leather gloves are recommended to protect the technician's hands when handling parts. Sturdy leather steel-toe work shoes and oil resistant soles should be used by all service personnel to help prevent injury during typical installation and operation activities.

Eye protection is essential during installation and operation activities. Safety glasses with side shields, goggles, or face shields are acceptable. Back belts provide support during lifting activities and are also helpful in providing worker protection. Consideration should also be given to the use of hearing protection if service activity is performed in an enclosed area, or if noise levels are high.





DANGER!

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION INSTRUCTIONS MAY LEAD TO SERIOUS PERSONAL INJURY OR DEATH TO OPERATOR OR BYSTANDER OR DAMAGE TO PROPERTY. PLEASE READ THE ENTIRE MANUAL PRIOR TO INSTALLATION.



WARNING!

DO NOT OPERATE THIS MACHINE UNTIL YOU HAVE READ AND HAVE UNDERSTOOD ALL OF THE DANGER, WARNING AND CAUTION ALERTS IN THIS MANUAL. FOR ADDITIONAL COPIES OR FURTHER INFORMATION, CONTACT:

 
Bendpak Inc.

1645 Lemonwood Dr.

Santa Paula, CA. 93060

1-805-933-9970

www.bendpak.com



CAUTION

The safe operating temperature range for this product is 41° F. - 104 °F.

TABLE OF CONTENTS

	Page #
Warranty.....	2
Section 1: Owner's Responsibility	3
Definitions of Hazard Levels	3
Operator Protection	3
Section 2: Safety Instructions	5
Section 3: Tire and Wheel Service Safety Instructions ...	6
Section 4: Description of Parts	7
Section 5: Specifications / Tools Required	8
Section 6: Lifting / Un-crating Instructions	9-10
Section 7: Installation Location	11
Section 8: R30XLT Assembly/ Anchoring	12
Section 9: Air Source/ Oiler Adjustment	13
Section 10: Electrical / Wiring Instructions	13-14
Section 11: Demounting	14-15
Bead Loosening	15
Important Wheel Mounting Instructions	16
Wheel Clamp Adjustments	17
Demounting	17-20
Section 12: Custom and Special Wheels	20
Demounting Tube Tires	21
Section 13: Mounting	21
Mounting Tube Tires	23
Section 14: Inflation	23-28
Stages Of Inflation	25
Stage One: Wheel Restraint	25
Stage Two Bead Sealing	25-27
Stage Three: Bead Seating	27-28
Stage Four: Tire Inflation	28
Section 15: Maintenance Instructions	29
Mount/Demount Head	29
Air Dryer / Oiler	30
Inflation Pedal Pressure Limiter	31
Turntable Drive Belt	32
Inflation Valve Lubrication	32
Transmission Oil Inspection/Lubrication	33
Critical Safety Warnings / Instructions	34
Service Parts Diagrams	35-44
Air Schematic	45
Maintenance Notes /Tire and Wheel Data	46-47



THIS SYMBOL POINTS OUT IMPORTANT SAFETY INSTRUCTIONS WHICH IF NOT FOLLOWED COULD ENDANGER THE PERSONAL SAFETY AND/OR PROPERTY OR YOURSELF AND OTHERS AND CAN CAUSE PERSONAL INJURY OR DEATH. READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL BEFORE ATTEMPTING TO OPERATE THIS MACHINE.



IMPORTANT SAFETY INSTRUCTIONS

SECTION 2- IMPORTANT SAFETY INSTRUCTIONS

Read these safety instructions entirely. Do not attempt to install this machine if you have never been trained on basic garage equipment installation procedures. Never attempt to lift components without proper lifting tools such as forklifts or cranes. Stay clear of any moving parts that may fall and cause injury. When using your garage equipment, basic safety precautions should always be followed, including the following:

1. Read and understand all instructions and all safety warnings before operating service equipment.

2. Care must be taken as burns can occur from touching hot parts.

3. Do not operate equipment with a damaged cord or if the equipment has been dropped or damaged until it has been examined by a qualified service person.

4. Do not let a cord hang over the edge of the table, bench, or counter or come in contact with hot manifolds or moving fan blades.

5. If an extension cord is necessary, a cord with a current rating equal to or more than that of the equipment should be used. Cords rated for less current than the equipment may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

6. Always unplug equipment from electrical outlet when not in use. Never use the cord to pull the plug from the outlet. Grasp plug and pull to disconnect.

7. Let equipment cool completely before putting away. Loop cord loosely around equipment when storing.

8. To reduce the risk of fire, do not operate equipment in the vicinity of open containers of flammable liquids (gasoline). Keep exterior of motor free of oil, solvent, or excessive grease.

9. Keep hair, loose clothing, fingers, and all parts of body away from moving parts. Avoid pinch points.

10. **DANGER!** To reduce the risk of electric shock, do not use on wet surfaces or expose to rain. The electronics used on this equipment contain high voltage. Disconnect power at the receptacle or at the circuit breaker switch before performing any electrical repairs. Secure plug so that it cannot be accidentally plugged in during service. Or mark circuit breaker switch so that it cannot be accidentally switched on during service.



11. **DANGER!** The motor on this machine contains high voltage. Disconnect power at the receptacle before performing any electrical repairs. Secure plug so that it cannot be accidentally plugged in during service.

12. Use only as described in this manual. Use only manufacturer's recommended attachments.

13. Do not attempt to operate this equipment if you have never been trained on basic tire service and mounting / demounting procedures.

14. **ALWAYS WEAR SAFETY GLASSES.** Everyday eyeglasses only have impact resistant lenses, they are not safety glasses.



15. Consider work environment. Keep work area clean. Cluttered work areas invite injuries. Keep areas well lit.

16. Guard against electric shock. This equipment must be grounded while in use to protect operator from electric shock. Never connect the green power cord wire to a live terminal. This is for ground only.

17. Only trained operators should operate this machine. All non-trained personnel should be kept away from the work area. Never let non-trained personnel come in contact with, or operate machine.

18. **WARNING! RISK OF EXPLOSION.** This equipment has internal arcing or sparking parts which should not be exposed to flammable vapors. This machine should not be located in a recessed area or below floor level.



19. **MAINTAIN WITH CARE.** Keep equipment clean for better and safer performance. Follow manual for proper lubrication and maintenance instructions. Keep control handles and/or buttons dry, clean and free from grease and oil.

20. Check for damaged parts. Check for alignment of moving parts, breakage of parts or any condition that may affect operation of machine. Do not use machine if any component is broken or damaged.

21. **NEVER** remove safety related components from the equipment. Do not use machine if safety related components are missing or damaged.

22. **DRESS PROPERLY.** Non-skid steel-toe footwear is recommended when operating machine.

23. Illegible and missing warning labels must be replaced immediately. Do not use the tire changer if one or more labels are missing. Do not add any object that could prevent the operator from seeing the labels.

24. **STAY ALERT.** Use common sense and watch what you are doing. Remember, **SAFETY FIRST.**

SAVE THESE INSTRUCTIONS

SECTION 3 TIRE AND WHEEL SERVICE SAFETY INSTRUCTIONS



DANGER!

ONLY PROPERLY TRAINED PERSONNEL SHOULD SERVICE TIRES AND WHEELS ON THE R30XLT. READ ALL SAFETY AND OPERATING INSTRUCTIONS THOROUGHLY BEFORE USE. THE FOLLOWING SAFETY INSTRUCTIONS ARE FOR ONE PIECE WHEELS ONLY. ALWAYS REFER TO THE MANUFACTURER'S PROCEDURES FOR MULTI-PIECE WHEELS.

ALWAYS wear durable personal protective work clothing and safety gear during tire service activity. Refer to page three for Operator Protective Equipment.

ALWAYS remove all wheel weights and the valve core to deflate the tire before servicing.

ALWAYS keep all working surfaces clean and free of debris.

ALWAYS be aware of what each person is doing - and what they will do before attempting any two-person operation.

ALWAYS cover the electric motor and electrical components before cleaning the tire changer. Be sure water or cleaner does not enter the motor or electrical components or come in contact with electrical connections.

ALWAYS disconnect the electric power and air supply before attempting any maintenance.

DEMOUNTING & MOUNTING

ALWAYS clean and inspect the wheel prior to any service.

NEVER stand on the sliding carriage, frame or work table while demounting or mounting a tire.

ALWAYS keep hands, feet, and other objects away from moving parts while the machine is turned on.

ALWAYS place the narrow bead seat to the outside when clamping. Failure to demount the tire from the narrow bead seat side may cause damage to the tire beads.

ALWAYS apply an approved rubber lubricant to rim flanges and both tire beads before demounting or mounting and seating the beads.

NEVER mount a tire on a damaged or rusty wheel as tire or wheel failure may result during inflation. Explosion from failure may result in severe injury or death of the operator and bystanders.

INFLATION

ALWAYS be sure the bead opposight the tool is in the drop center before rotating the tire when demounting or mounting to avoid damage to the tire beads.

ALWAYS follow all applicable Local, State, and Federal Codes, Rules, and Regulations; such as the Federal OSHA Standard Number 1910.177.

ALWAYS use an approved inflation chamber or inflation cage equipped with a self-gripping chuck and remote inflation gauge and valve.

ALWAYS inflate the tire to manufacturer's recommended cold operating pressure.

DO NOT OVER INFLATE! Tire or wheel failure during and after inflation may result in an explosion capable of causing severe injury or death.

NEVER reinflate a tire that has been run under inflated or flat without first demounting the tire and checking for wheel and tire damage.

ALWAYS inspect the tire interior for loose or broken cords, cuts, penetrating objects, and other damage. Discard tires that cannot be properly repaired.

NEVER rework, weld, heat or braze wheels.

NEVER strike the tire or wheel with a hammer.

ALWAYS be sure the tire diameter exactly matches the wheel diameter.




DANGER!

TIRE FAILURE UNDER PRESSURE CAN BE HAZARDOUS. WHEN POSSIBLE, ALWAYS PLACE WHEELS INSIDE AN APPROVED INFLATION CHAMBER OR CAGE BEFORE INFLATING. USE AN APPROVED REMOTE INFLATION VALVE, HOSE, AND GAUGE. ALWAYS WEAR SAFETY GOGGLES FOR EYE PROTECTION. DO NOT STAND BESIDE THE WHEEL OR CAGE DURING INFLATION. KEEP HANDS AND OTHER PARTS OF THE BODY OUT OF THE CAGE DURING INFLATION. OBSERVE THE TIRE PRESSURE FREQUENTLY. DO NOT EXCEED THE MANUFACTURER'S RECOMMENDED MAXIMUM INFLATION PRESSURE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE THE TIRE AND RIM TO SEPARATE WITH TREMENDOUS FORCE, RESULTING IN SERIOUS PERSONAL INJURY OR DEATH.

SECTION 4 - DESCRIPTION OF PARTS

FIG 4.1

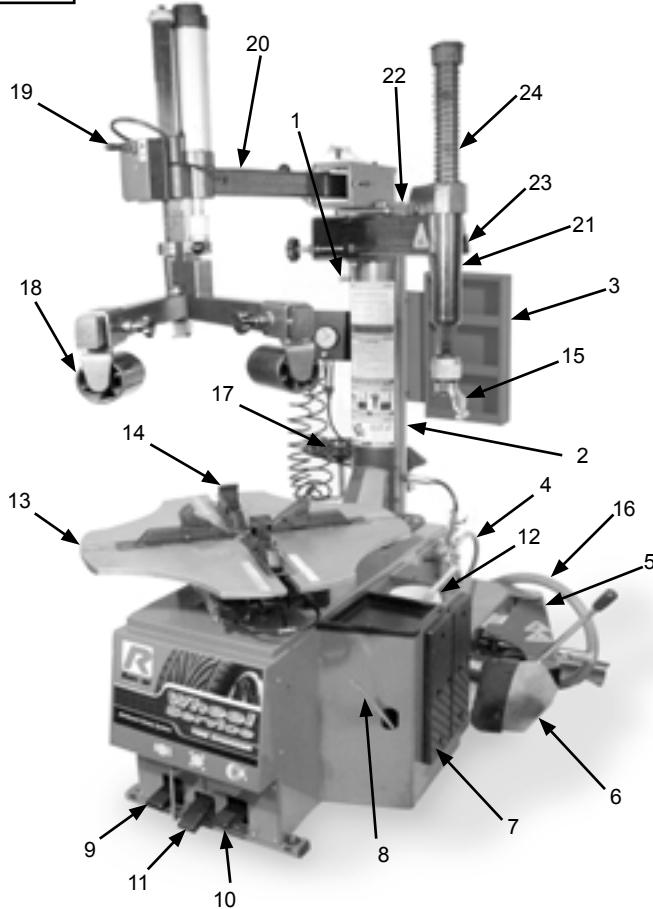

1. Tank Pressure Relief Valve
2. Tower (Air Tank)
3. Tool Tray
4. Air Drier / Oiler (See Fig 4.2)
5. Bead Breaker Arm
6. Bead Breaker Blade
7. Bead Breaker Pad
8. Bead Lifting Tool
9. Turntable Foot Pedal (See Fig 4.3)
10. Bead Breaker Foot Pedal (See Fig 4.3)
11. Wheel Clamp Foot Pedal (See Fig 4.3)
12. Soap Bucket
13. Turntable
14. Wheel Clamps
15. Mount /Demount Head
16. Turbo Blast Hose Assembly
17. Helper Disc
18. Assist Tower Roller
19. Assist Tower Controls
20. Assist Tower
21. Vertical Shaft
22. Vertical Arm Assembly
23. Vertical Shaft Lock Handle
24. Vertical Shaft Spring
25. Voltage Selector Switch
(Located on Rear of Cabinet. (See Fig 4.4))
26. Inflation Pedal
(Located on Left of Cabinet. See Fig 4.5)

FIG 4.2

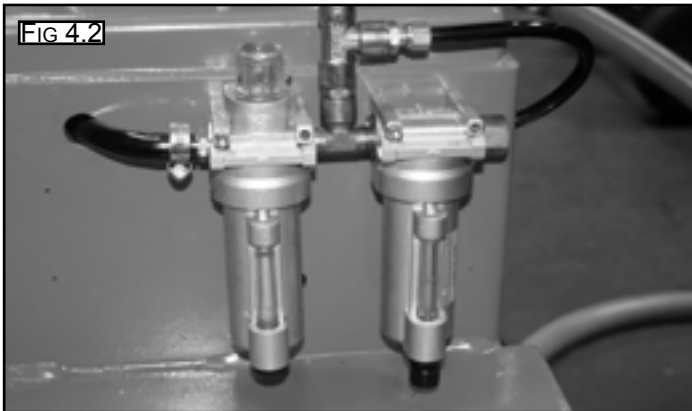



FIG 4.3



FIG 4.4



FIG 4.5

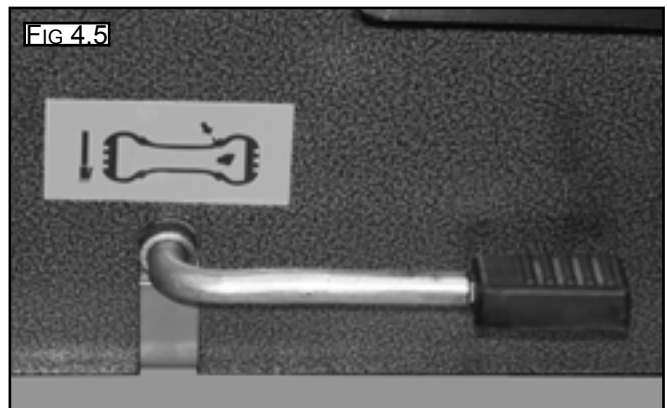

SECTION 5 - FEATURES / SPECIFICATIONS

FEATURES / SPECIFICATIONS	MODEL - R30XLT
Type of Drive System	Air / Electric
Motor	Dual Voltage 110/220V 50/60HZ 1 Ph.
Air Requirement	110-175 PSI (7.6 - 12.1 BAR)
Wheel Clamping Method	4 Rim-Guard Clamps - Internal / External
Table Clamping System	Dual Pneumatic Cylinders
Bead Breaking System	Pneumatic Blade / Dual Settings
Turntable Speed 360-Degree Rotation	8 Seconds
Tool Holder	Manual Lock
Adjustable Turntable Clamps	Standard
Inflation System	Standard
Inflation Pressure Regulator/Limiter	Standard
Water Filter	Standard
Oiler / Lubricator	Standard
Air Regulators (Inflation Pedal, Assist Tower)	Standard
Bead Lifting Tool	Standard
Large Soap / Lubricator Bucket	Standard
Brush	Standard
Tower Design	Rigid Fixed
Powerful "Turbo -Blast" Bead Seating System	Standard
Tire Inflation	Standard
Tool Tray / Bin Storage	Standard
Internal Wheel Clamping Capacity *	12" – 32" (305 mm – 813 mm)
External Wheel Clamping Capacity *	11" – 31½" (280 mm – 800 mm)
Turntable Tire Width Capacity (Mounting)	3½" – 16" (89 mm – 406 mm)
Bead Breaker Tire Width Capacity (Demounting)	2½" – 16" (63.5 mm – 406 mm)
Maximum Tire Diameter	49" (1245 mm)
Shipping Weight	R30XLT:620 lbs. (282 Kg)
Specifications are subject to change without notice.	
* NOTE: Internal and External Wheel clamping dimensions do not translate directly to rim or tire sizes as wheel clamping points may vary by manufacturer.	

TOOLS REQUIRED FOR ASSEMBLY and INSTALLATION

<ol style="list-style-type: none"> 1. Pallet jack or forklift for moving crate 2. Forklift or Shop crane 3. Utility knife 4. Crow bar or pry bar. 5. Tin Snips or Sheet Metal Snips 6. Hammer 7. Open end metric wrenches and/or socket set 8. Phillips and Slot head screw drivers 9. Metric Allen Key set 	<p>Parts required but not supplied:</p> <ol style="list-style-type: none"> 1. Teflon tape 2. Air fitting to match shop Air Supply line 3. Tool Oil 4. Anchor Bolts and Shims (if Anchoring)
--	---

SECTION 6 LIFTING/ UN-CRATING

1. The R30XLT is shipped on a pallet. Approximate shipping dimensions are shown below. (See Fig 6.1)



Fig 6.1



CAUTION!

HANDLING OF THE MACHINE MUST BE PERFORMED ONLY WITH AN APPROPRIATE LIFTING DEVICE SUCH AS A FORKLIFT OR PALLET JACK. ONLY PERSONNEL WHO ARE EXPERIENCED AND QUALIFIED ON MATERIAL HANDLING PROCEDURES SHOULD HANDLE ANY TRANSPORTATION OR MOVING OF MACHINE.

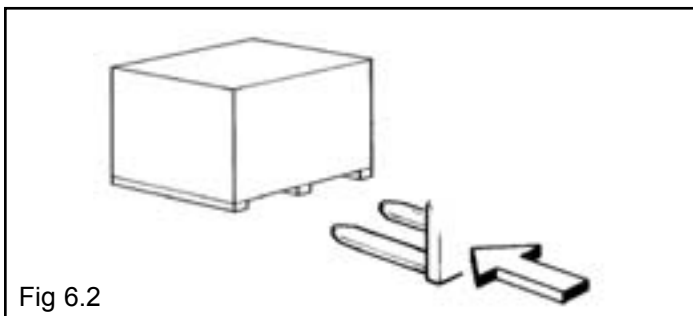


Fig 6.2



CAUTION!

BE CAREFUL WHEN CUTTING STEEL BANDING MATERIAL AS ITEMS MAY BECOME LOOSE AND FALL CAUSING PERSONAL HARM OR INJURY. ALWAYS WEAR GLOVES WHEN UN-CRATING THE MACHINE TO PREVENT SCRATCHES, ABRASIONS, OR CUTS DUE TO THE CONTACT WITH PACKING MATERIALS. EYE PROTECTION IS ESSENTIAL DURING UN-CRATING SERVICE ACTIVITY. SAFETY GLASSES WITH SIDE SHIELDS, GOGGLES, OR FACE SHIELDS ARE ACCEPTABLE.

Remember to report any shipping damage to the carrier and make a notation on the delivery receipt.

UN-CRATING INSTRUCTIONS

1. Using a crow bar or pry bar, locate the metal tabs and pry open the tabs and or staples. (See Fig 6.3)



Fig 6.3

2. The entire wooden frame/box can be lifted off after prying the tabs at the base of the crate. (See Fig 6.4)



Fig 6.4

4. Carefully cut the Tire Changer free of the plastic wrapping securing it to the Tire Changer base. Do not unwrap the Assist Tower and Tower Tank at this time. The wrapping helps keep the Swing arms from moving during lifting and assembly. (See Fig 6.5 - 6.6)



Fig 6.5



Fig 6.6



CAUTION!

HANDLING OF THE MACHINE MUST BE PERFORMED ONLY WITH AN APPROPRIATE LIFTING DEVICE SUCH AS A FORKLIFT OR SHOP CRANE. ONLY PERSONNEL WHO ARE EXPERIENCED AND QUALIFIED ON MATERIAL HANDLING PROCEDURES SHOULD HANDLE ANY TRANSPORTATION OR MOVING OF MACHINE.

CAUTION!

SECURE THE AIR TANK / ASSIST TOWER WITH SHOP CRANE/FORKLIFT OR PERSONNEL PRIOR TO CUTTING METAL STRAPPING AS AIR TANK / ASSIST TOWER MAY HAVE SHIFTED DURING SHIPPING. BE CAREFUL AS BANDING MAY SNAP OR FLY WHEN TENSION IS RELEASED.

5. Either cut or unscrew the metal strapping holding the Air Tank / Assist Tower to the pallet. Using a fork lift or shop crane, remove tank from the pallet and set aside. Secure tank so it can not fall. (See Fig 6.7)

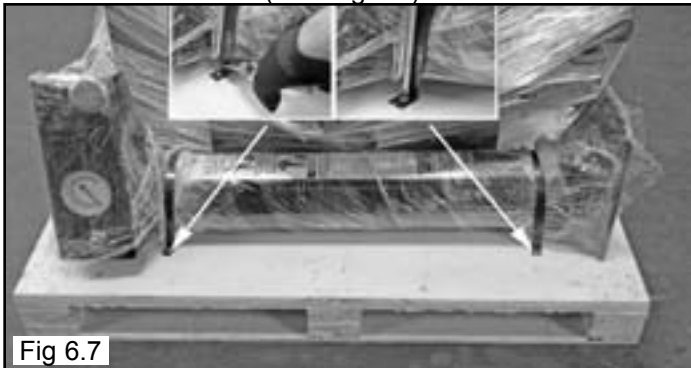


Fig 6.7

6. Remove the two front and rear bolts and nuts fastening the tire changer to the pallet. (See Fig 6.8 - 6.9)



Fig 6.8



Fig 6.9



7. Using a shop crane or fork lift with lifting straps, remove the Tire Changer from the wooden pallet. Use only properly rated lifting straps under the Tire Changer base. (See Fig 6.10)

8. Locate the tire changer using the guidelines in Section 7, page 11.

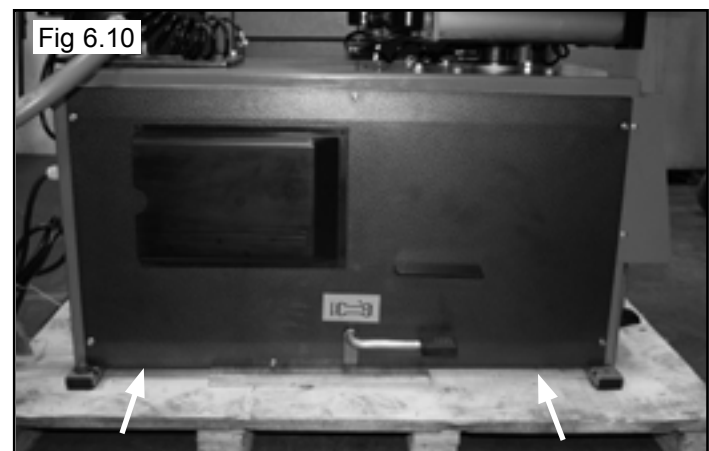


Fig 6.10

SECTION 7

INSTALLATION LOCATION



Disconnect tag and lock out power source before attempting to install, service, relocate or perform any maintenance.


Do not lift or move unit without appropriately rated equipment. Be sure the unit is securely attached to any lifting device used.

Proper unit installation is necessary for safe use and efficient operation. Proper installation also helps protect the unit from damage and makes service easier. Always keep this manual with unit.


Never use the wood shipping skid for mounting the unit.

Select a location using Figures 7.1 and 7.2. The area should provide the operator with enough space to use the equipment in a safe manner. The area selected should be well lit, easy to clean and should be away from oil, grease, brake lathe chips, etc. Avoid areas where bystanders and customers may be present.

Machine size is approximately:
36" W x 48" D X 80"H
R30XLT

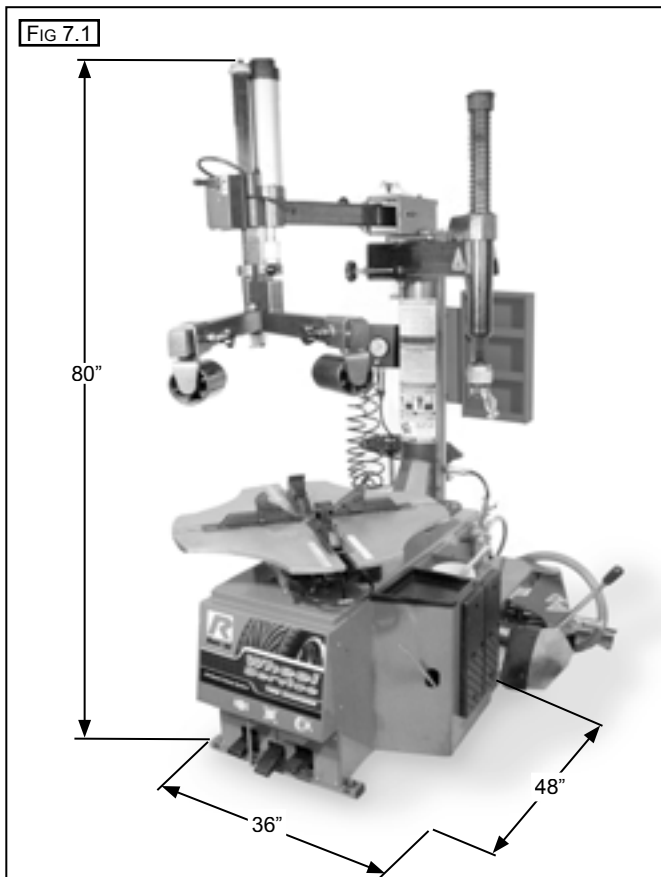


These measurements are the tire changer's working range. Persons other than specially trained and authorized operators are expressly forbidden to enter this area. Choose a safe location that is in compliance with current work place safety regulations.

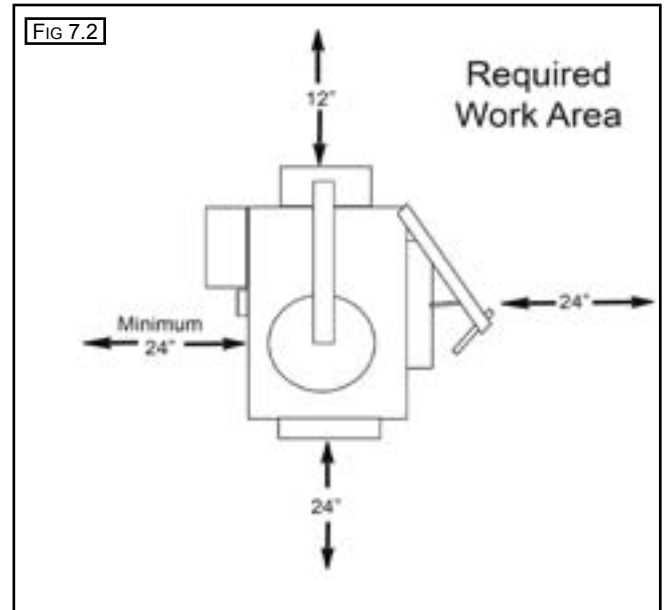


Failure to properly install the tire changer can lead to improper and unsafe operation.

SECTION 8 AIR TANK/ TOWER ASSEMBLY

1. Using a fork lift or other lifting device, lower the Tank/ Tower onto the base and align the holes.
2. Attach the Tank / Tower assembly to the Base using the four bolts on the Tower Base Plate. (See Fig 8.1)

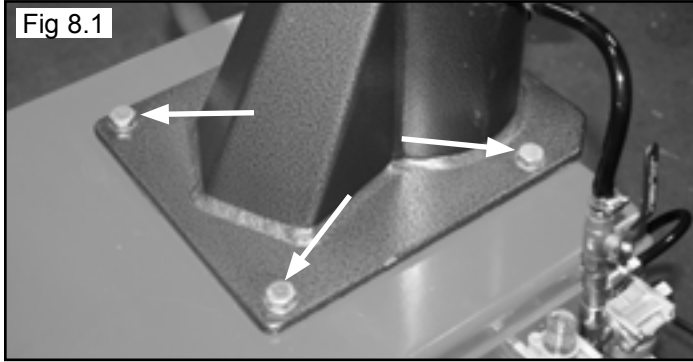

3. Connect the other end of the Air Inflation Hose to the Push to Connect Fitting underneath the Air Inflation Box Assembly. (See Fig 8.2)


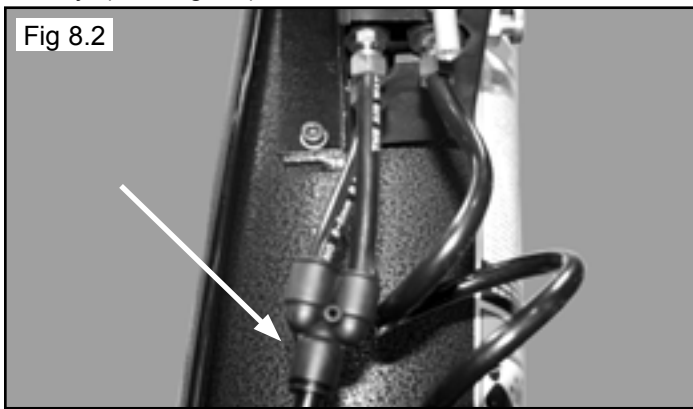


SWING ARM / VERTICAL SHAFT / MOUNT-DEMOUNT HEAD ASSEMBLY

1. Raise the Vertical Shaft / Mount-demount Head assembly to the highest position and lock it in place by pushing the Locking Handle up.
2. Check the Socket Head Cap Screw on the Cap, tighten if necessary. (See Fig 8.5)
3. Check the operation of the Vertical Shaft and the Locking Handle. (See Section 15, Page 29 for Lock adjustment details)
4. Check that the Chuck is tightened. (See Fig 8.6)

ANCHORING

It is not essential to anchor the machine to the floor, however, the floor must be smooth and level. When anchoring to a concrete floor use the mounting holes that are provided in the frame. Make sure the machine is solid and level and supported evenly on all anchor points. Solid shims may be used if necessary. (See Fig 8.7)

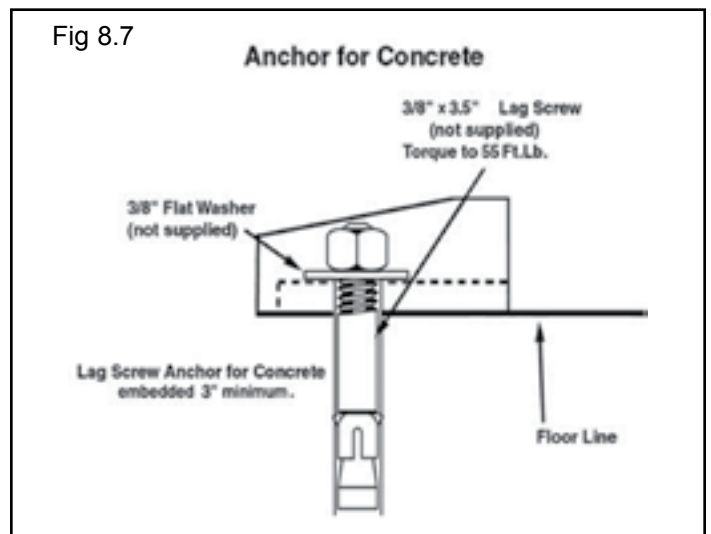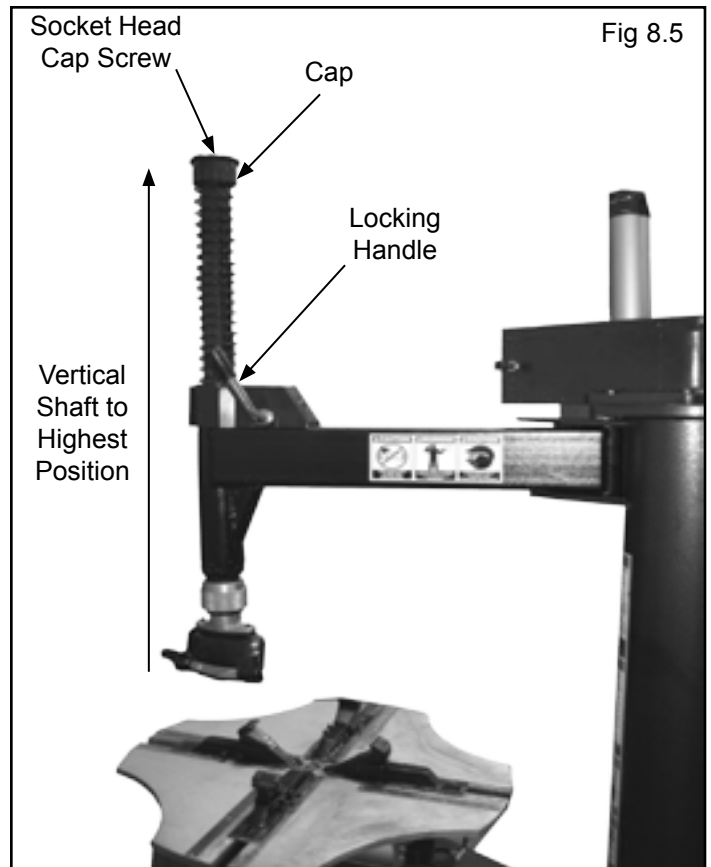


SECTION 9 AIR SOURCE

This model requires a 14 to 15 CFM air source at 175 PSI maximum pressure. The safe operating pressure range for this model is between 110 PSI and 175 PSI at the machine. A 1/4" ID hose (or pipe) for connection to the machine is satisfactory. Sufficient air pressure assures good performance.

1. Connect the Air Supply to the Air Drier / Oiler. A proper fitting (not supplied) to match the supply line of the air supply connection is required. Use Teflon tape (not supplied) on the NPT thread of the fitting.

This connection is located on the right side of the rear of the machine. (See Fig 9.1)

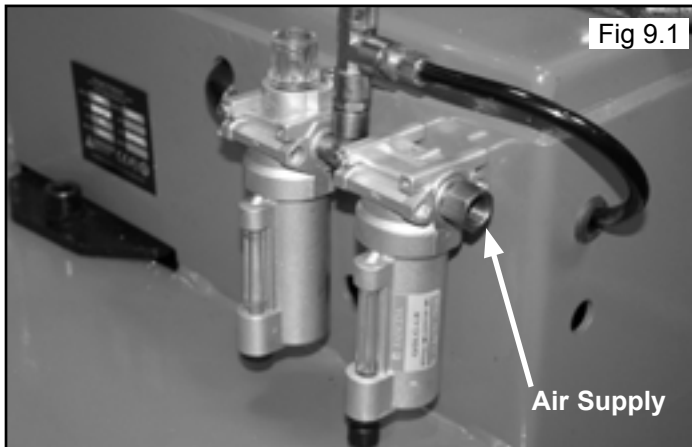

OILER ADJUSTMENT


1. Check Oil Level on Oil Level Gauge. (See Fig. 9.2)



WARNING!

FAILURE TO PROPERLY MAINTAIN PROPER OIL LEVEL AND ADJUST THE OIL FLOW MAY VOID THE WARRANTY AND DAMAGE THE BEAD BREAKER CYLINDER AND OTHER AIR COMPONENTS.

If Oil level is low refer to Section 15, Page 30 for filling instructions.

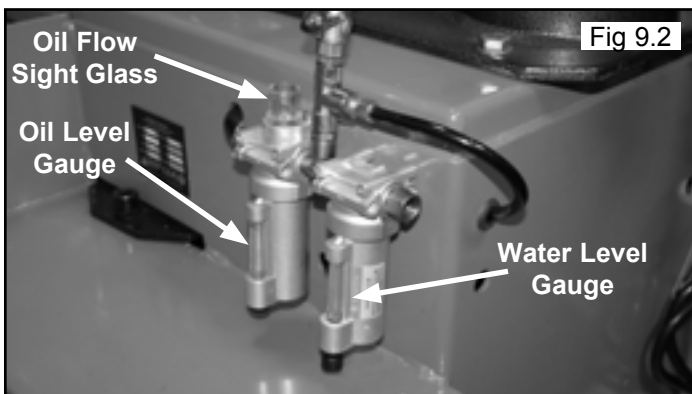


2. With the air source connected, depress the Bead Breaker Pedal to operate the Bead Breaker.

3. Observe the sight glass and adjust the oil flow of the oiler by turning the Oiler Adjustment Screw by using a small screwdriver so that 2-3 drops of oil drip through the sight glass for each operation of the Bead Breaker Pedal. (See Fig 9.3)

NOTE:

THIS ADJUSTMENT WILL REQUIRE AT LEAST TWO OPERATORS TO PERFORM.

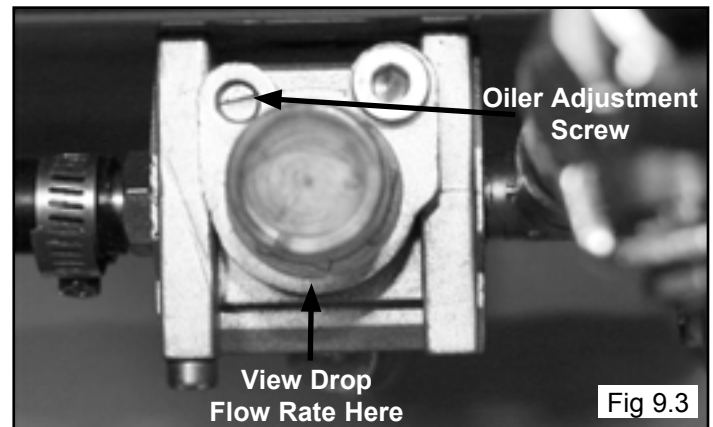


NOTE:

MORE DETAILED MAINTENANCE PROCEDURES ARE DESCRIBED IN SECTION 15 ON PAGE 30

SECTION 10 ELECTRICAL SOURCE

1. This unit requires power from a 15 amp electrical circuit. The unit is supplied standard with a 110 Volt power cord and plug. (See Fig 10.1)

2. Refer to the serial tag of the machine for specific electrical requirements. Have a licensed electrical technician perform any necessary changes to the power source and power cord before plugging in the unit. The electrical source must have a solid connection between ground and building ground.

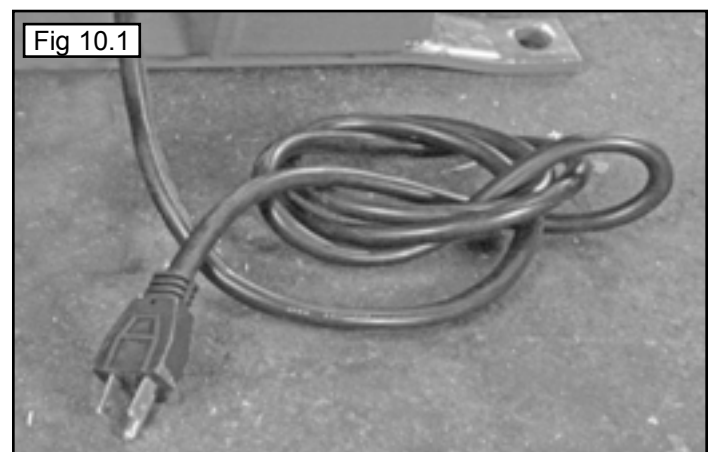

WARNING

WARNING!

THIS EQUIPMENT MUST BE GROUNDED WHILE IN USE TO PROTECT THE OPERATOR FROM ELECTRIC SHOCK. NEVER CONNECT THE GREEN POWER CORD WIRE TO A LIVE TERMINAL. THIS IS FOR GROUND ONLY.

DANGER

DANGER!

THE MOTOR ON THIS MACHINE CONTAINS HIGH VOLTAGE. DISCONNECT POWER AT THE RECEPTACLE BEFORE PERFORMING ANY ELECTRICAL REPAIRS. SECURE PLUG SO THAT IT CANNOT BE ACCIDENTALLY PLUGGED IN DURING SERVICE.

WARNING

WARNING!

RISK OF EXPLOSION! THIS EQUIPMENT HAS INTERNAL ARCING OR SPARKING PARTS WHICH SHOULD NOT BE EXPOSED TO FLAMMABLE VAPORS. THIS MACHINE SHOULD NOT BE LOCATED IN A RECESSED AREA OR BELOW FLOOR LEVEL.

WIRING INSTRUCTIONS

DANGER

1. Check the voltage, phase and proper amperage requirements for the motor shown on the motor plate. Wiring should be performed by a certified electrician only.
2. Overheating, short circuits and fire damage will result from inadequate wiring. Wiring must be installed in accordance with National Electric Code and local codes and standards covering electrical apparatus and wiring.
3. Be certain that adequate wire sizes are used, and that:
 - ◆ Service is of adequate amp rating.
 - ◆ The supply line has the same electrical characteristics (voltage, cycles and phase) as the motor.
 - ◆ The line wire is the proper size and that no other equipment is operated from the same line.

CAUTION

CAUTION!


CHECK THE VOLTAGE, PHASE, AND PROPER AMPERAGE REQUIREMENTS FOR THE MOTOR SHOWN ON THE MOTOR PLATE. WIRING SHOULD BE PERFORMED BY A CERTIFIED ELECTRICIAN ONLY.

IMPORTANT NOTE:

YOUR MACHINE HAS A DUAL VOLTAGE MOTOR AND CAN BE RUN ON EITHER 110 OR 220 VOLTS. STANDARD WIRING IS 110 VOLTS.

See below before connecting 220 volts to your machine or serious damage to the motor/electronics will result. Have a licensed electrical technician perform any necessary changes to the power source and power cord before plugging in the unit. The electrical source must have a solid connection between ground and building ground.

Confirm voltage selector switch is positioned correctly before connecting power to your machine or serious damage to the motor/electronics will result. (See Fig 10.2)

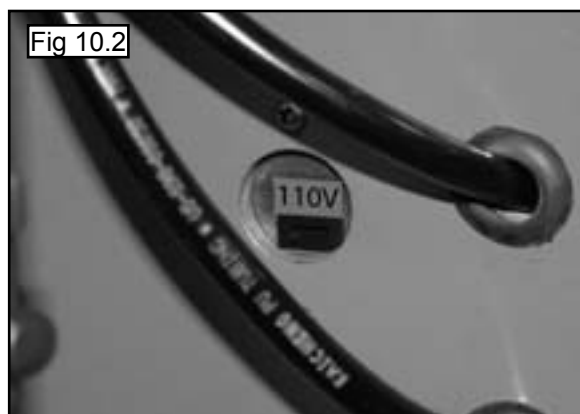

Refer to Page 7 Item # 25 for location of Voltage Selector Switch

SECTION 11 DEMOUNTING

NOTE:

THIS UNIT MUST BE PROPERLY OPERATED AND MAINTAINED TO HELP AVOID ACCIDENTS THAT COULD DAMAGE THE UNIT AND INJURE THE OPERATOR OR BYSTANDERS. THIS SECTION OF THE EQUIPMENT MANUAL REVIEWS BASIC OPERATION AND USE OF CONTROLS. THESE INSTRUCTIONS SHOULD BE REVIEWED BY ALL OPERATORS BEFORE THEY ARE ALLOWED TO WORK WITH THE MACHINE. KEEP THESE INSTRUCTIONS NEAR THE MACHINE FOR EASY REFERENCE.

CAUTION

CAUTION!

THIS MACHINE MAY OPERATE DIFFERENTLY FROM OTHER TIRE CHANGER MACHINES. PRACTICE WITH A REGULAR STEEL WHEEL AND TIRE COMBINATION TO FAMILIARIZE YOURSELF WITH THE MACHINE'S OPERATION AND FUNCTION.

- ◆ Remember to remove all weights from both sides of the wheel. Weights left on the back side of the wheel may cause the wheel to be clamped un-level. This may result in the combination mount/demount head contacting the rim causing scratches. On alloy wheels, always rotate the wheel one turn after setting the head to ensure proper wheel chucking.
- ◆ Always review nicks and scratches with owners of expensive wheel and tire combinations prior to servicing.
- ◆ Review the performance wheel section of this manual prior to servicing performance tire/wheel combinations.

BEAD LOOSENING

1. Deflate tire completely by removing the valve core from the valve stem. (See Fig 11.1)



2. The clamps on the table top may extend beyond the table top itself. To avoid damaging the clamps and/or wheel, move the clamps to their full inward position before positioning a tire for bead loosening.

3. Always loosen the bead on the narrow side of the wheels drop center first. (See Fig. 11.5 on page 16 for description of the drop center)

4. Pull the bead breaker blade away from the machine and roll the wheel into position.

5. The Bead Breaker Arm Adjustment Rod limits or extends the movement of the arm. Set the Rod as appropriate to the tire and wheel being serviced. (See Fig. 11.2)




6. Position the bead breaker blade against the tire next to, but not on, the rim or the sidewall of the tire. Press the breaker pedal to actuate the blade and loosen the bead. It may be necessary to loosen the bead in multiple locations around the tire. Use extra care in positioning the bead breaker blade on larger wheels/tires, and on alloy wheels. (See Fig. 11.3)



7. Turn wheel around and repeat procedure on the other side of the wheel. This should be the long side of the drop center. It will be easier to clamp the wheel to the table top if the lower bead is loosened last. (See Fig. 11.4)



8. Determine the mounting side of the wheel. The mounting side is the narrow side of the drop center. (See Fig. 11.5 on page 16)

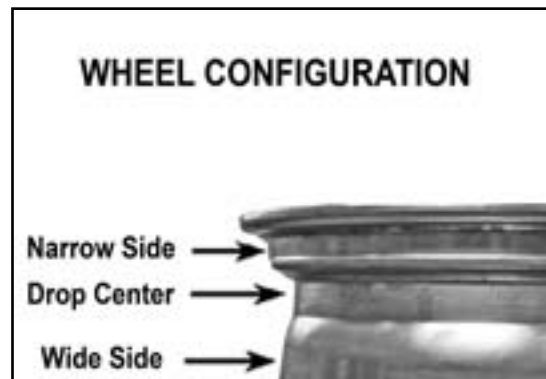




The following instructions help identify how to properly mount wheels on the tire changer turntable. Failure to follow these instructions may lead to tire and/or wheel damage, equipment damage or failure, serious personal injury or death to operator or bystanders or damage to property.

IMPORTANT WHEEL MOUNTING INSTRUCTIONS

1. It is important to understand that tires and/or tire beads do not stretch. It is nearly impossible to mount or dismount the top bead of the tire unless the top bead of the tire is positioned deep into the drop center area of the wheel.
2. Find the position of the drop center on the wheel. Clearly identify the Drop Center, Narrow Side and Wide Side flanges.
3. The tire must ALWAYS be demounted or mounted with the wheel positioned on the turntable with the Narrow Side facing upward and the deepest part of the Drop Center facing upward.

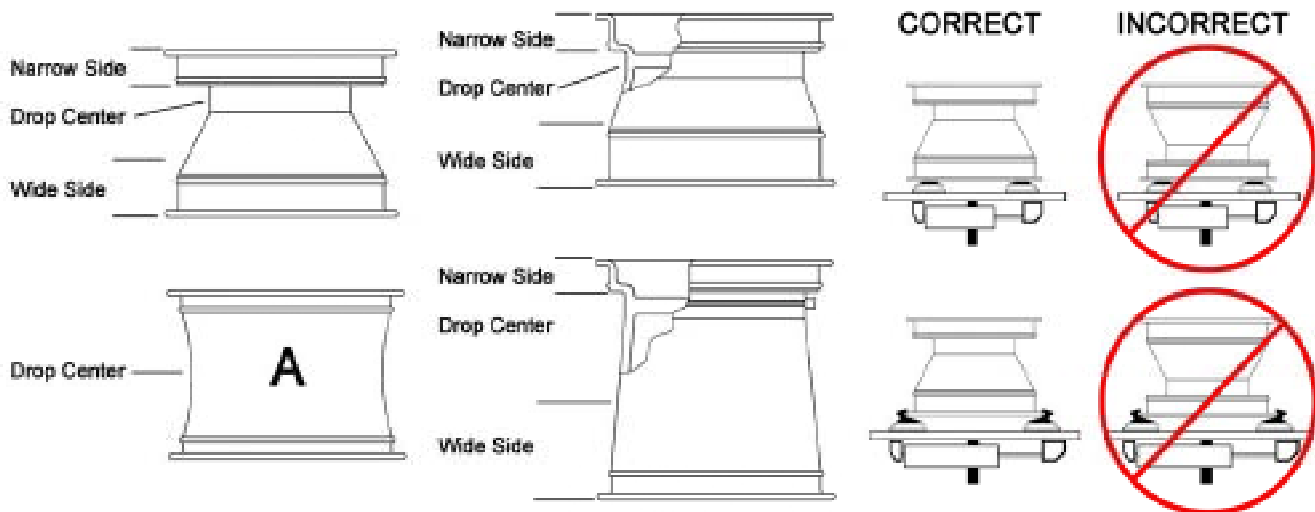

WARNING! - The wheel illustrated above in diagram A has little or no prominent drop center. These are not DOT approved wheel configurations. The tire or wheel - or both - can be damaged during mounting procedures causing the tire to explode under pressure, resulting in serious injury or death. If you attempt to mount/demount this type of wheel, use extreme caution.


IMPORTANT NOTE – Most aftermarket and many OEM performance wheels are REVERSE DROP-CENTER configurations. These wheels MUST be mounted on the turntable with the hub or wheel-face POSITIONED DOWNWARD on the turntable and the Narrow Side and deep part of the Drop Center facing upward.



Fig 11.5

WHEEL CLAMP ADJUSTMENTS

1. Place the Wheel Protector pads on the Wheel Clamps if desired when clamping from the outside. (See Fig 11.6)

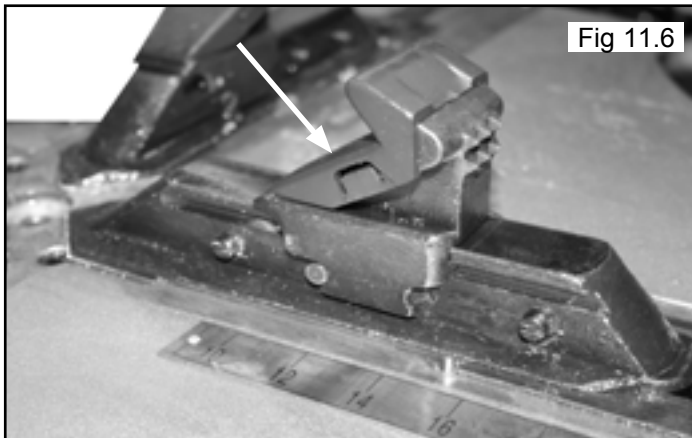


2. Place tire/wheel assembly on Table Top with mounting side up. (See Fig 11.7)



NOTE:

CLAMP STEEL WHEELS FROM THE INSIDE (CLAMPS PUSH OUTWARD AGAINST WHEEL). CLAMP MAG AND CUSTOM WHEELS FROM THE OUTSIDE (CLAMPS PUSH INWARD AGAINST THE OUTSIDE RIM EDGE). REFER TO SECTION 12: CUSTOM AND SPECIAL WHEELS.

3. Use the Wheel Clamp Foot Pedal to move the Clamps inward (pedal down) or outward (pedal up). (See Fig 11.8 - 11.9)

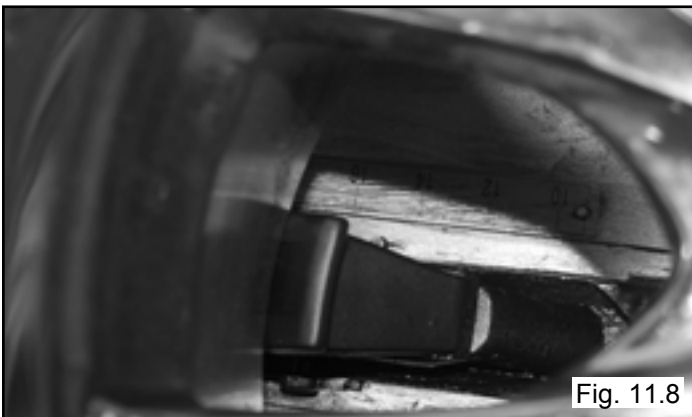

DEMOUNTING

1. Apply tire manufacturer's approved rubber lubricant liberally to entire circumference of *both upper and lower beads* after loosening bead and placing on table top. (See Fig 11.10)



WARNING

WARNING!

THE RIM AND BEAD MUST BE LIBERALLY LUBRICATED. FAILURE TO USE AN ADEQUATE LUBRICANT CAN LEAD TO THE BEAD BINDING ON THE RIM AND DAMAGE TO THE MOTOR AND OR VOID THE WARRANTY.

2. After the wheel is secured to the Turntable, swing the Vertical Arm into position. Use the large adjusting Knob to position the Mount/Demount Head directly over the edge of the rim. (See Fig 11.11)



3. Push the Vertical Shaft down and position the Mount/Demount Head into contact with the rim edge and adjust as necessary. (See Fig. 11.12 - 11.13)

Fig 11.12


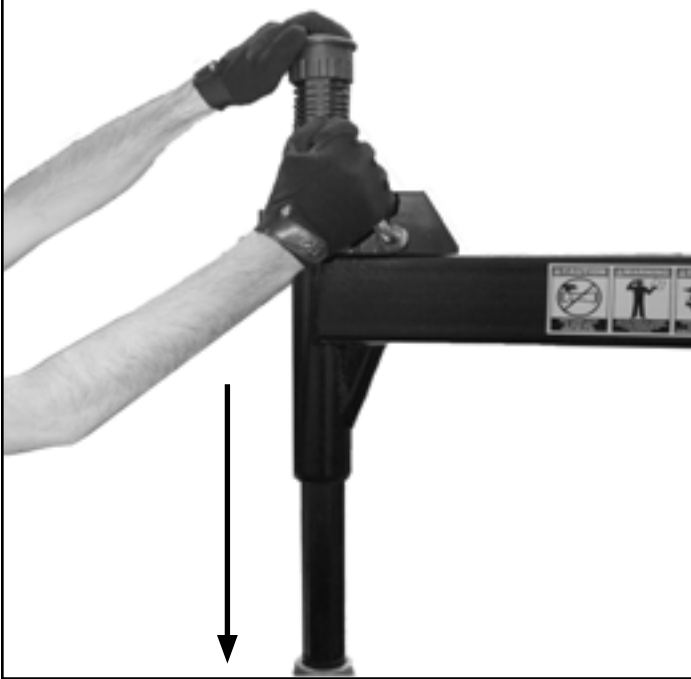


Fig 11.13



4. Pull the locking handle towards you to lock the Vertical Shaft into position. As the slide is locked, the Mount/Demount Head will move upward approximately 1/8 inch and backward 1/8 inch from the rim edge. The Mount/Demount head roller should not be in contact with the rim edge. (See Fig 11.14)

Fig 11.14

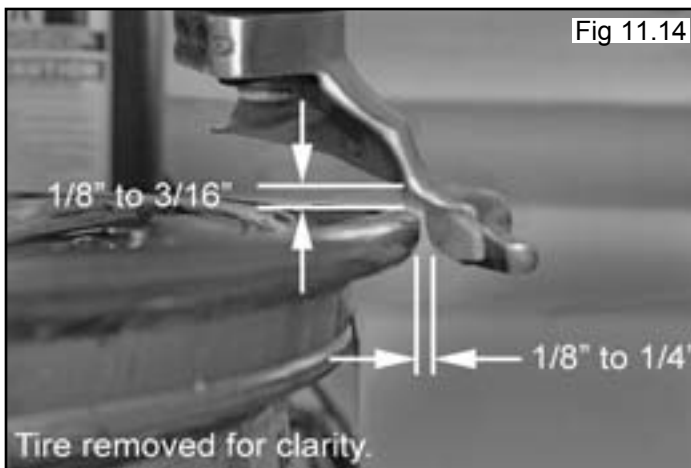

NOTE:

THIS CLEARANCE WILL BE MAINTAINED AS LONG AS THE VERTICAL SHAFT REMAINS LOCKED. THE OPERATOR MAY SWING THE ARM OUT OF THE WAY AND BACK INTO PLACE AGAIN WITHOUT NEEDING TO REPOSITION THE HEAD WHEN CHANGING A LIKE SET OF WHEELS. THE TOOL CLEARANCE MAY CHANGE WITH MACHINE USE AND SHOULD BE INSPECTED OFTEN. FAILURE TO MAINTAIN PROPER CLEARANCE MAY RESULT IN DAMAGE TO THE WHEEL RIM OR TIRE. SEE PAGE 29 FOR ADJUSTMENT PROCEDURE.

5. Insert the smooth curved end of the Bead Lifting Tool over the “duckbill” side of the Mount/Demount Head and below the top bead of the tire. (Fig 11.15)



Fig 11.15



DANGER

DANGER!

THE BEAD LIFTING TOOL AND DEMOUNT HEAD MAY ENCOUNTER RESISTANCE OR COME UNDER LOAD AT TIMES DURING THE MOUNT AND DEMOUNT PROCEDURES. KEEP ONE HAND FIRMLY ON THE TOOL TO AVOID POSSIBLE TOOL KICK BACK. USE THE REVERSING FEATURE (LIFT TABLE TOP PEDAL UPWARDS) TO BACK OUT OF JAM UPS.

NOTE:

FOR LOW PROFILE TIRES, PERFORM STEP 9 TO GET THE UPPER BEAD INTO THE DROP CENTER OF THE WHEEL.

6. Push the Bead Lifting Tool down and away from the wheel to lower the bead into the Drop Center while lifting up on the Table Top Pedal to rotate the turnable counter clockwise. (See Fig 11.16)



Fig 11.16

7. Insert the smooth curved end of Bead Lifting Tool over the right end knob of the mount/demount head and below the top bead of the tire. (See Fig 11.17)



8. Push the Bead Lifting Tool down toward the wheel to lift the tire bead up and over the “duckbill” of the demount head. Hold the Bead Lifting Tool in this position. (See Fig 11.18)



9. Depress the Table Top Foot Pedal to rotate the wheel clockwise. (See Fig 11.19)



10. Hold the Bead Lifting Tool down until the upper bead is solidly above the rim. Continue rotating the wheel clockwise until the upper bead is completely demounted. (See Fig 11.20 - 11.22)



11. Liberally lubricate the lower bead again, if there was any difficulty lubricating the lower bead earlier. (See Fig 11.23)



12. Lift and hold the tire so it is positioned with the lower bead in the drop-center portion of the wheel. If the tire is large/wide or has become stuck on the lower part of the rim, the Bead Lifting Tool may be used to unstick and raise the tire. (See Fig 11.24)



13. Insert the smooth curved end of the Bead Lifting Tool over the “duckbill” end of Mount / Demount Head and below the lower bead of the tire. Push the Bead Lifting Tool down toward the wheel to lift the tire bead up and over the left “duckbill” side knob portion of the Mount/ Demount Head. Hold the Bead Lifting Tool in this position. (See Fig 11.25 - 11.26)



14. Depress the Table Top Pedal to rotate the wheel.

15. The Mount / Demount Head will guide the bead up and over the edge of the wheel. Continue rotation until the lower bead is demounted. (See Fig 11.27 -11.29)



SECTION 12 CUSTOM AND SPECIAL WHEELS




DANGER!

IF A CUSTOM WHEEL IS DAMAGED IN DISMOUNTING, STOP, AND AVOID DAMAGING THE OTHER WHEELS. CONTINUE ONLY WHEN THE CAUSE IS IDENTIFIED AND CORRECTED.

ALLOY WHEELS-

Some manufacturers offer wheels with little or no drop center. These are not DOT approved. The tire or wheel - or both - can be damaged and the tire could explode under pressure, resulting in serious injury or death. If you attempt to mount/demount this type of wheel, use extreme caution. (See Fig 12.1)

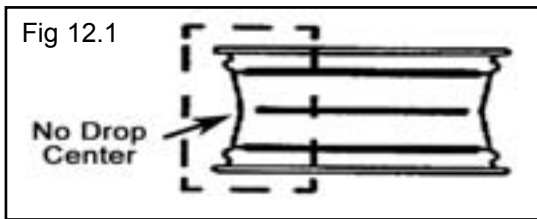


EUROPEAN PERFORMANCE WHEELS (ASYMMETRICAL HUMP)-

Some European wheels have very large humps except near the valve hole. On these wheels, the beads should be loosened at the valve hole on both the upper and lower sides first.

WHEELS WITH TIRE PRESSURE WARNING SENSORS-

Performance wheels on some vehicles have a pressure sensor strapped to the rim opposit the valve hole or mounted on the valve stem. On these wheels, the beads should be loosened at the valve hole on both upper and lower sides first. (See Fig 12.2)

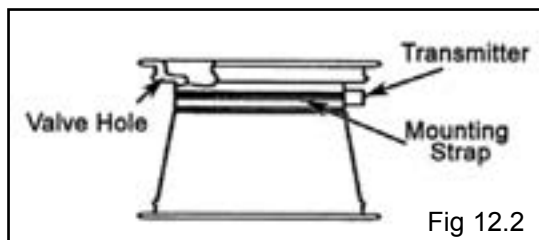

DEMOUNTING TUBE TYPE TIRES

1. After both tire beads are loosened, lubricate the beads and rim liberally.
2. Position the demount head and bead lifting tool as described earlier paying careful attention not to pinch the tube. Depress the table top pedal and rotate only a short distance at a time. This allows you to stop the process should you suspect the tube is getting pinched.
3. After upper bead is demounted, remove tube and demount lower bead.

REMEMBER:

TABLE TOP ROTATION CAN BE STOPPED AT ANY TIME BY REMOVING YOUR FOOT FROM THE ROTATION PEDAL. NORMAL TABLE TOP ROTATION FOR DEMOUNTING IS CLOCKWISE. DEPRESS THE TABLE TOP PEDAL TO ROTATE THIS DIRECTION. TO ROTATE THE TABLE TOP COUNTERCLOCKWISE, LIFT THE PEDAL UP WITH YOUR TOE.

SECTION 13 MOUNTING

1. Inspect the wheel closely for damage. Clean the wheel and remove any light corrosion or rubber residue. Do not attempt to service heavily corroded wheels. (See Fig 13.1)

Fig 13.1



2. Inspect tire for damage, paying close attention to the beads. Verify size match between tire and wheel. (See Fig 13.2)

Fig 13.2



3. Lubricate both tire beads liberally with tire manufacturer's approved lubricant. (See Fig 13.3)

Fig 13.3



WARNING

WARNING!

THE RIM AND BEAD MUST BE LIBERALLY LUBRICATED. FAILURE TO USE AN ADEQUATE LUBRICANT CAN LEAD TO THE BEAD BINDING ON THE RIM AND LEAD TO DAMAGE TO THE MOTOR AND OR VOID THE WARRANTY.

! WARNING

WARNING!

THE INFORMATION IN THIS SECTION MUST BE READ AND FOLLOWED CAREFULLY TO PREVENT ACCIDENTS AND INJURIES DURING MOUNTING

! WARNING

WARNING!

CHECK TIRE AND WHEEL CAREFULLY BEFORE MOUNTING. MAKE SURE THE TIRE BEAD DIAMETER AND WHEEL DIAMETER MATCH EXACTLY. CONSULT THE RUBBER MANUFACTURER'S ASSOCIATION FOR APPROVED RIM WIDTHS FOR TIRE SIZES.

! DANGER

DANGER!

ATTEMPTS TO FORCE A BEAD SEAT ON MISMATCHED TIRES AND WHEELS CAN CAUSE THE TIRE TO VIOLENTLY EXPLODE, LEADING TO SERIOUS PERSONAL INJURY OR DEATH TO OPERATOR AND/OR BYSTANDERS.

! WARNING

WARNING!

NEVER MOUNT A TIRE AND WHEEL HANDED TO YOU BY ANYONE WITHOUT CHECKING BOTH TIRE AND WHEEL FOR DAMAGE AND COMPATIBILITY. BE EXTRA CAUTIOUS OF PERSONS WITHOUT KNOWLEDGE OF TIRE SERVICE. KEEP BYSTANDERS OUT OF SERVICE AREA.

! WARNING

WARNING!

NEVER MOUNT A DAMAGED TIRE. NEVER MOUNT A TIRE ON A RUSTY OR DAMAGED WHEEL. DAMAGED TIRES AND/OR WHEELS MAY EXPLODE.

! WARNING

WARNING!

IF YOU DAMAGE THE TIRE BEAD DURING MOUNTING, STOP! REMOVE THE TIRE AND MARK IT AS DAMAGED. DO NOT MOUNT A DAMAGED TIRE.

4. Place tire over wheel and move Vertical Arm and Mount/ Demount Head into position as described earlier. Position tire so that the lower bead is above the left side of the Mount/ Demount Head and below the right front knob. (See Fig 13.4)

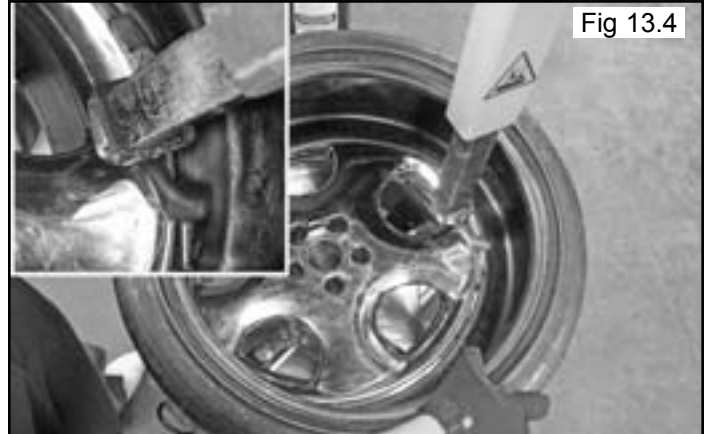


Fig 13.4

5. Manually push the tire down into the drop center of the wheel directly across from the Mount/ Demount Head to reduce the tensional force on the bead. Depress the Table Top Pedal and rotate the wheel to begin mounting the lower bead. Rotate the Table Top until the lower bead is fully mounted. (See Fig 13.5 - 13.6)



Fig 13.5



Fig 13.6

6. For the top bead, rotate the Table Top until the valve stem is directly across from the Mount/ Demount Head. Lift the upper bead above the right side of the Mount/ Demount Head and below the knob. (See Fig 13.7)



8. Swing the Assist Tower into position and lower the Roller Arms so that they press down on the tire to hold the upper bead in the drop center. The Upper Arm must be locked and positioned next to the Mount-demount Head. (See Fig 13.8)



9. Depress the Table Top Pedal. As the Turntable rotates the Lower Arm will follow the tire around. Keep rotating the table until the bead is mounted. (See Fig 13.9 - 13.11)




WARNING!
DO NOT FORCE THE TIRE ONTO THE RIM.
BEAD DAMAGE COULD RESULT MAKING THE TIRE
UNSAFE AND/OR CREATING THE RISK OF INJURY.

MOUNTING TUBE TYPE TIRES

1. Lubricate the beads and rim liberally.
2. Position the Mount/ Demount Head as described earlier. Mount the bottom bead first.
3. Apply rubber lubricant to the tube. Insert the tube into the tire paying careful attention not to pinch the tube. Round out the tube with a small amount of air.
4. Lower the Arm Rollers onto the tire as described earlier.
5. Depress the Table Top Pedal and rotate only a short distance at a time. This allows you to stop the process should you suspect the tube is getting pinched.
6. Mount the top bead.

SECTION 14 INFLATION

The Inflation Pedal located at the center of the left side of the machine serves two different functions. It checks air pressure in the tire and controls the flow of air through the Inflation Hose. (See Fig 14.1)

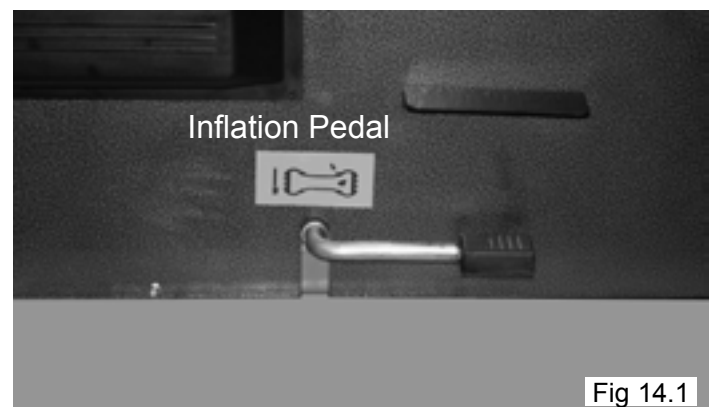

⚠ DANGER

DANGER!

CHECK INFLATION GAUGE FOR PROPER OPERATION. ACCURATE PRESSURE READINGS ARE IMPORTANT TO SAFE TIRE INFLATION. REFER TO THE OPERATING MAINTENANCE SECTION OF THIS MANUAL FOR INSTRUCTIONS. IF THE RIM HAS BEEN CLAMPED FROM THE OUTSIDE FOR TIRE MOUNTING, RELEASE THE CLAMPS ONCE BEAD SEAL IS OBTAINED, LIFT THE TIRE, AND MOVE THE CLAMPS TO THE CENTER OF THE TABLE TOP.

⚠ DANGER

DANGER!

THE CLIP-ON AIR CHUCK ON THE END OF THE INFLATION HOSE AND ALL INFLATION RELATED COMPONENTS SHOULD BE CHECKED WEEKLY FOR PROPER OPERATION. DO NOT USE THIS MACHINE FOR TIRE INFLATION IF ANY PARTS ARE DAMAGED OR APPEAR NOT IN PROPER WORKING ORDER.

⚠ WARNING

WARNING!

TIRE FAILURE UNDER PRESSURE IS HAZARDOUS. THIS TIRE CHANGER IS NOT INTENDED TO BE A SAFETY DEVICE TO CONTAIN EXPLODING TIRES, TUBES, WHEELS, OR BEAD SEALING EQUIPMENT. INSPECT TIRE AND WHEEL CAREFULLY FOR MATCH, WEAR, OR DEFECTS BEFORE MOUNTING. ALWAYS USE APPROVED TIRE BEAD LUBRICANT DURING MOUNTING AND INFLATION. THE INFLATION PEDAL, LOCATED AT THE CENTER OF THE LEFT SIDE OF THE MACHINE, CONTROLS THE FLOW OF AIR THROUGH THE INFLATION HOSE.

Position One - Tire Pressure - With the Inflation Hose attached to the tire valve and the pedal in this position, the air gauge will register the air pressure in the tire. Whenever your foot is removed from the pedal, it will return to this position. (See Fig 14.2)

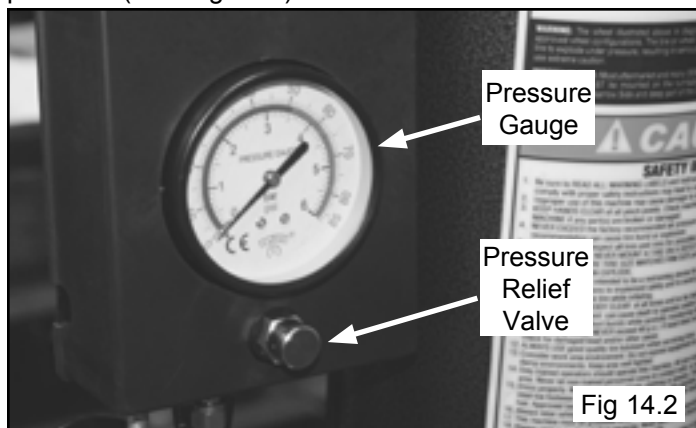


Fig 14.2

Position Two - Tire Inflation - With the Inflation Hose attached to the tire valve and the pedal in this position, line pressure is allowed to flow through the valve and into the tire for inflation. Tire pressure is not indicated on the gauge in this position. (See Fig 14.3)

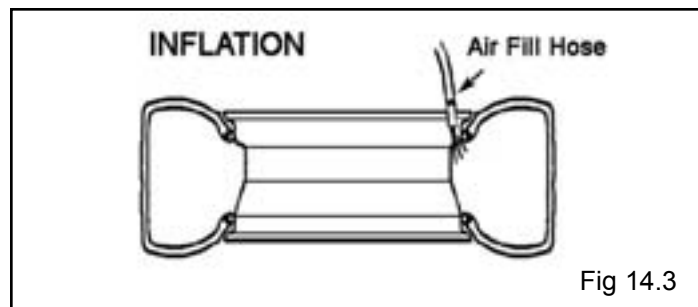


Fig 14.3

TIRE INFLATION

⚠ WARNING

WARNING!

CHECK THE FUNCTION OF THE PRESSURE LIMITER REGULARLY. MAINTAIN IT ACCORDING TO THE INSTRUCTIONS PROVIDED IN THIS MANUAL FOR SAFE AND PROPER OPERATION. DO NOT TAMPER WITH OR ATTEMPT TO ADJUST THE PRESSURE LIMITER. TIRES REQUIRING INFLATION BEYOND 60 PSI SHOULD ONLY BE INFLATED IN A SAFETY CAGE.

The unit is equipped with a Pressure Limiter/Regulator to assist the operator with proper tire inflation. The Pressure Limiter will keep most car and light truck tires from inflating beyond 60 PSI (smaller tires may reach higher pressures). It is the operators responsibility to follow all instructions and to control inflation pressure as specified in these instructions. (See Fig 14.4)

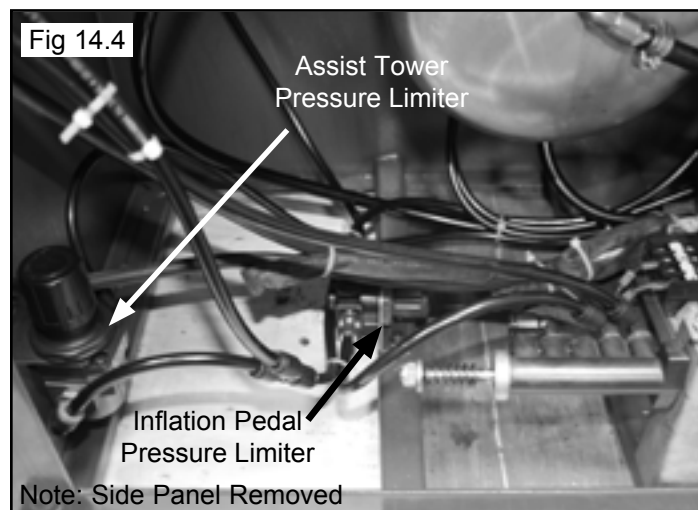


Fig 14.4

Note: Side Panel Removed

STAGES OF INFLATION

Tire inflation is performed in four steps: Restraint, Bead Seal, and Inflation. Read the explanation of each step and understand them thoroughly before proceeding and refer to them as necessary to verify that you are proceeding properly and safely.



DANGER

DANGER!

THIS MACHINE IS NOT INTENDED TO BE A RESTRAINING DEVICE FOR EXPLODING TIRES, TUBES, OR RIMS. KEEP HANDS AND BODY CLEAR AT ALL TIMES AND AS FAR BACK AS POSSIBLE DURING INFLATION.

DO NOT LEAN OVER THE TIRE WHILE INFLATING. AN EXPLODING TIRE, RIM OR OTHER WHEEL COMPONENT CAN CAUSE DEATH TO OPERATOR AND/OR BYSTANDER. REMAIN CLEAR AT ALL TIMES.



Fig 14.5

STAGE ONE / WHEEL RESTRAINT

As an added safety precaution, a wheel restraint device has been added to protect operators during tire inflation.

WARNING!

THIS DEVICE IS A RESTRAINT DEVICE ONLY. IT WILL NOT PROTECT OPERATORS IN THE EVENT OF CATASTROPHIC TIRE/WHEEL RUPTURE OR FAILURE. ALWAYS USE EXTREME CAUTION DURING THE INFLATION PROCEDURE. AS AN ADDED SAFETY PRECAUTION, SAFETY CAGES THAT CONFORM TO OSHA STANDARD 1910.177 ARE RECOMMENDED.



CAUTION

CAUTION!

HOLD THE RESTRAINT TOOL FIRMLY IN PLACE WHEN INSTALLING AND/OR REMOVING FROM THE LEFT HELPER ASSEMBLY. THE UNIT CAN DROP SUDDENLY TO THE FLOOR. BE SURE TO KEEP FEET CLEAR AT ALL TIMES.



Fig 14.6



WARNING

WARNING!

OPERATOR SHOULD KEEP HANDS, ARMS, AND ENTIRE BODY AWAY FROM THE TIRE DURING THE FOLLOWING BEAD SEAL AND INFLATION PROCEDURES. DO NOT STAND OVER TIRE, AS PERSONAL INJURY COULD RESULT FROM INFLATING TIRE. AVOID DISTRACTION DURING INFLATION. CHECK TIRE PRESSURE FREQUENTLY TO AVOID OVER INFLATION. EXCESSIVE PRESSURE CAN CAUSE TIRES TO EXPLODE, CAUSING SERIOUS INJURY OR DEATH TO OPERATOR OR BYSTANDER.

1. Swing the Assist Tower to the side of the wheel and insert the restraint device as shown. (See Fig 14.5)

2. Make sure the restraint tool is centered in the center hub of the wheel then press down on the left hand control valve. (See Fig 14.6)

STAGE TWO / BEAD SEALING

1. Position valve stem in front of operator and connect the inflation hose. (See Fig 14.7)

2. Hold tire up against upper edge of the wheel. Be sure tires top bead is over the bottom of the valve stem. (See Fig 14.8)

3. Briefly depress Inflation Pedal and hold, less than 1 full second, to begin air flow through tire valve. (See Fig 14.9)

Fig 14.7



Fig 14.8



Fig 14.9



NOTE:

TO SEAL LOW PROFILE OR DIFFICULT BEADS, USE THE TURBO BLAST TO SEAL THE BEAD



CAUTION

CAUTION!


NEVER POINT NOZZLE TOWARDS YOURSELF OR OTHER PERSONS. INSPECT NOZZLE, TIRE AND WHEEL FOR DEBRIS. NOZZLE MUST BE POINTED TOWARD TIRE BEAD AREA. HOLD NOZZLE SECURELY WITH BOTH HANDS AT ALL TIMES. NEVER OPERATE THE NOZZLE WITHOUT A TIRE AND WHEEL POSITIONED ON THE TABLE. DIRT AND DEBRIS COULD BE BLOWN INTO THE AIR WITH ENOUGH FORCE TO INJURE THE OPERATOR OR BYSTANDERS.

! WARNING



NOZZLE MUST ALWAYS BE POINTED TOWARD TIRE BEAD AREA. HOLD NOZZLE SECURELY WITH BOTH HANDS AT ALL TIMES.

1. To Open the Slide Valve, PUSH the Slide Valve Forward.
2. To Close PULL the Slide Valve closed. (See Fig 14.10)

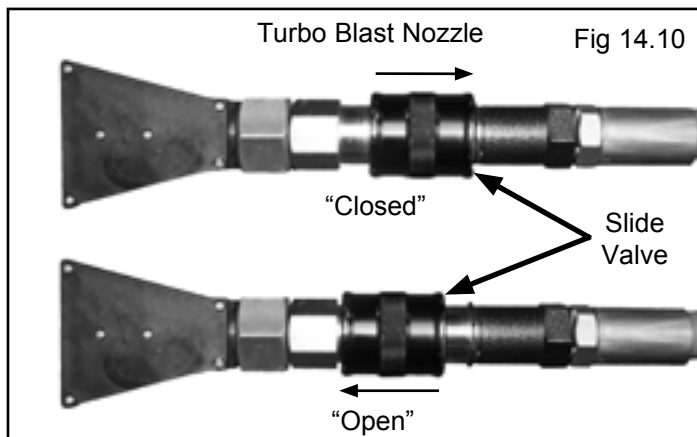

3. Position the Turbo-Blast Nozzle to direct air towards the Rim Center just under the Rim lip. (See Fig. 14.11)



4. Depress inflation pedal and open the Turbo-Blast Valve. The blast of air from the Turbo Blast Nozzle will expand tire and seal the beads.

5. Release the inflation pedal. Verify that both beads are completely sealed to the wheel. Repeat these steps if beads have not sealed. It may be necessary to wait a few seconds for the air storage tank to recover before attempting again. If tire and wheel are properly lubricated and operator cannot achieve bead seal after a few attempts, the valve core should be removed from the valve stem to allow more air flow into the tire to assist with bead seal. After bead seal is achieved, remove the chuck and reinstall the valve core.

STAGE THREE / BEAD SEATING

Bead seating usually occurs on the long tapered side of the wheel first and the shorter side last. Bead seating will usually require at least 7 PSI in the tire. 40 PSI is the maximum safe pressure at this stage regardless of tire operating pressure. Most European import cars and many aftermarket alloy wheels are very tight and can be difficult to bead seat. Also note that asymmetrical hump and run-flat tires are extremely difficult to bead seat. Follow tire manufacturer's recommended procedure for bead seating.



WARNING!

OPERATOR SHOULD KEEP HANDS, ARMS, AND ENTIRE BODY AWAY FROM THE TIRE DURING THE FOLLOWING BEAD SEAT AND INFLATION PROCEDURES. DO NOT STAND OVER TIRE, AS PERSONAL INJURY COULD RESULT FROM INFLATING TIRE. AVOID DISTRACTION DURING INFLATION. CHECK TIRE PRESSURE FREQUENTLY TO AVOID OVER INFLATION. EXCESSIVE PRESSURE CAN CAUSE TIRES TO EXPLODE, CAUSING SERIOUS INJURY OR DEATH TO OPERATOR OR BYSTANDER.



1. Once tire pressure is indicated on the pressure gauge continue to inject air into the tire in short intervals. Check the pressure frequently. Stand back during bead seat. Keep hands, arms, and entire body away from tire during this procedure. Tire beads should move outward and "pop" into their bead seat position as pressure inside the tire increases. If this does not happen, a problem exists. Investigate carefully. (See Fig 14.12)



Fig 14.12

NOTE:

THE INFLATION HOSE MUST BE ATTACHED TO THE VALVE STEM DURING THIS PROCEDURE.

2. Release air pressure from the tire by pressing the manual Pressure Relief Valve. (See Fig 14.13)

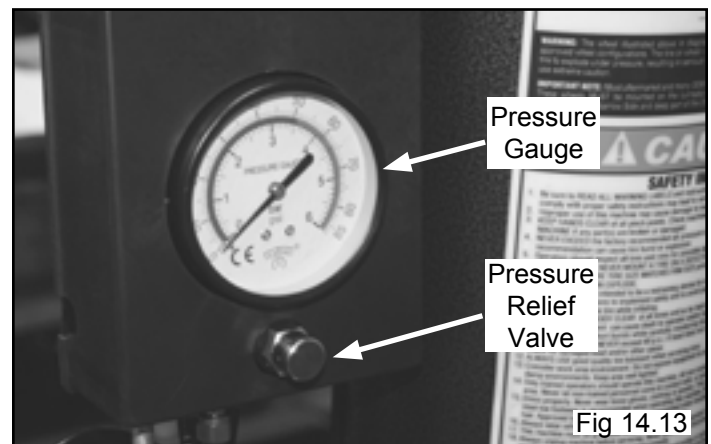


Fig 14.13



WARNING

WARNING!

CHECK TIRE PRESSURE FREQUENTLY. NEVER EXCEED 40 PSI WHILE SEATING BEADS. ONCE SEATED, NEVER EXCEED TIRE MANUFACTURER'S RECOMMENDED AIR PRESSURE. TIRES CAN EXPLODE, ESPECIALLY IF THEY ARE INFLATED BEYOND THEIR LIMITS. AT ALL PRESSURE LEVELS WHEN INFLATING THROUGH THE VALVE STEM, KEEP HANDS, ARMS, AND ENTIRE BODY AWAY FROM INFLATING TIRE. AN EXPLODING TIRE, WHEEL, OR BEAD SEALING EQUIPMENT MAY PROPEL UPWARD AND OUTWARD WITH SUFFICIENT FORCE TO CAUSE SERIOUS INJURY OR DEATH TO OPERATOR OR BYSTANDER.



WARNING

WARNING!

NEVER ATTEMPT TO MOUNT AND INFLATE MISMATCHED TIRES AND WHEELS. MISMATCHED TIRE AND WHEEL COMBINATIONS CAN EXPLODE, CAUSING PERSONAL INJURY OR DEATH TO OPERATOR AND BYSTANDERS. FOR SAFETY, DO NOT ATTEMPT TO MOUNT AND INFLATE MISMATCHED TIRES AND WHEELS.



DANGER

WARNING!

IF OPERATOR IS UNABLE TO OBTAIN BEAD SEAT, SOMETHING IS WRONG. DEFLATE TIRE COMPLETELY, INSPECT TIRE AND WHEEL, CORRECT ANY PROBLEMS FOUND, RE-LUBRICATE BOTH TIRE BEADS, AND REATTEMPT BEAD SEAL AND SEAT PROCEDURES. FOLLOW ALL SAFETY INSTRUCTIONS IN THIS MANUAL AND ON MACHINE.

STAGE FOUR / TIRE INFLATION

1. Make sure both beads are seated. When both beads are seated, the tire is ready for inflation.
2. Replace the valve core if it was removed.
3. Depress the Inflation Pedal to inflate the tire. DO NOT STAND OVER TIRE DURING INFLATION.
4. Do not inflate the tire above the manufacturer's recommended pressure as stamped on the tire sidewall. The typical inflation pressure for automobile tires is between 24 and 45 PSI. Light truck inflation pressure typically covers a wider range. Release air pressure from the tire by pressing the manual Pressure Relief Valve.



WARNING

WARNING!

THE INFLATION PRESSURE LIMITER IS PRESET AT THE FACTORY AND SHOULD NEED NO ADJUSTMENT. ADJUST ONLY IF PRESSURE EXCEEDS 60 PSI. OPERATING A TIRE CHANGER WITH A DEFECTIVE, IMPROPERLY ADJUSTED, OR BYPASSED PRESSURE LIMITER COULD RESULT IN A TIRE EXPLOSION WITH SEVERE INJURY OR DEATH TO OPERATOR OR BYSTANDERS. ALWAYS BE SURE THAT THE PRESSURE LIMITER IS OPERATING PROPERLY ON THE MACHINE AT ALL TIMES. PRESSURE LIMITER IS SET AT 60 PSI. ANY REQUIRED INFLATION ABOVE 60 PSI SHOULD BE PERFORMED IN AN INFLATION CHAMBER/SAFETY CAGE.

Safety Cage



NOTE:

WHEN INFLATING TIRES THAT REQUIRE MORE THAN 60 PSI, ALWAYS USE A SAFETY CAGE AND AIR HOSE WITH A CLIP-ON AIR CHUCK AND IN-LINE VALVE. THE HOSE MUST HAVE ENOUGH LENGTH BETWEEN THE CHUCK AND THE OPERATION/IN-LINE VALVE TO ALLOW THE OPERATOR TO STAND OUTSIDE THE TRAJECTORY.

◆ BEFORE MAKING ANY INSPECTION, ADJUSTMENT, OR REPAIR, DISCONNECT THE POWER SOURCE AND OR AIR SUPPLY AND BLOCK OUT ALL MOVING PARTS TO PREVENT INJURY.

◆ KEEP THE MACHINE AND THE IMMEDIATE WORK AREA CLEAN. DO NOT USE COMPRESSED AIR TO REMOVE DIRT AND DEBRIS FROM THE MACHINE. FOREIGN MATERIAL MAY BE PROPELLED INTO THE AIR AND INTO OPERATOR OR BYSTANDER CAUSING PERSONAL INJURY.

◆ WEAR PROTECTIVE CLOTHING AND USE EYE PROTECTION WHEN MAKING ANY ADJUSTMENTS OR REPAIRS TO THE MACHINE.

SECTION 15 MAINTENANCE INSTRUCTIONS


Read and follow all the maintenance instructions provided in this manual to keep the machine in good operating condition. Regular inspections and proper maintenance are essential to preventing accidents and injuries. These instructions will help you service the unit. Instructions are for a person with some mechanical ability and training. No attempt has been made to describe all basic steps such as how to loosen or tighten fasteners. Basic procedures such as cycling systems and checking operation of the equipment are not fully described since they have been described previously in this manual. Do not attempt to perform work beyond your ability or at which you have no experience. If you need assistance, call an authorized service center or contact the factory.

DAILY

- ◆ Check the tire pressure gauge function, and check the accuracy monthly. Use a pressurized tire and a high quality pressure gauge. If the gauge is defective, replace it immediately.
- ◆ Make sure all fasteners are securely tightened and all guards and covers are in place.
- ◆ Check for worn, damaged or missing parts including grips and protective covers. Replace them before allowing the unit to be used.
- ◆ Inspect the unit and check to be certain that all systems are operating normally. Follow detailed inspection and testing procedures as specified for various components at regular intervals.

MONTHLY

- ◆ Pivot Points, assist tower vertical shaft should be cleaned with a vaporizing solvent and then lubricated with chassis grease. (See Fig 15.1)

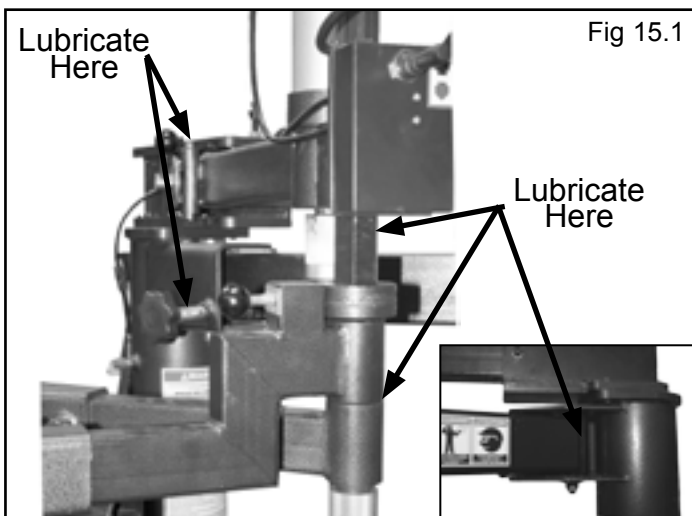


- ◆ Check adjustment of the mount/demount head.

- ◆ Check the condition and adjustment of the turntable drive belt.
- ◆ Check function of the Inflation Pedal pressure limiter/ regulator. **The pressure regulator should never be adjusted to exceed 60 PSI.**
- ◆ Clean the table top, clamps, steel mount/demount head, and other working surfaces with a vaporizing solvent.
- ◆ Replace any damaged or missing safety decals, available from the factory.


Mount/Demount Tool Head Adjustment

To adjust tool head clearance, adjust locking nut up or down until lift clearance is 1/8" to 3/16". Recheck clearance. (See Fig 15.2)

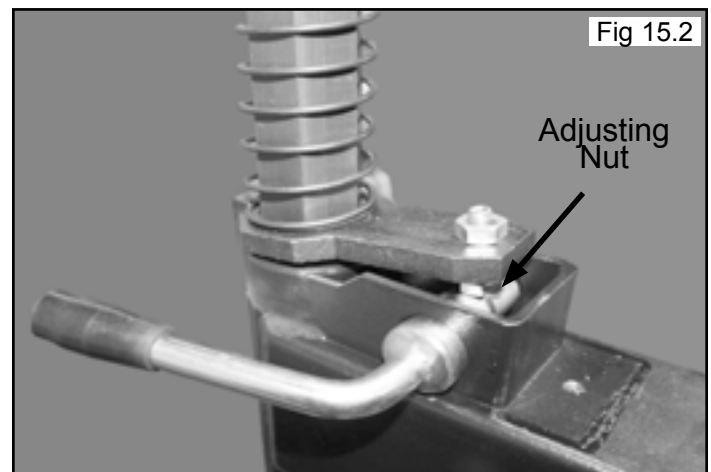

Mount/Demount Head Cleaning

Clean dirt and debris from the mount/demount tool roller with small screw driver or pick. Lubricate with light penetrating oil. (See Fig. 15.3)

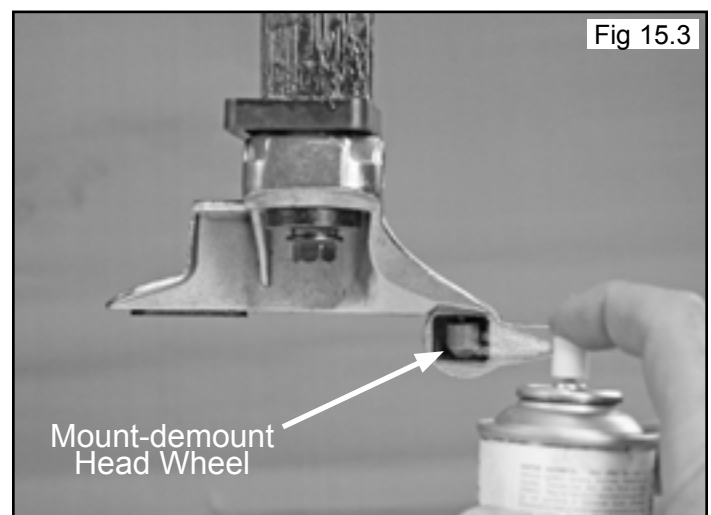

AIR DRIER /OILER MAINTENANCE




WARNING!


FAILURE TO MAINTAIN THE WATER SEPARATOR/AIR OIL IN PROPER CONDITION MAY VOID WARRANTY. DRAIN WATER OUT OF THE SYSTEM REGULARLY AND KEEP THE OIL RESERVOIR FILLED.

Check oil and water levels regularly, and perform these maintenance items weekly:

1. Observe the sight glass on the water separator/filter unit. (See Fig 15.4)

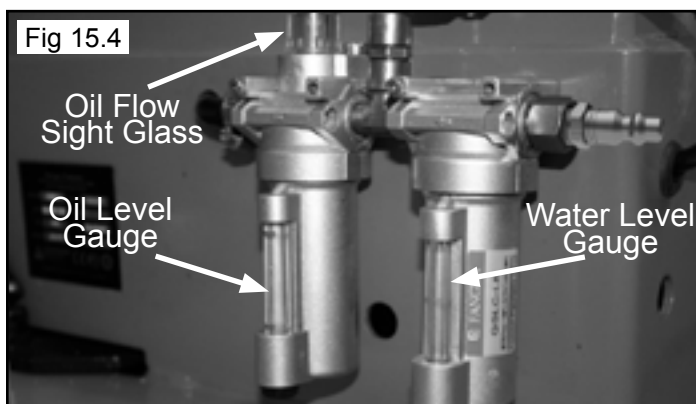


2. If water is observed, drain by pushing up on the drain plug at the bottom of the reservoir. (See Fig 15.5)

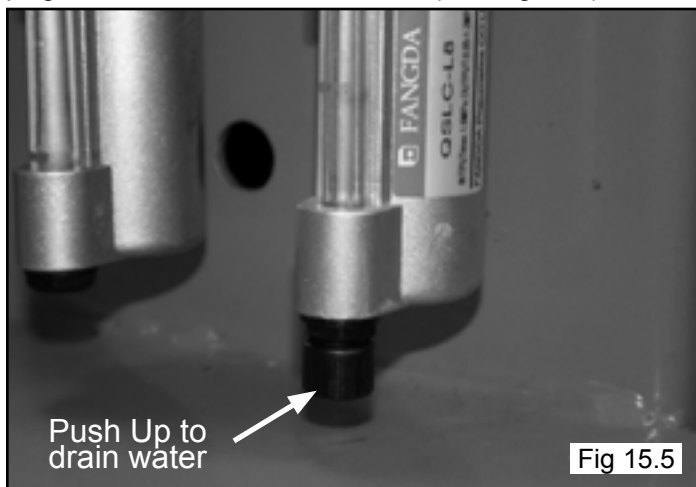

3. Disconnect air supply to machine. (See Fig 15.6)

4. Add oil to the lubricator if the fluid level is below the middle of the gauge. Unscrew the Fill Cap, add SAE 10W non-detergent oil or an air tool oil if necessary. (See Fig 15.7)

5. Reconnect the air supply when service/adjustments are complete.

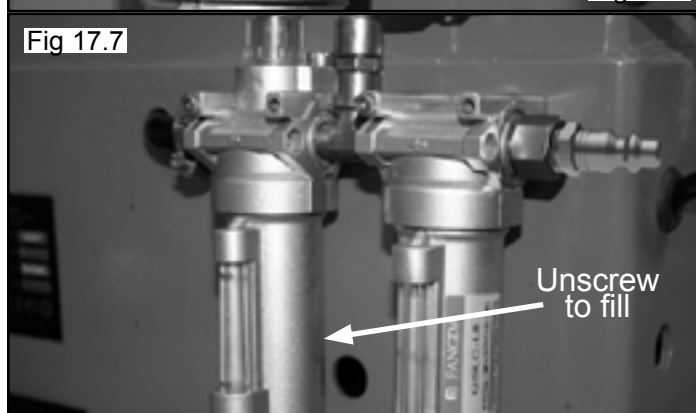


NOTE:

THIS ADJUSTMENT WILL REQUIRE TWO PERSONS TO PERFORM.

6. With the air source connected, depress the Bead Breaker Pedal to operate the Bead Breaker.

7. Observe the sight glass and adjust the oil flow of the oiler by turning the Oiler Adjustment Screw so that 2-3 drops of oil drip through the sight glass for each operation of the Bead Breaker Pedal. (See Fig 15.8)
(Either reservoir may be removed for cleaning by turning the reservoir counter-clockwise and pulling down.)

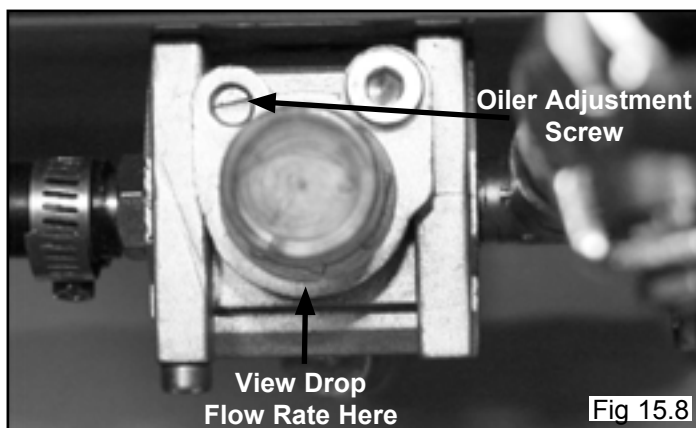


Inflation Pedal Pressure Limiter Maintenance



WARNING!


THE INFLATION PRESSURE LIMITER IS PRESET AT THE FACTORY AND SHOULD NEED NO ADJUSTMENT. ADJUST ONLY IF PRESSURE EXCEEDS 60 PSI. OPERATING A TIRE CHANGER WITH A DEFECTIVE, IMPROPERLY ADJUSTED, OR BYPASSED PRESSURE LIMITER COULD RESULT IN A TIRE EXPLOSION WITH SEVERE INJURY OR DEATH TO OPERATOR OR BYSTANDERS. ALWAYS BE SURE THAT THE PRESSURE LIMITER IS OPERATING PROPERLY ON THE MACHINE AT ALL TIMES. PRESSURE LIMITER IS SET AT 60 PSI. ANY REQUIRED INFLATION ABOVE 60 PSI SHOULD BE PERFORMED IN AN INFLATION CHAMBER/SAFETY CAGE.

The Inflation Pedal pressure limiter helps prevent inflation of standard size or larger tires or tubes beyond 60 PSI to minimize risk of explosion. This device is for the safety of the operator and bystanders. Proper operation of the pressure limiter is essential to safe operation of the machine. (See Fig 15.9)

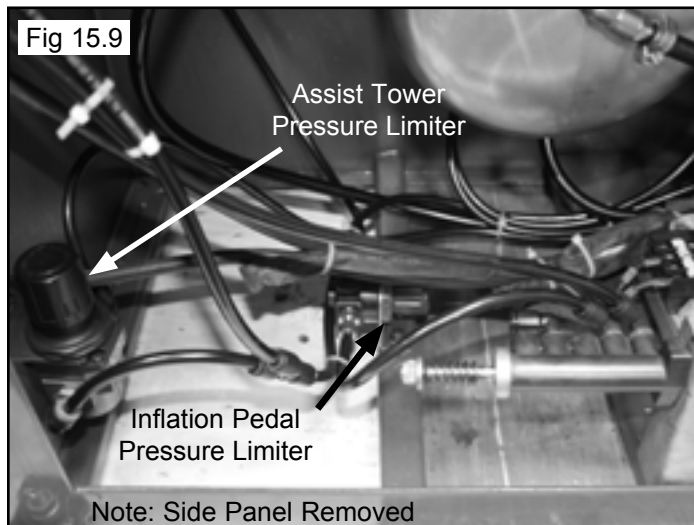


Check operation of the pressure limiter as follows at least once a month:

1. Remove tires and/or wheels from the machine.
2. Connect the Inflation Hose to an empty service tank with a pressure gauge (the gauge should read 0). Use a certified tank with at least 250 PSI pressure rating. (See Fig 15.10)
3. Depress Inflation Pedal to start air flow through the hose and into the tank. Maintain a steady pressure for constant flow.

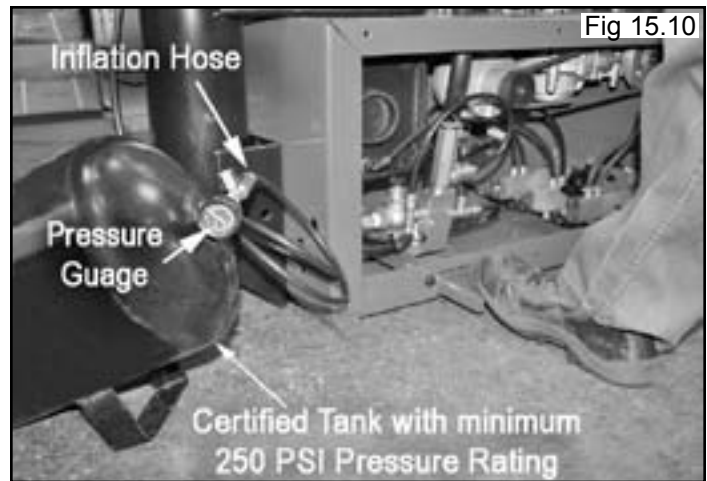


4. Watch the rising pressure on the tank gauge and the gauge on the machine. As tank pressure reaches 60 PSI, the pressure limiter should stop the air flow automatically. Both gauges should read 60 PSI \pm 5 PSI.

5. If the pressure exceeds 60 PSI, adjust the knob on the regulator by lifting the locking cover and turning COUNTERCLOCKWISE. After adjustment is made, secure cover in the locked position. (See Fig 15.11)

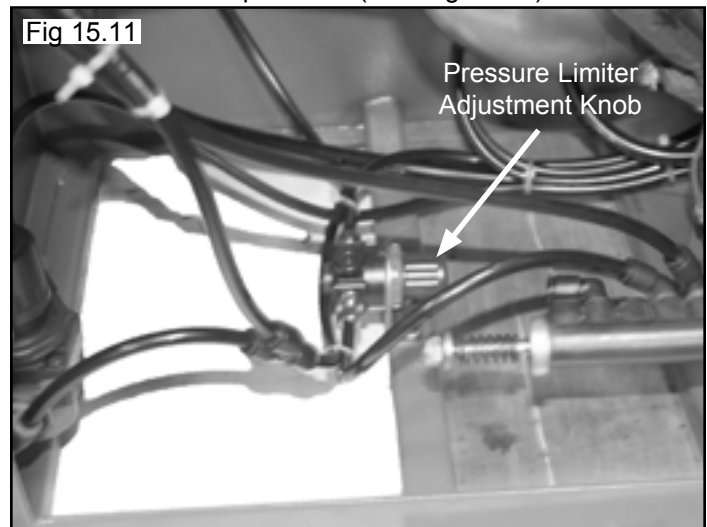

6. Repeat steps 1-6. Readjust if necessary.

7. After pressure limit has been set, check the manual release valve function by pressing the button and releasing pressure from the tank until it reaches 50 PSI. Release air inside tank and disconnect Inflation Hose. (See Fig 15.12)

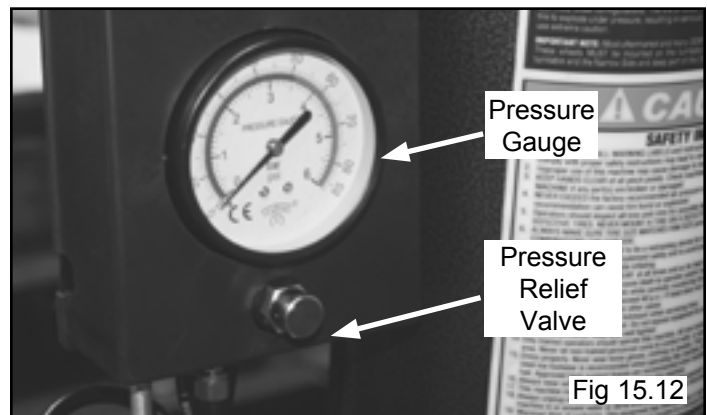


TURNTABLE DRIVE BELT INSPECTION / ADJUSTMENT

1. Remove the Side Panel. (See Fig 15.13)



DANGER!

THE MOTOR ON THIS MACHINE CONTAINS HIGH VOLTAGE. DISCONNECT POWER AT THE RECEPTACLE BEFORE PERFORMING ANY ELECTRICAL REPAIRS. SECURE PLUG SO THAT IT CANNOT BE ACCIDENTALLY PLUGGED IN DURING SERVICE.


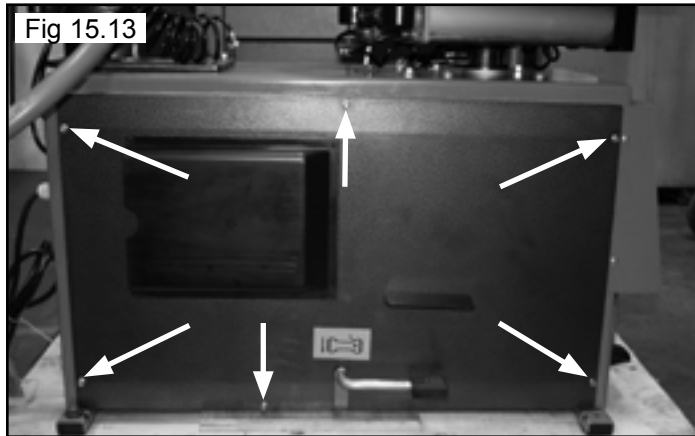


2. Loosen the four Motor mounting bolts and nuts. Inspect the Drive Belt for cracking and wear and replace as necessary. Adjust the Belt deflection to $\frac{3}{8}$ " - $\frac{1}{2}$ ". (See Fig 15.14)




INFLATION VALVE LUBRICATION

1. Remove the Side Panel. (See Fig 15.13)
2. Disconnect Air Supply to machine. (See Fig 15.15)
3. Disconnect the Air Line going to the left port on the Inflation / Bead Blast Pedal. Place 1/2 oz. SAE 10W non-detergent oil or an air tool oil into the open port. (See Fig 15.16)
4. Operate the Inflation Pedal six times to work the oil into the Valve. (See Fig 15.17)
5. Reconnect the Air Line and Air Supply and install the side panel when service/adjustments are complete.

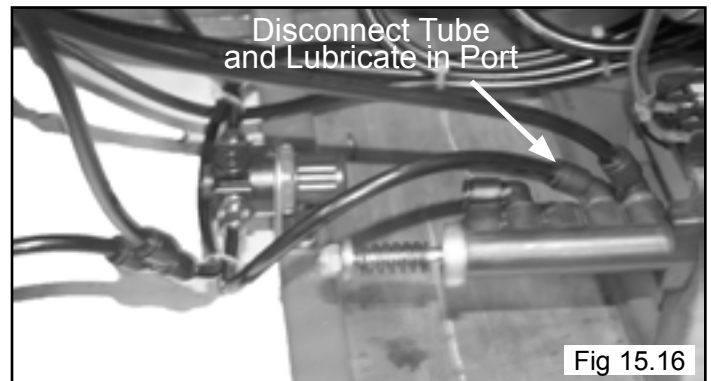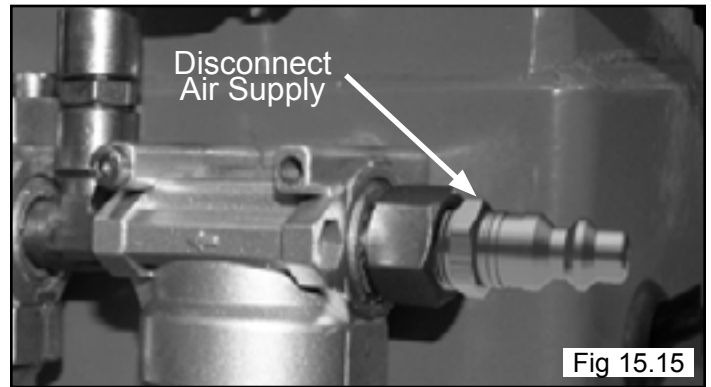

TRANSMISSION INSPECTION / LUBRICATION

1. Rotate the Turntable so that the Transmission fill plug is visible and remove plug. (See Fig. 15.18)

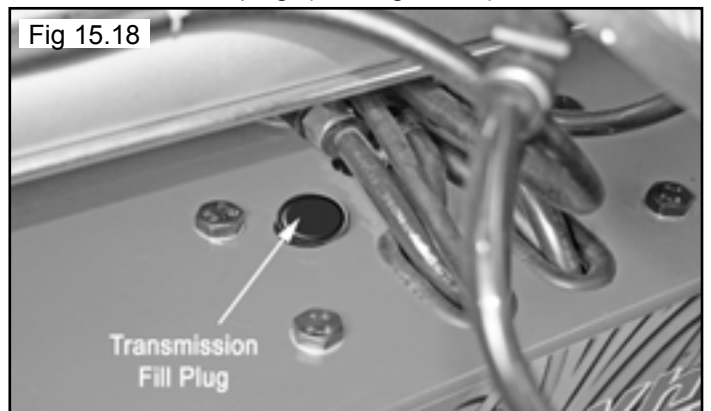

2. Put a flexible wire into the Transmission Oil Fill Hole until the wire hits the bottom of the well. (See Fig 15.19)

Fig 15.19



3. Remove the wire and check the level of the Transmission fluid. The oil should cover no more than 1" (25 mm) of the wire.



CAUTION!

FILLING OIL LEVEL HIGHER WILL RESULT IN LEAK-
AGE OF THE TRANSMISSION SEALS.

 <h2>CAUTION</h2>  <p>KEEP HANDS CLEAR OF BEAD AREA WHEN INFLATING.</p>	 <h2>WARNING</h2>  <p>BE SURE TO READ ALL WARNING LABELS AND INSTRUCTION MANUAL PRIOR TO OPERATION OF THIS MACHINE</p>	 <h2>CAUTION</h2>  <p>ALWAYS WEAR SAFETY GLASSES WHEN OPERATING THIS MACHINE.</p>
--	---	--



WARNING



KEEP HANDS CLEAR OF ALL PINCH POINTS



DANGER



STAND CLEAR WHILE INFLATING TIRE. TIRE OR WHEEL FAILURE UNDER PRESSURE MAY CAUSE SERIOUS INJURY OR DEATH.



WARNING



DO NOT WEAR LOOSE CLOTHING, LONG HAIR OR JEWELRY. MOVING PARTS CAN SNAG AND PULL




CAUTION

READ FIRST


- ✓ Be sure to **READ ALL WARNING LABELS** and instruction manual prior to operation of this machine. Failure to comply with proper safety instructions may lead to serious harm or even death of operator and/or bystanders.
- ✓ Improper operation of this machine may cause damage to machine or cause personal harm or injury.
- ✓ **ALWAYS** wear safety goggles when operating this machine.
- ✓ **KEEP HANDS CLEAR** of all pinch points.
- ✓ Check machine for damaged parts prior to operation. **DO NOT USE MACHINE** if any component is broken or damaged.
- ✓ **NEVER EXCEED** the factory recommended air pressure of tire. Over inflating the tire beyond the manufacturer's recommendation can cause tire burst or explosion.
- ✓ Operators should inspect all tires and rims for possible defects prior to mounting.
- ✓ **ALWAYS INSPECT TIRES BEFORE MOUNTING.** Defective or damaged tires may burst or explode when inflating and may lead to serious harm or injury.
- ✓ **ALWAYS MAKE SURE TIRE SIZE MATCHES RIM SIZE** prior to mounting. Mounting tires on defective or improper rims can cause tire burst or explosion and may lead to serious harm or injury.
- ✓ This machine is not intended to be a restraining device for exploding tires, tubes, or rims. All operators should take proper precaution to implement safety and to avoid personal injury or harm.
- ✓ **DO NOT** lean over the tire while inflating. **KEEP HANDS AND BODY CLEAR** at all times and as far back as possible during inflation. An exploding tire, rim, or component thereof can cause injury or death to operator and/or bystanders. **REMAIN CLEAR AT ALL TIMES.**
- ✓ To inflate tires, use short bursts while carefully monitoring the pressure, tire, rim, and bead.
- ✓ While seating beads **NEVER EXCEED 40 p.s.i.** If bead does not seat at 40 p.s.i., immediately relieve pressure and check for mismatch of tire, damaged bead and/or other cause.
- ✓ **ALWAYS USE** good quality tire lubricant when servicing tires.

Always Think Safety!

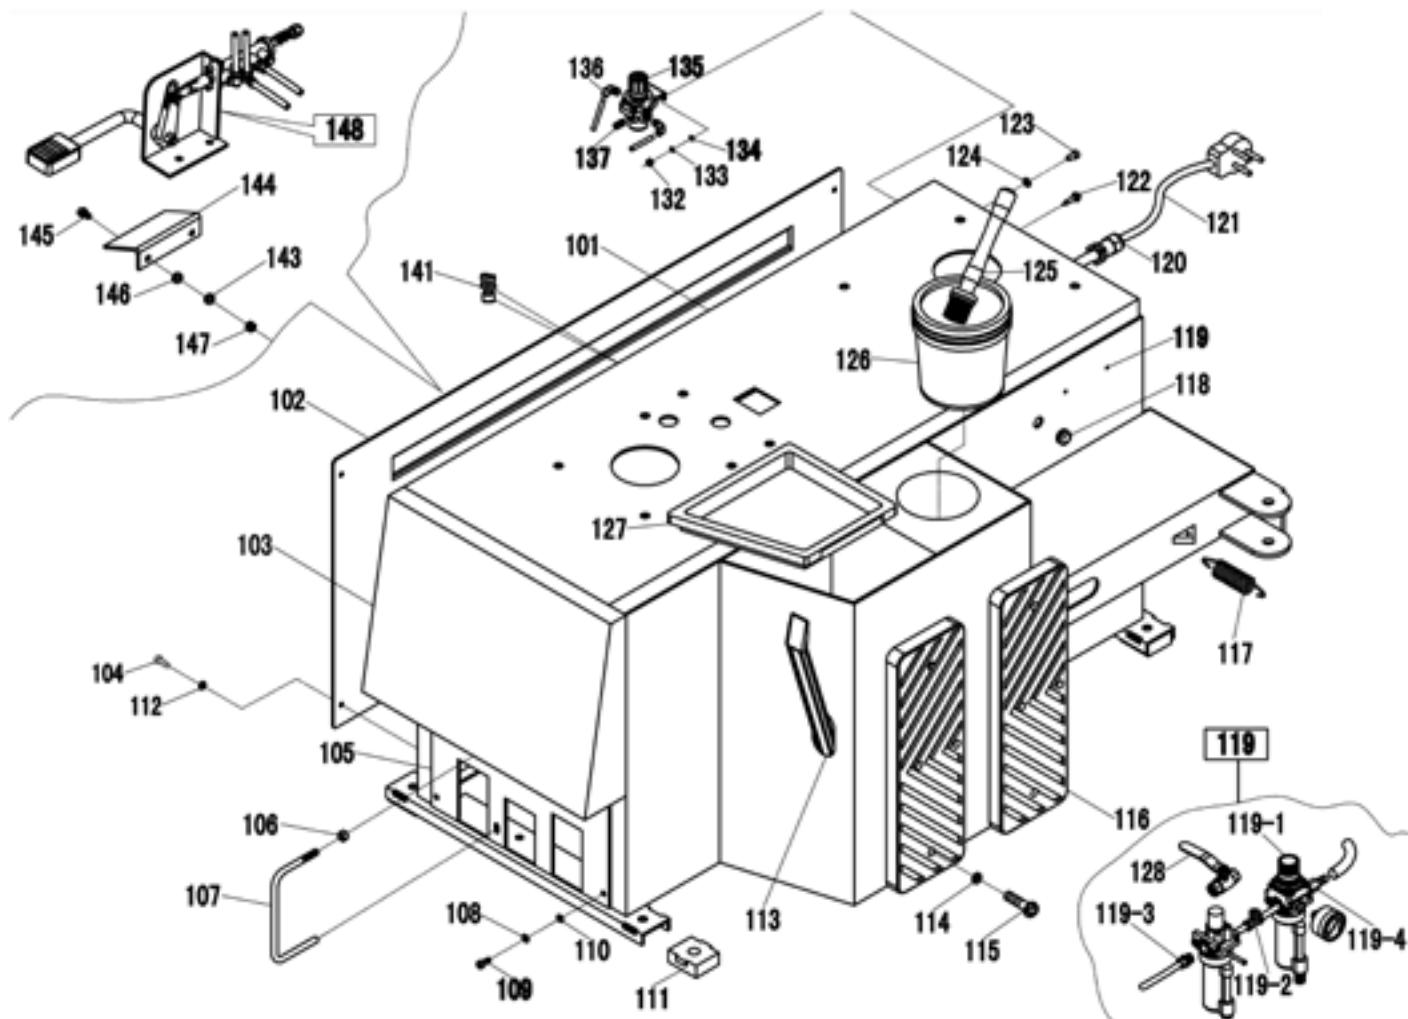


101	Chassis Weldment
102	Chassis Side Cover
103	Foot Pedal Hood
104	PHPS M6 x 1.0 x 20
105	Chassis Front Board
106	Hex Nut M8 x 1.25
107	Pedal Divider
108	Washer M6 x 12 Flat
109	SHCS M6 x 1.0 x 16
110	Washer M6 Flat
111	Plastic Foot Pad
112	Washer M6 Flat
113	Pry Bar
114	Washer Ø6mm
115	PHPS M6 x 1.0 x 20
116	Wheel Support Pad
117	Bead Breaker Return Spring
118	Rubber Grommet Ø12
119	Air Drier / Oiler
119-1	Air Drier
119-2	Tee Fitting ¼ NPT x ¼ Female NPT
119-3	FTG NPL ¼ NPT x Ø8mm
119-4	Barbed Tube Fitting ¼"

120	Power Cord Grip
121	Power Cord
122	STS M5.5 x 1.0 x 25
123	SHCS M5 x 0.8 x 20
124	Washer Ø5
125	Soap Brush
126	Soap Bucket
127	Tool Tray
128	¼" Ball Valve
132	Nut M5 X 0.8
133	Washer Ø5
134	Washer Ø5
135	Air Regulator / Limiter 28mm Mount
136	FTG 90° ⅛" NPT x Ø8mm
137	Block
141	Y-branch Air Fitting Ø8mm
143	Washer M6 x 12mm Flat
144	Inflation Pedal Hood
145	SHCS M6 x 1.0 x 20
146	Washer M6 Flat
147	Nut M6 x 1.0
148	Inflation Pedal Assy

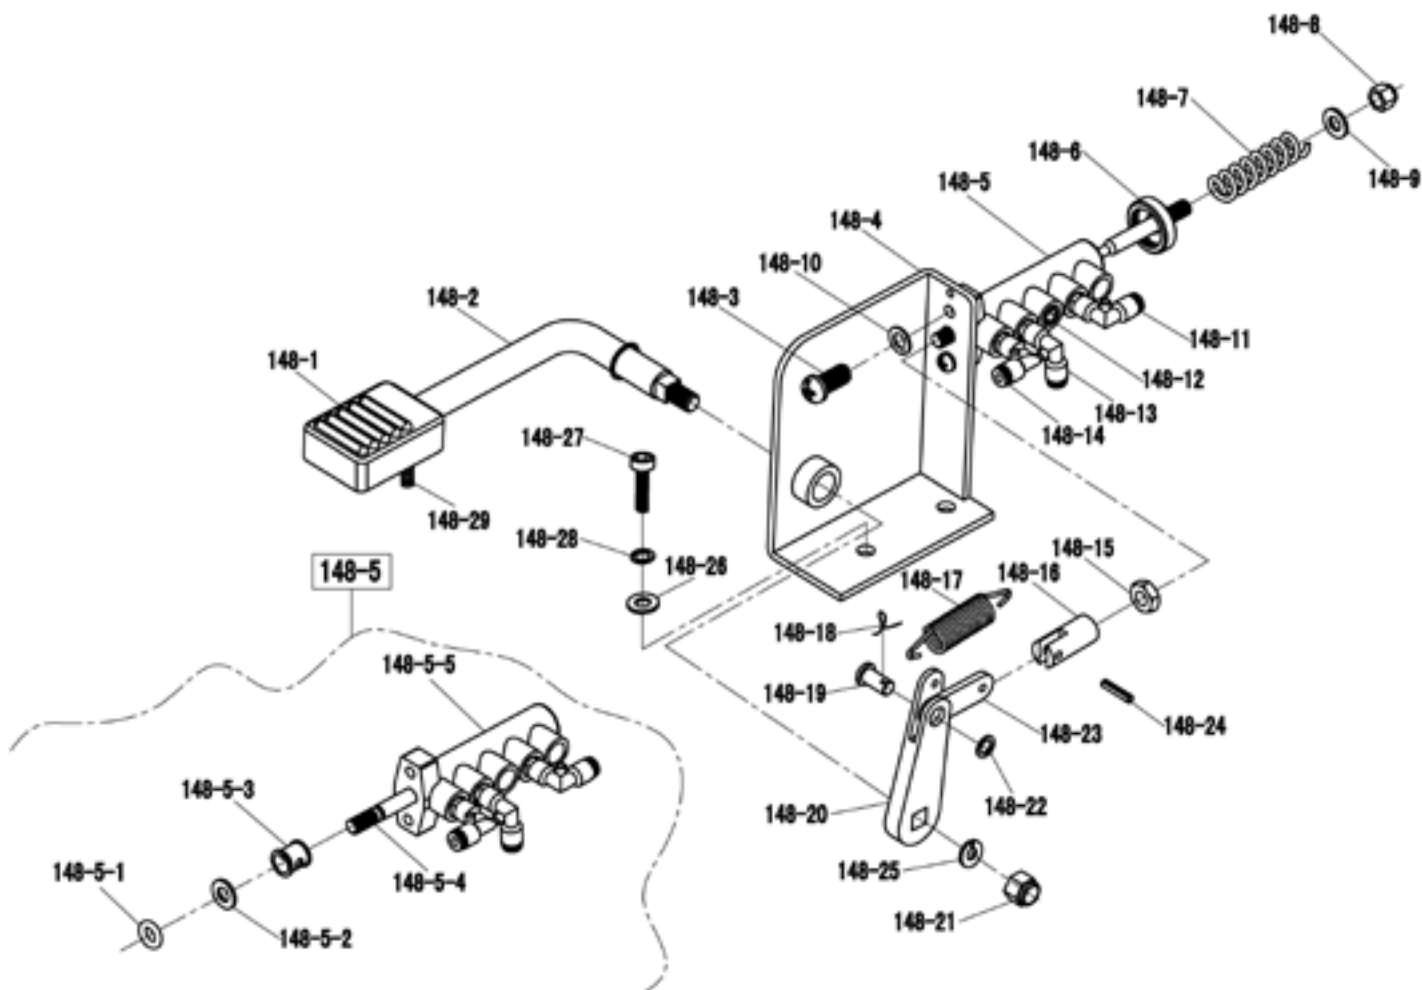


148-1	Inflation Pedal
148-2	Inflation Pedal Lever
148-3	PHPS M6 x 1.0 x 16
148-4	Pedal / Valve Bracket Weldment
148-5	Bead Blaster Valve Assembly
148-5-1	O-ring Ø15.4 x 3.9
148-5-2	Washer
148-5-3	Air Valve O-ring Spacer
148-5-4	Bead Blaster Valve Rod
148-5-5	Air Valve Body
148-6	Air Valve Reinforce Pad
148-7	Pressing Spring
148-8	Locknut M8 x 1.25
148-9	Washer Ø8
148-10	Washer M6 x 12mm Flat
148-11	FTG 90° 1/8" NPT x Ø8mm
148-12	1/8" NPT Plug

148-13	FTG 90° 1/8" NPT x Ø8mm
148-14	FTG 90° 1/4" NPT x Ø8mm
148-15	Nut M8 x 1.25
148-16	Pedal Valve Link
148-17	Pedal Spring
148-18	Cotter pin
148-19	Pin Ø8
148-20	Pedal Link Lever
148-21	Locknut M10 x 1.5
148-22	Washer Ø8
148-23	Pedal Link
148-24	Roll Pin Ø4 x 18
148-25	Washer Ø10
148-26	Washer Ø8
148-27	SHCS M8 x 1.25 x 20
148-28	Washer Ø8
148-29	SSS M6 x 1.0 x 10

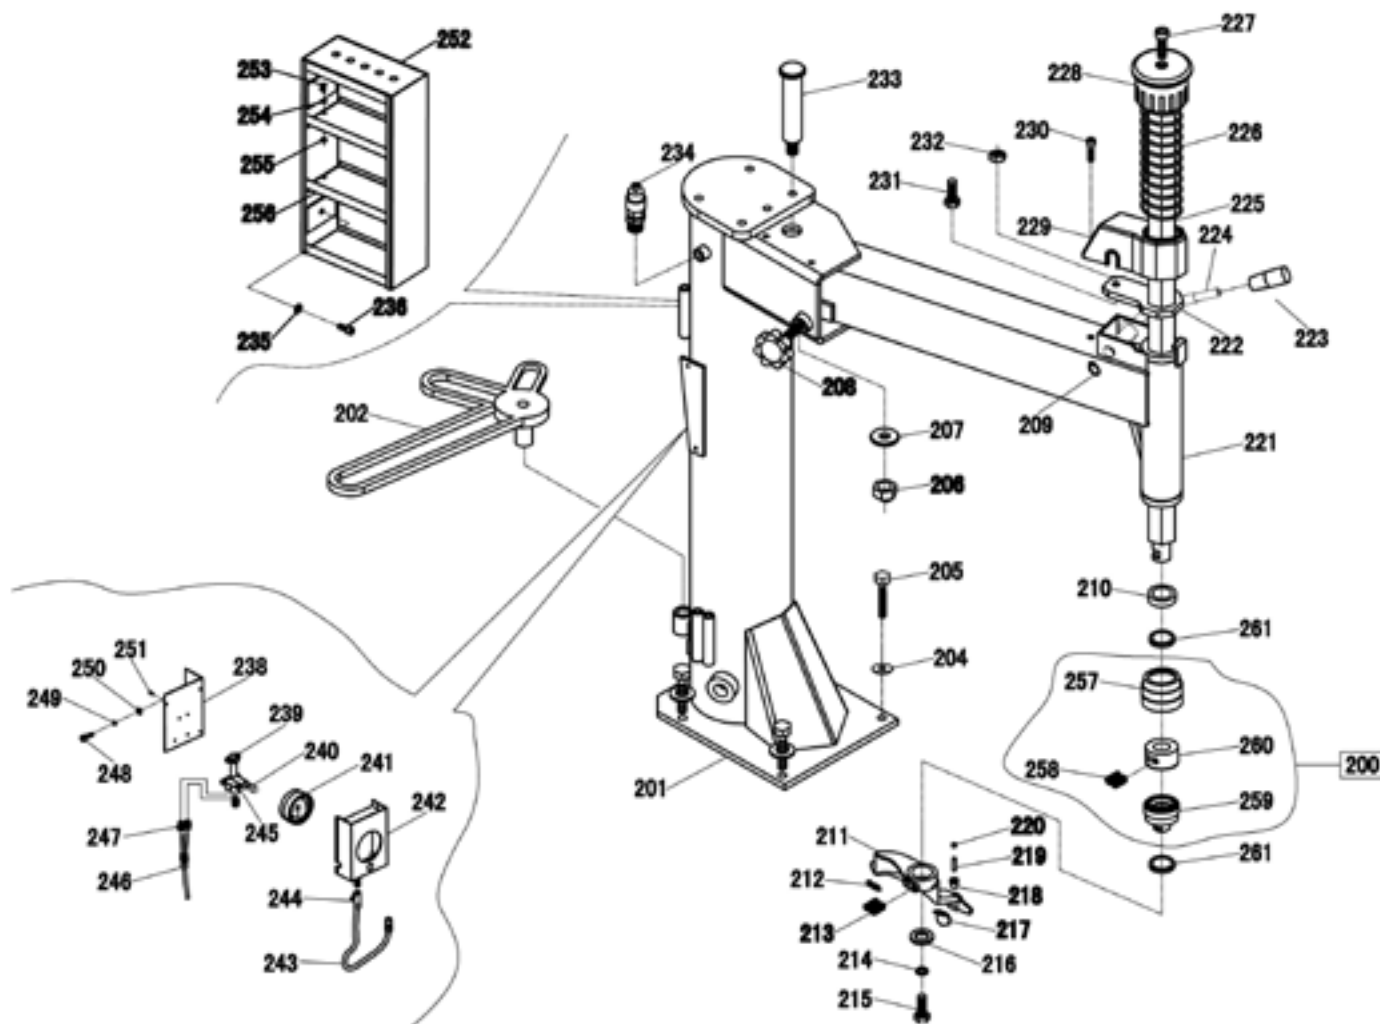


200	Quick Change Chuck Assy	221	Swing Arm Unit Weldment	242-1	Tire Inflator Box Assy
201	Tower unit weldment	222	Hex Shaft Locking Plate	243	Coiled Air Hose Ø8mm (9ft)
202	Assist Tower Tool Holder	223	Locking Handle Cover	244	Air Chuck
204	Washer Ø12	224	Locking Handle	244-1	Inflation Hose Assy
205	Bolt M12 x 1.75 x 80	225	Vertical Shaft	245	Gauge Block 1/8"
206	Locknut M16 x 2.0	226	Hex Shaft Spring	246	Y-branch Air Fitting Ø8mm
207	Lock pad	227	SHCS M8 x 1.25 x 25	247	Union Fitting 8mm x 1/8 NPT
208	Swing Arm Adjustment Screw	228	Hex Shaft Cap	248	SHCS M6 x 1.0 x 8
209	M18 Snap Ring	229	Hex Shaft Lock Cover	249	Washer M6 x 12mm Flat
210	Mount / Demount Head Bushing	230	SHCS M6 x 1.0 x 30	250	Washer M6 Flat
211	Metal Mount-demount Head	231	SHCS M12 x 1.75 x 25	251	PHPS M3 x 0.5 x 10
212	Mount-demount Head Insert	232	Thin Nut M12 x 1.75	252	Tool Box
213	SSS M10 x 1.5 x 20	233	Swing Arm Pivot Pin	253	PHPS M4 X 0.7
214	Washer Ø10	234	Pressure Release Valve	254	Washer Ø4mm
215	Hex Bolt M10 x 1.5 x 30	235	Washer M6 Flat	255	Nut M4 x 0.7
216	Mount-demount Head Retaining Washer	236	SHCS M6 x 1.0 x 16	256	Tool Tray Shelf
217	Roller Insert	238	Inflator Assy Base	257	Quick Change Chuck
218	Mount-demount Head Roller	239	Tire Inflator Relief Valve	258	Bolt
219	Roller Pin Ø5 x 22	240	Air Release Valve	259	Quick Change adapter II
220	SSS M6 x 1.0 x 6	241	Inflating gauge	260	Quick Change adapter I
		242	Inflation System Plastic Cover	261	Adjust pad

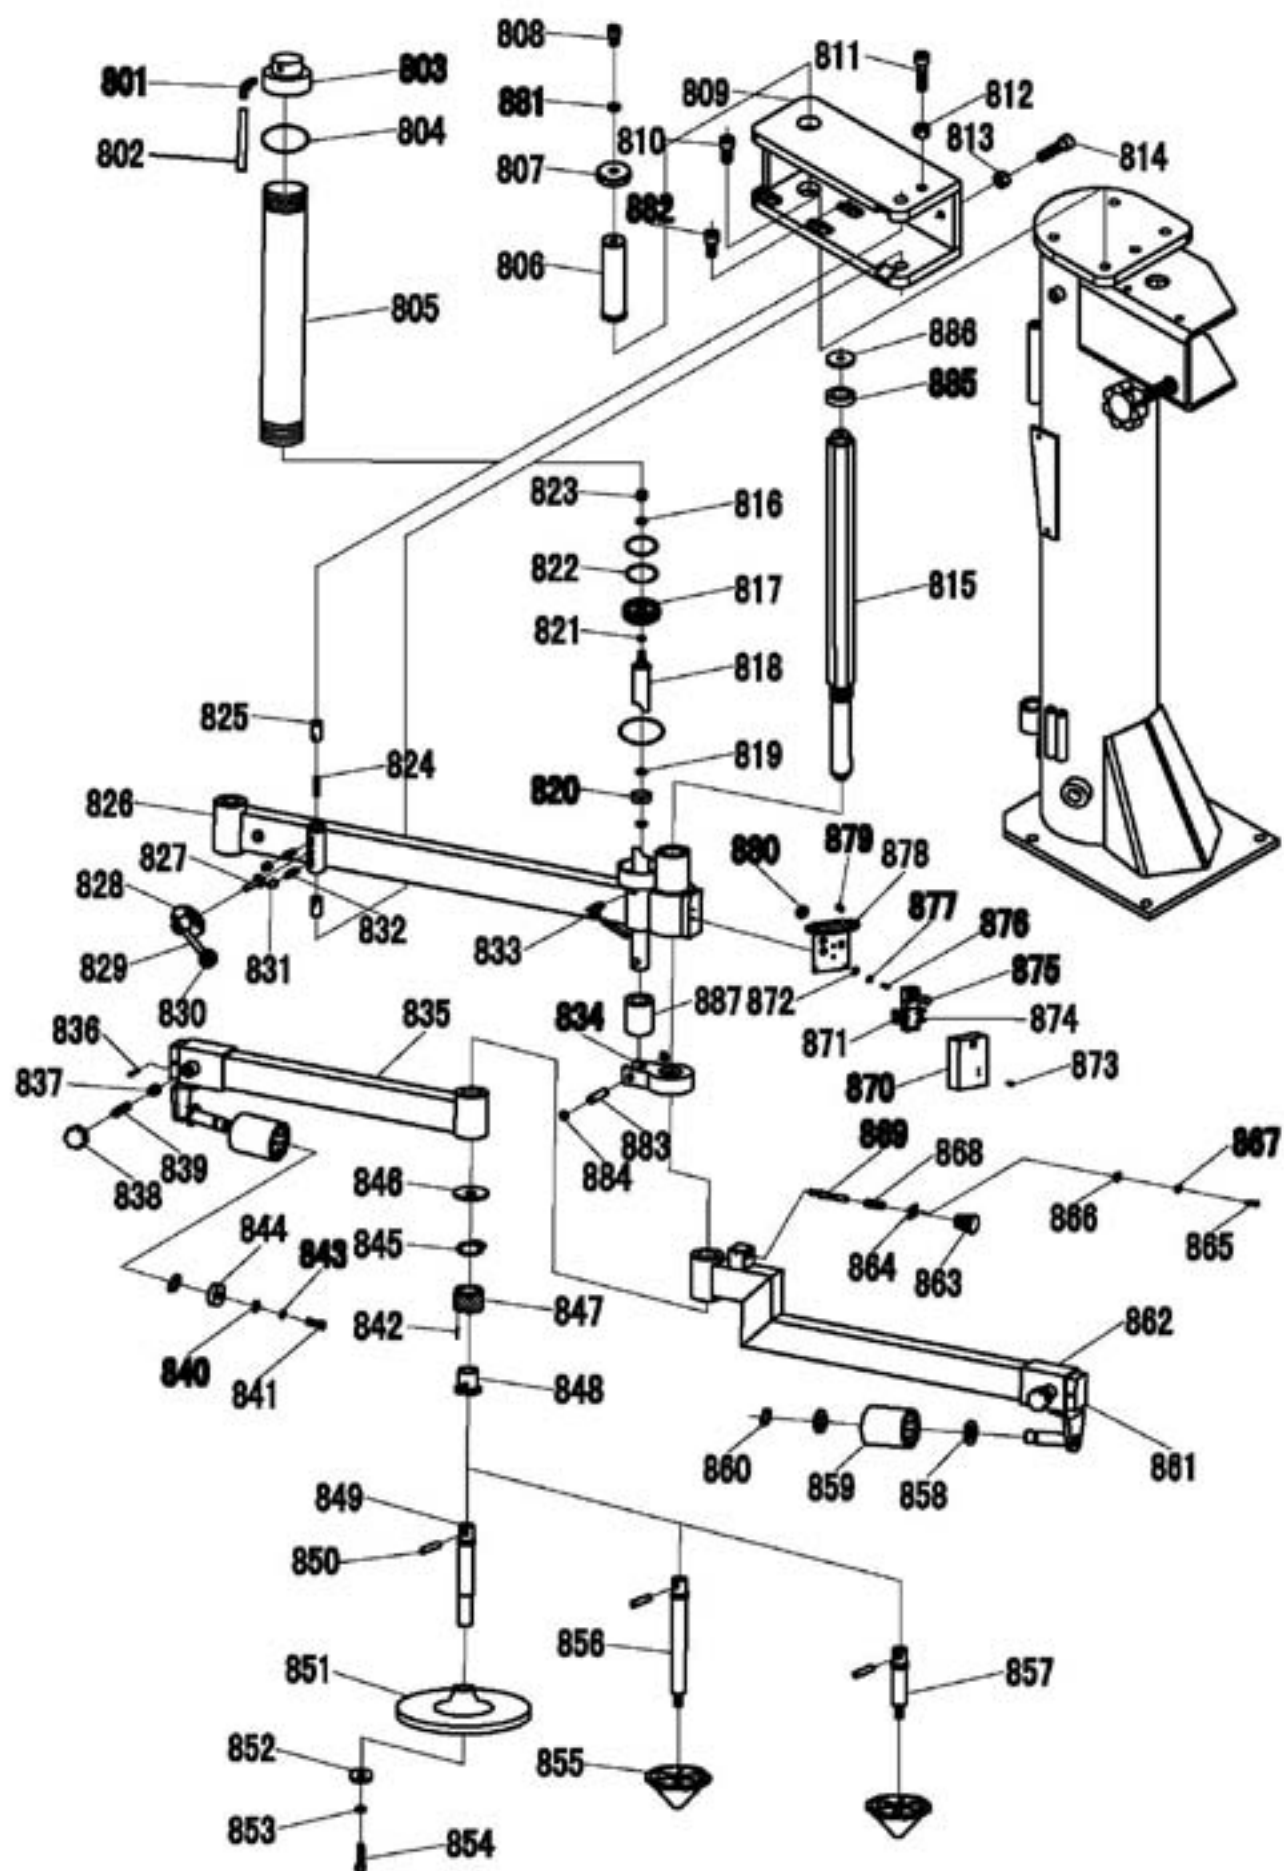


801	90° Fitting 1/8 NPT x 8mm
802	PU Air Compressor Hose Ø6mm
803	Assist Tower Rear Cylinder Plate
804	O-ring Ø85 x 3.6mm
805	Cylinder Body Ø75 x 360mm
806	Assist Tower Pivot Pin
807	Gland
808	SHCS M10 x 1.5 x 25
809	Assist Tower Arm Bracket
810	SHCS M12 x 1.75 x 25
811	SHCS M12 x 1.75 x 25
812	Nut M12 x 1.75
813	Nut M10 x 1.5
814	SHCS M10 x 1.5 x 35
815	Guide Pin
816	Spring Pad Ø10
817	Small Cylinder Piston
818	Assist Cylinder Rod Ø30 x 533mm
819	O-ring Ø35 x 3.1
820	Assist Tower Cylinder Wear Ring
821	O-ring Ø10 x 2.6mm
822	O-ring Ø75 x 5.7mm
823	Locknut M10 x 1.5
824	Assist Tower Lock Spring
825	Assist Tower Lock Pin
826	Assist Arm Weldment
827	Assist Tower Lock Shaft
828	Assist Tower Lock Cam
829	Assist Tower Lock Handle
830	Assist Tower Lock Knob
831	Assist Tower Lock Roller
832	Assist Tower Lock Link
833	Quick union G1/8"
834	Connect plate
835	Lower small arm unit weldment
836	PHPS M6 x 1.0 x 10
837	AT Roller Lock Nylon Insert
838-839	Assist Tower Roller Lock Knob
840	washer Ø10
841	SHCS M10 x 1.5 x 15
842	Straight Pin Ø3 x 18
843	Washer Ø10mm
844	Compress pad

845	Snap Ring Ø35
846	Clout
847	Assist Tower Quick Chuck, Outer
848	Assist Tower Quick Chuck, Inner
849	Tray lever
850	Straight Pin Ø10 x 45
851	Plastic Disk
852	Big arm pin roll clout
853	Washer Ø10
854	SHCS M10 x 1.5 x 20
855	Assist Arm Cone
856	alignment cone lever 1
857	alignment cone lever 2
858	roller pad
859	Assist Tower Roller
860	Snap Ring Ø22
861	upper small arm unit weldment
862	Assist Tower Roller Slide
863	Roller Arm Lock Knob
864	Roller Arm Lock Knob Catch
865	PHPS M5 x 0.8 x 10
866	Washer Ø5
867	Washer Ø5
868	Roller Arm Lock Knob Spring
869	Roller Arm Lock Knob Pin
870	L/R Assist Arm Valve Cover
871	Quick union G1/4"
872	Washer Ø5
873	PHPS M4X30
874	Adjustment silencer G1/8"
875	Assist Arm Control Valve
876	PHPS M5X12
877	Washer Ø5
878	valve control assembly weldment
879	cross recessed tapping screws M4
880	cable holder Ø16
881	washer Ø10
882	SHCS M12X20
883	cylinder pin
884	seeger ringØ12
885	upper cushion pad
886	upper cushion plate
887	lower cushion pad

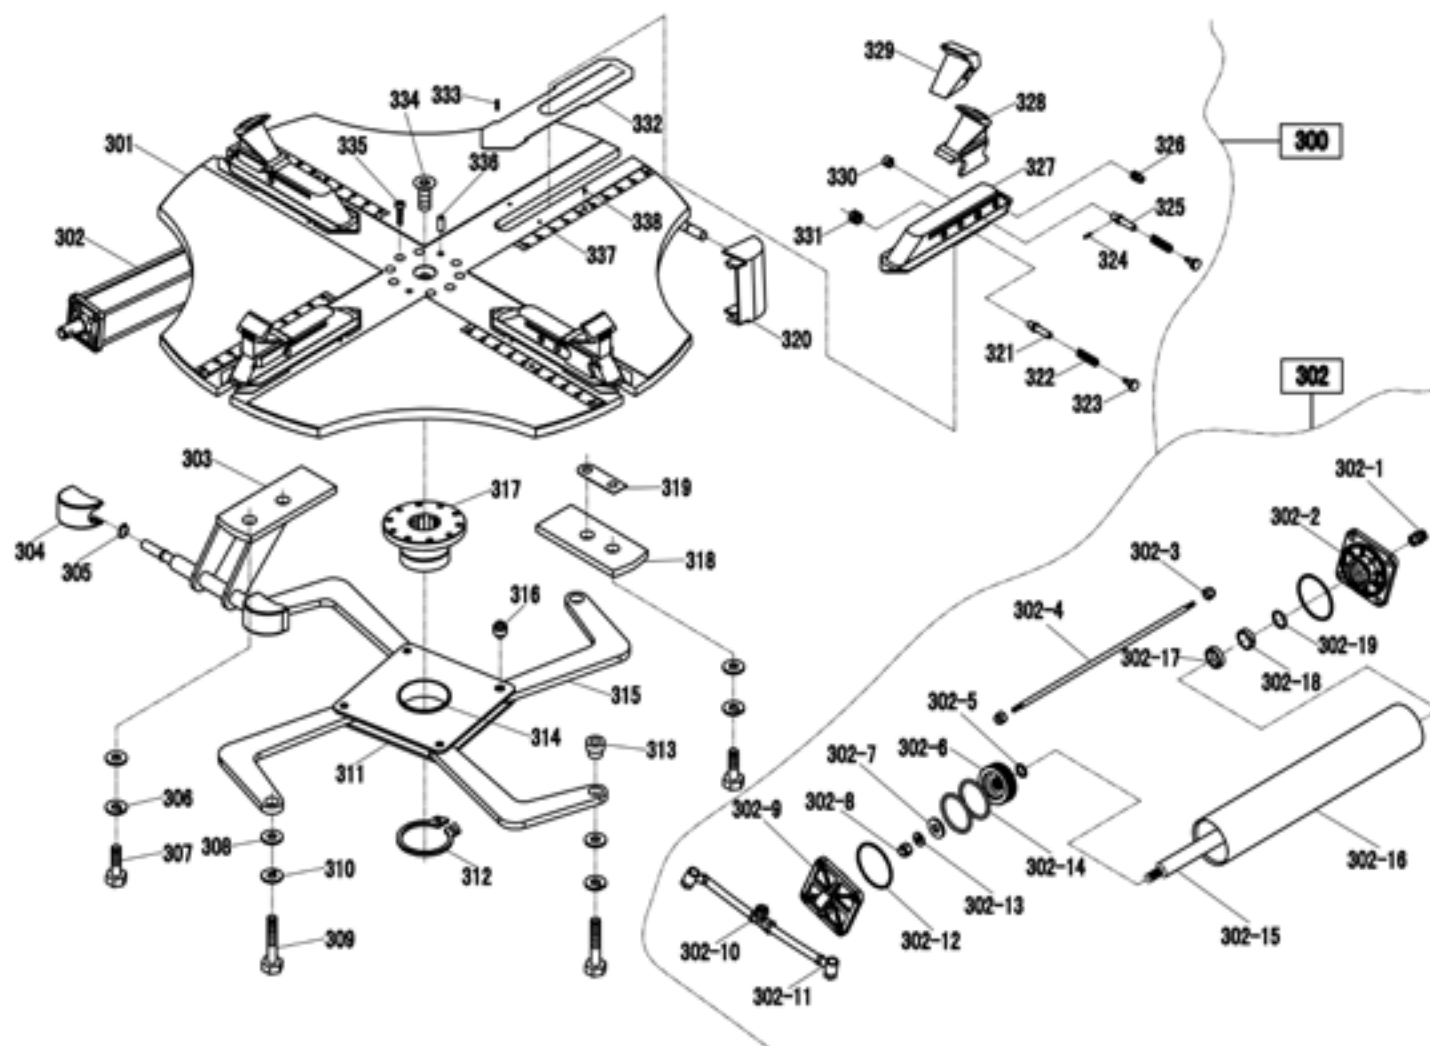


300	Turntable Assembly	302-17	Wiper Seal 32 x 20 x 6	320	Large Cylinder Cover
301	Turntable Ø750	302-18	Cylinder Wear Ring	321	Jaw Clamp Inner Adjustment Pin
302	Jaw Clamp Cylinder Assembly	302-19	O-ring 25 x 3.1	322	Clamp Pin Spring
302-1	Fitting 1/8" NPT x 8mm	303	Slide Block Unit Weldment	323	Jaw Clamp Adjustment Pin
302-2	Front Cylinder Cover	304	Small Cylinder Cover	324	Pin Ø3 x 12mm
302-3	Locknut M8 x 1.25	305	Snap Ring Ø12	325	Clamp Outer Adjustment Pin
302-4	Threaded Rod	306	Washer Ø12	326	Clamp Fixed Pin
302-5	O-ring 16 x 2.4	307	SHCS M12 x 1.75 x 25	327	Clamp Support
302-6	Small Cylinder Piston	308	Washer Ø12	328	Jaw Clamp
302-7	Washer Ø12	309	Hex Bolt M12 x 1.75 x 45	329	Jaw Clamp Cover Set
302-8	Locknut M12 x 1.25	310	Washer Ø12	330	Clamp Outer Adjustment Knob
302-9	Rear Cylinder Cover	311	Square Turntable Plate	331	Clamp Inner Adjustment Knob
302-10	Tee Fiting	312	Snap Ring Ø65mm	332	Clamp Slide Plate
302-11	Bolt 6mm Single	313	Link Spacer	333	Pin Ø4 x 10mm
302-12	O-ring 75 x 2.65	314	Square Turntable Spacer	334	FHSS M16 x 2 x 40
302-13	Washer Ø12	315	Square Turntable Link	335	SHCS M8 x 1.25 x 25
302-14	O-ring 75 x 5.7	316	Square Turntable Press Pin	336	Pin Ø8 x 20
302-15	Cylinder Piston Rod	317	Turntable Hub	337	Turntable Ruler
302-16	Cylinder Tube	318	Jaw Clamp Bolt Plate	338	Turntable Ruler Screw
		319	Bolt Plate Shim		

421	Snap Ring Ø16
422	BB Blade Adjustment Rod
423	Locknut M16 x 2.0
424	Wave Washer Ø16
425	Washer Ø16
427	Locknut M12 x 1.75
428	BB Blade Hinge
429	Bead Breaker Blade
430	Bead Breaker Blade Cover
431	Bead breaker Cover Plug
432	SHCS M12 x 1.75 x 90
433	SHCS M14 x 2.0 x 30
434	Metal Bushing Ø18 x Ø12 x 11
435	Hex Bolt M6 x 1.0 x 16
436	Cylinder Head Cap
437	Cylinder Rod
438	Piston Spacer Pad
439	Washer M6 Flat
440	Washer M6 x 12mm Flat
441	Nut M6 x 1.0
442	BB Blade Adjustment Rod Pin

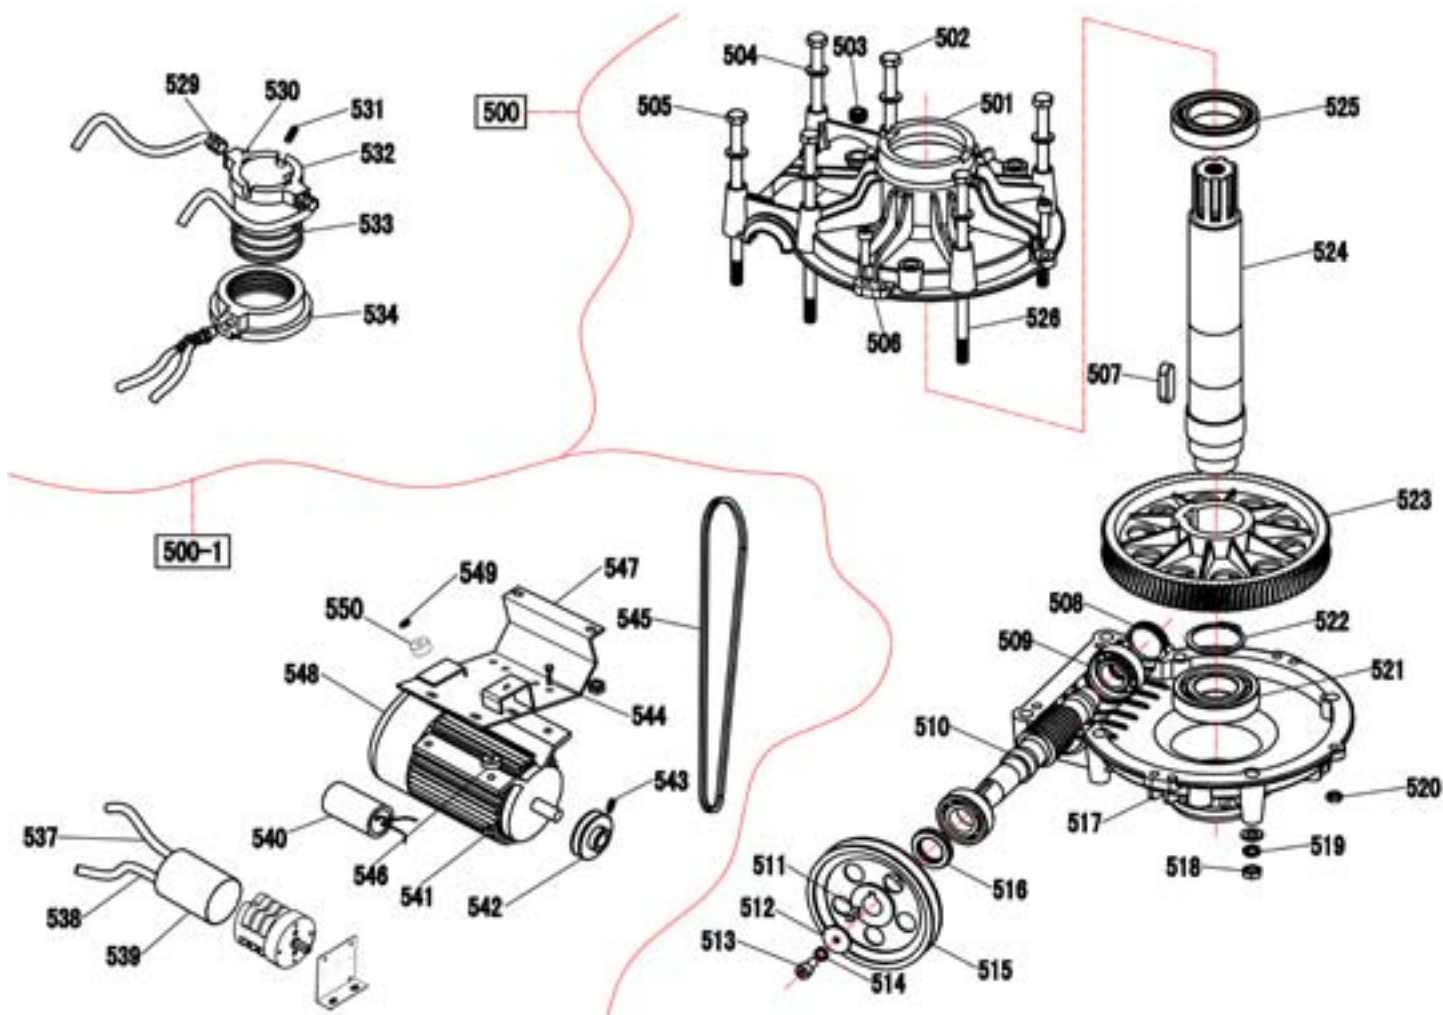


500	Reduction Box Assembly	515	Large Belt Pulley	533	O-ring Ø60 x 2.65
500-1	Rotary Joint Block	516	Oil Seal Ø45 x 25 x 10	534	Rotary Joint Block Collar
501	Gearbox Top Flange	517	Gearbox Bottom Flange	537	Electrical Line
502	Hex Bolt M10 x 1.5 x 200	518	Nut M10 x 1.5	538	Power Lline
503	Oil Plug	519	Washer Ø10	539	Directional Switch Cover
504	Washer Ø10	520	Nut M8 x 1.25	540	Electric Capacitor
505	Hex Bolt M10 x 1.5 x 180	521	Bearing 80208	541	Locknut M8 x 1.25
506	SHCS M8 x 1.25 x 30	522	Snap Ring Ø50	542	Motor Pulley
507	Turntable Key 12 x 8 x 35	523	Helical Gear M2(Al)	543	SSS with flat point M8 x 1.25 x 16
508	Oil Block 45 x 8	524	Turntable Shaft	544	Hex Bolt M8 x 1.25 x 40
509	Cone Roller Bearing 7205	525	Bearing 80110	545	V Belt
510	Gear Stud M2	526	Hex Bolt M10 x 1.5 x 170	546	Rubber Washer
511	Tab 6 x 6 x 20	529	90° Fitting 1/8" NPT x Ø8mm	547	Motor Mounting Weldment
512	Gear Stud Pad	530	PHPS M3 x 0.5 x 6	548	Electric Motor
513	SHCS M8 x 1.25 x 16	531	SHCS M6 x 1.0 x 8	549	Washer Ø10
514	Washer Ø8	532	Rotary Joint Block	550	Transmission Bracket Bushing

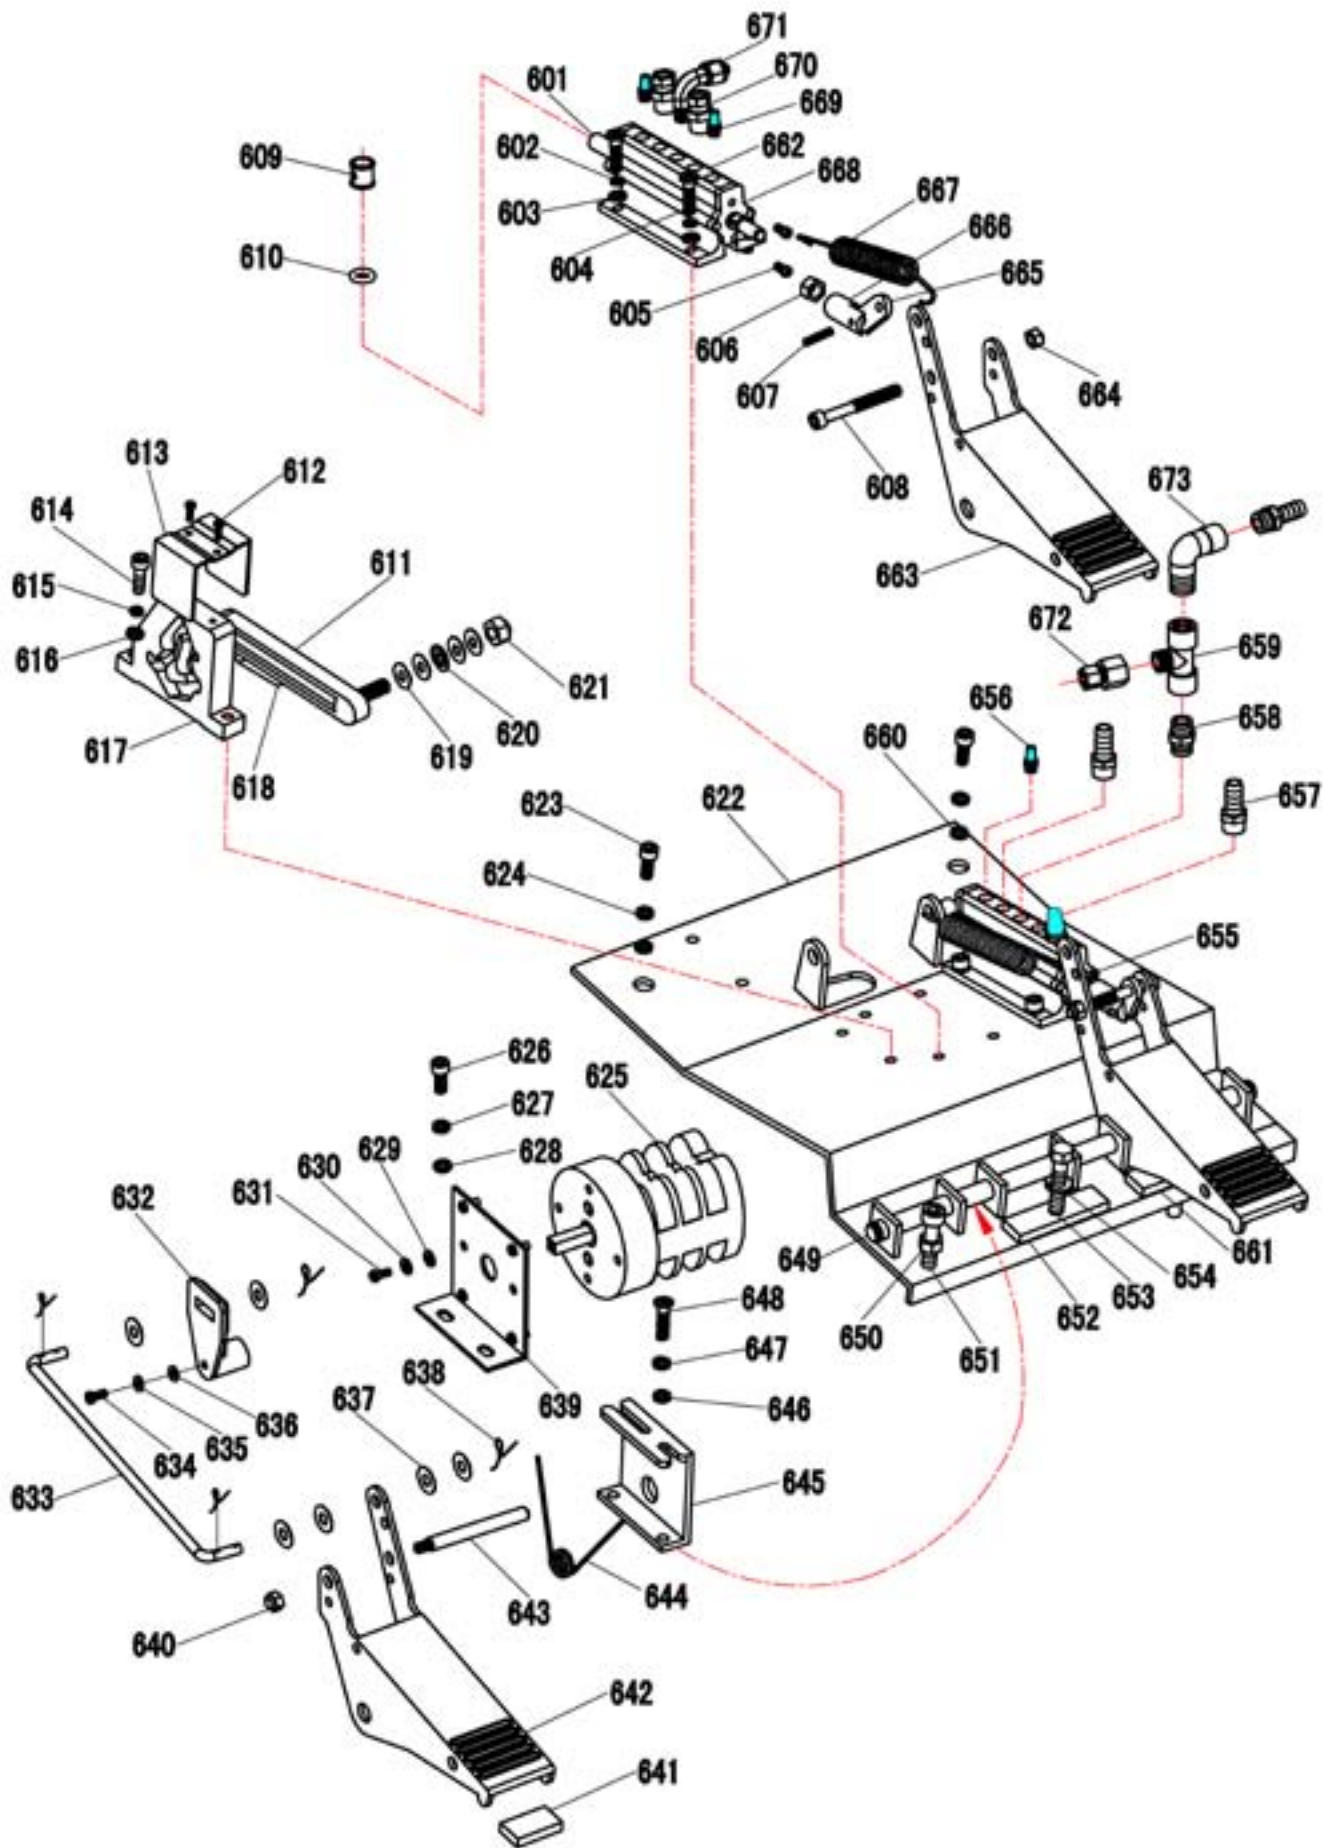

601	Air Valve Spool
602	Washer M6 x 12mm Flat
603	Washer M6 Flat
604	PHPS M6 x 1.0 x 12
605	PHPS M4 x 0.7 x 10
606	Nut M8 x 1.25
607	Roll Pin Ø4 x 18
608	SHCS M6 x 1.0 x 55
609	Air Valve O-ring Spacer
610	O-ring Ø17 x 4
611	Foot Pedal Cam Link
612	PHPS M3 x 0.5 x 10
613	Foot Pedal Cam Cover
614	SHCS M6 x 1.0 x 20
615	Washer M6 x 12mm Flat
616	Washer M6 Flat
617	Foot Pedal Cam
618	Cam Arc Washer
619	Washer Ø8mm
620	Wave Washer Ø8mm
621	Locknut M8 x 1.25
622	Foot Pedal Mounting Weldment
623	SHCS M8 x 1.25 x 20
624	Washer Ø8
625	Turntable Directional Switch
626	SHCS M6 x 1.0 x 16
627	Washer M6 x 12mm Flat
628	Washer M6 Flat
629	Washer Ø5
630	Washer Ø5
631	PHPS M5 x 0.8 x 16
632	Turntable Direction Switch Cam
633	Directional Switch Cam Linkage
634	PHPS M4 x 0.7 x 16
635	Washer Ø4
636	Washer Ø4
637	Washer Ø6

638	Cotter Pin Ø3 x 25
639	Directional Switch Bracket
640	Locknut M6 x 1.0
641	Foot Pedal Rubber Insert
642	Foot Pedal (Left)
643	Foot Pedal Limit Rod
644	Foot Pedal Torsion Spring
645	Torsion Spring Bracket
646	Washer M6 Flat
647	Washer M6 x 12mm Flat
648	PHPS M6 x 1.0 x 12
649	Foot Pedal Shaft
650	Nut M8 x 1.25
651	SHCS M8 x 1.25 x 50
652	Foot Pedal Adjustment Pad (thin)
653	Hex Bolt M8 x 1.25 x 16
654	Spring Lock Washer Ø8
655	big cylinder locating coat
656	Silencer ¼"
657	Barbed Tube Fitting ¼"
658	FTG NPL ¼ NPT
659	Tee Fitting ¼ Female NPT x ¼ NPT
660	Washer Ø8
661	Foot Pedal Adjustment Pad (thick)
662	Air Valve
663	Foot Pedal (Center/Right)
664	Locknut M6 x 1.0
665	Air Valve Connecting Link
666	Foot Pedal Link
667	Foot Pedal Return Spring
668	Air Valve End Cap
669	Silencer ⅛"
670	FTG NPL ⅛" NPT x Ø8mm
671	FTG 90° ⅛" NPT x Ø8mm
672	FTG NPL ¼ NPT x ¼ Female NPT
673	FTG 90° ¼ NPT x ¼ Female NPT

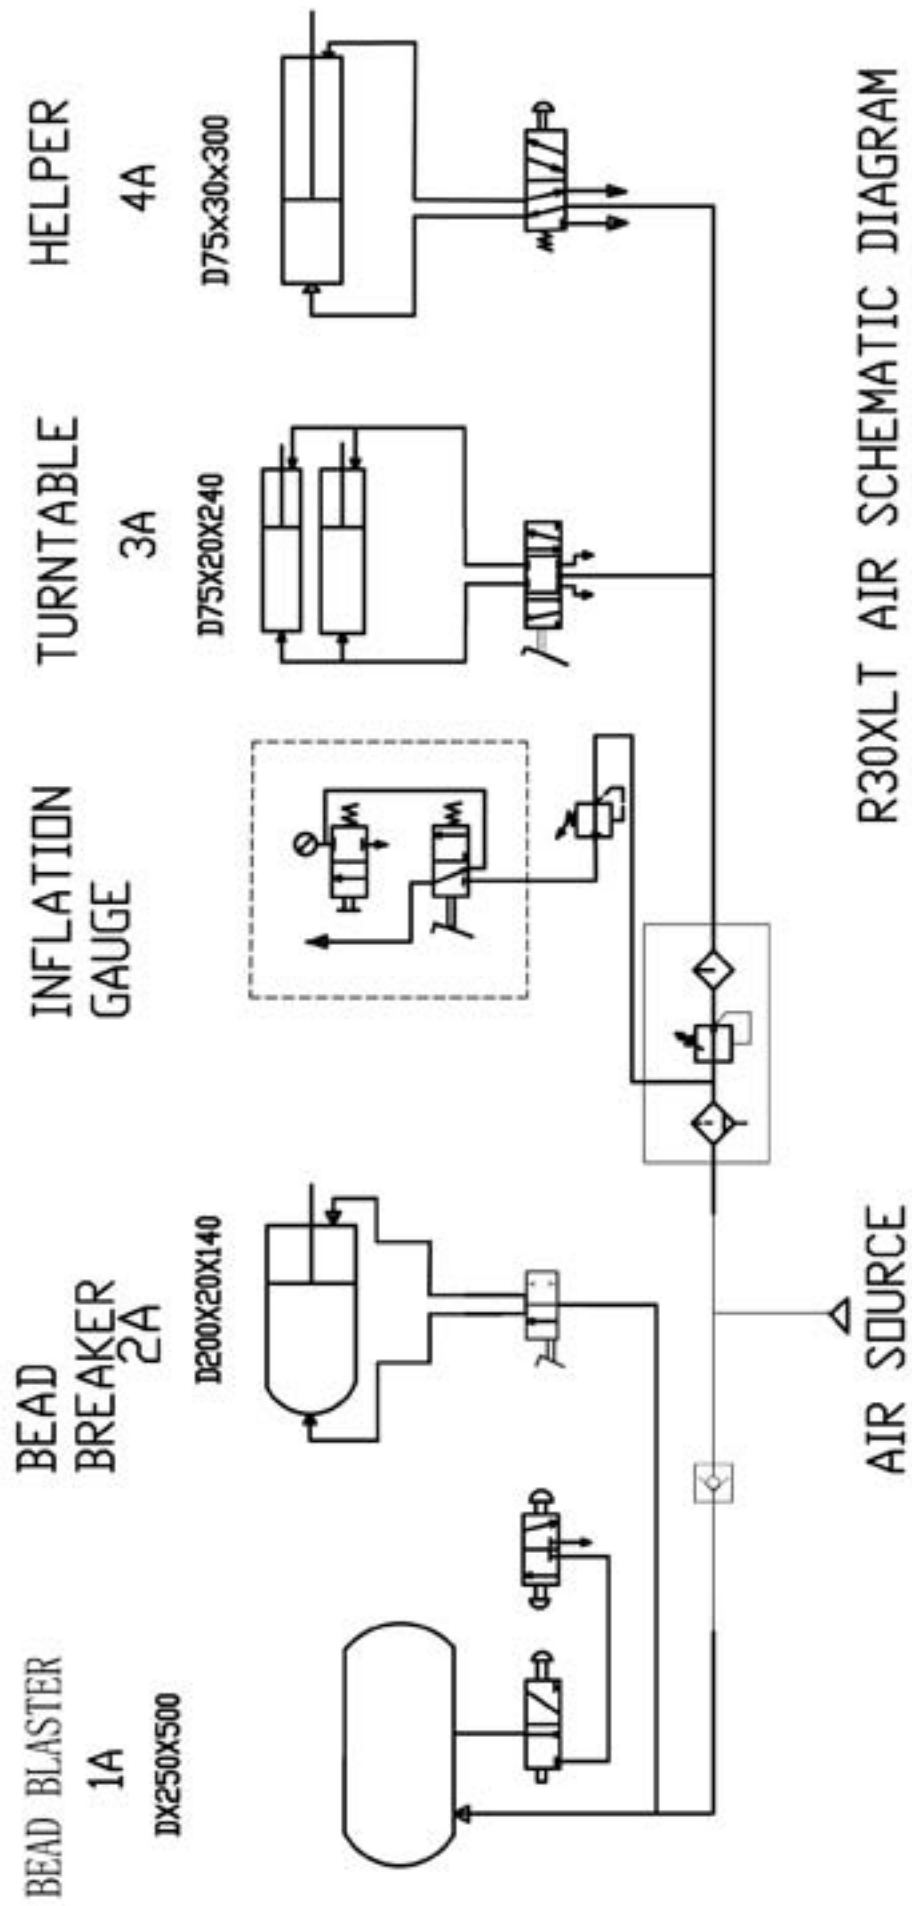

[illegible]

TIRE AND WHEEL DATA

[illegible]



The best automotive service equipment on the planet.

**For Parts Or Service
Contact:**

**BendPak Inc. / Ranger Products
1645 Lemonwood Dr.
Santa Paula, CA. 93060**

**Tel: 1-805-933-9970
Toll Free: 1-800-253-2363
Fax: 1-805-933-9160**

**www.bendpak.com
www.rangerproducts.com**

P/N 5900380

