


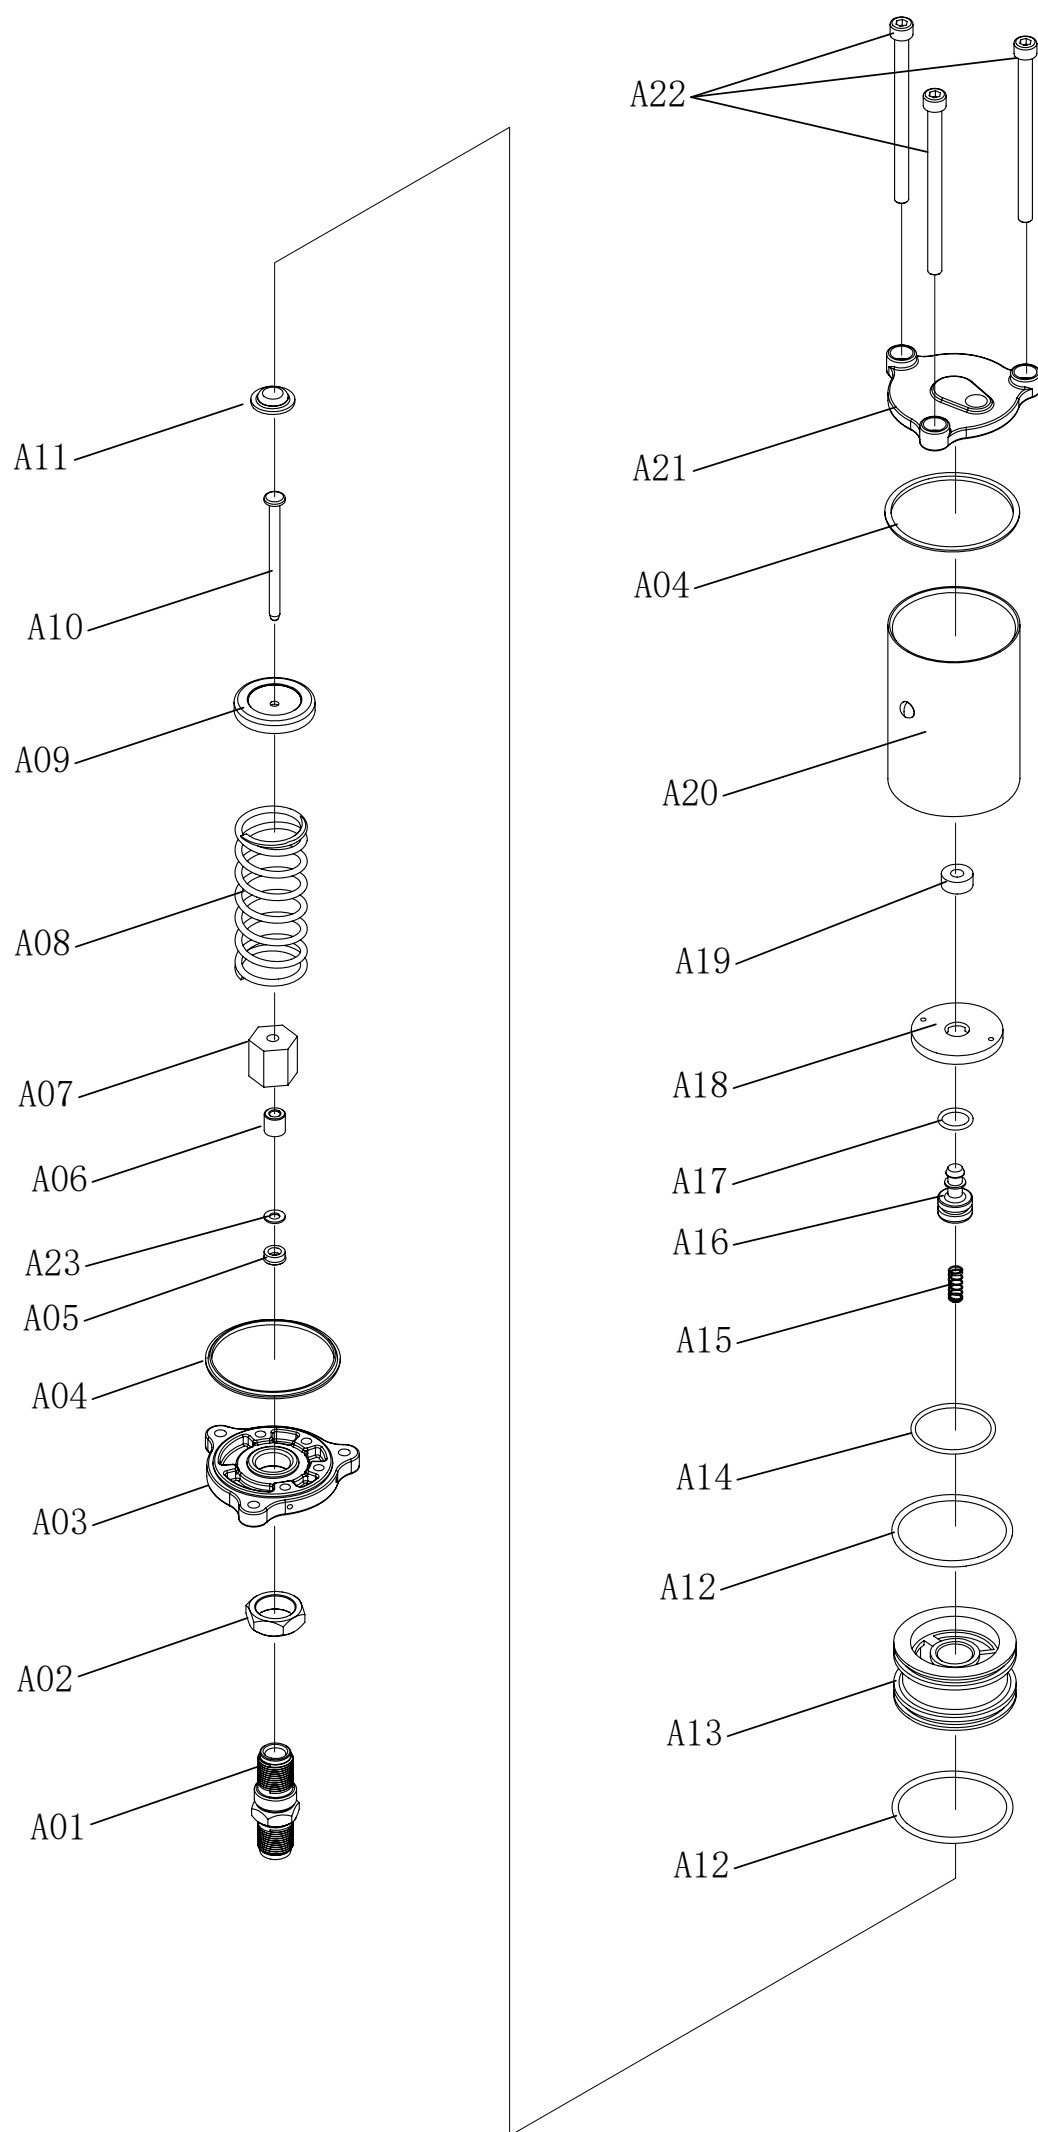

No.	Desc.	Q'ty
A01	Air pump core seat	1
A02	Lower assembly nut	1
A03	Cylinder seat	1
A04	Nylon ring	2
A05	Seal ring	1
A06	Copper ring	1
A07	Upper assembly nut	1
A08	Spring	1
A09	Cover	1
A10	Pump core	1
A11	Cover	1
A12	O ring	2
A13	Big piston	1
A14	O ring	1
A15	Spring	1
A16	Small piston	1
A17	O ring	1
A18	Cover	1
A19	Seal ring	1
A20	Cylinder	1
A21	Cover	1
A22	Screw	3
A23	Nylon ring	1