



No.	Desc.	Q'ty
1	Screw	6
2	Back-up ring	2
3	Retaining ring	2
4	Lower assembly nut	1
5	Bottom cover	1
6	O ring	2
7	Anechoic plate	1
8	O ring	1
9	O ring	2
10	Seal ring	2
11	Small pump core	1
12	Air pump core seat	1
13	Seal ring	1
14	Retaining ring	1
15	Copper ring	1
16	Seal ring	1
17	Seal ring	1
18	Spring	1
19	Big pump core	1
20	Seal ring	2
21	Big piston	1
22	Small piston	1
23	Seal ring	1
24	Cap	1
25	Seal ring	1
26	Cylinder	1
27	Top cover	1