


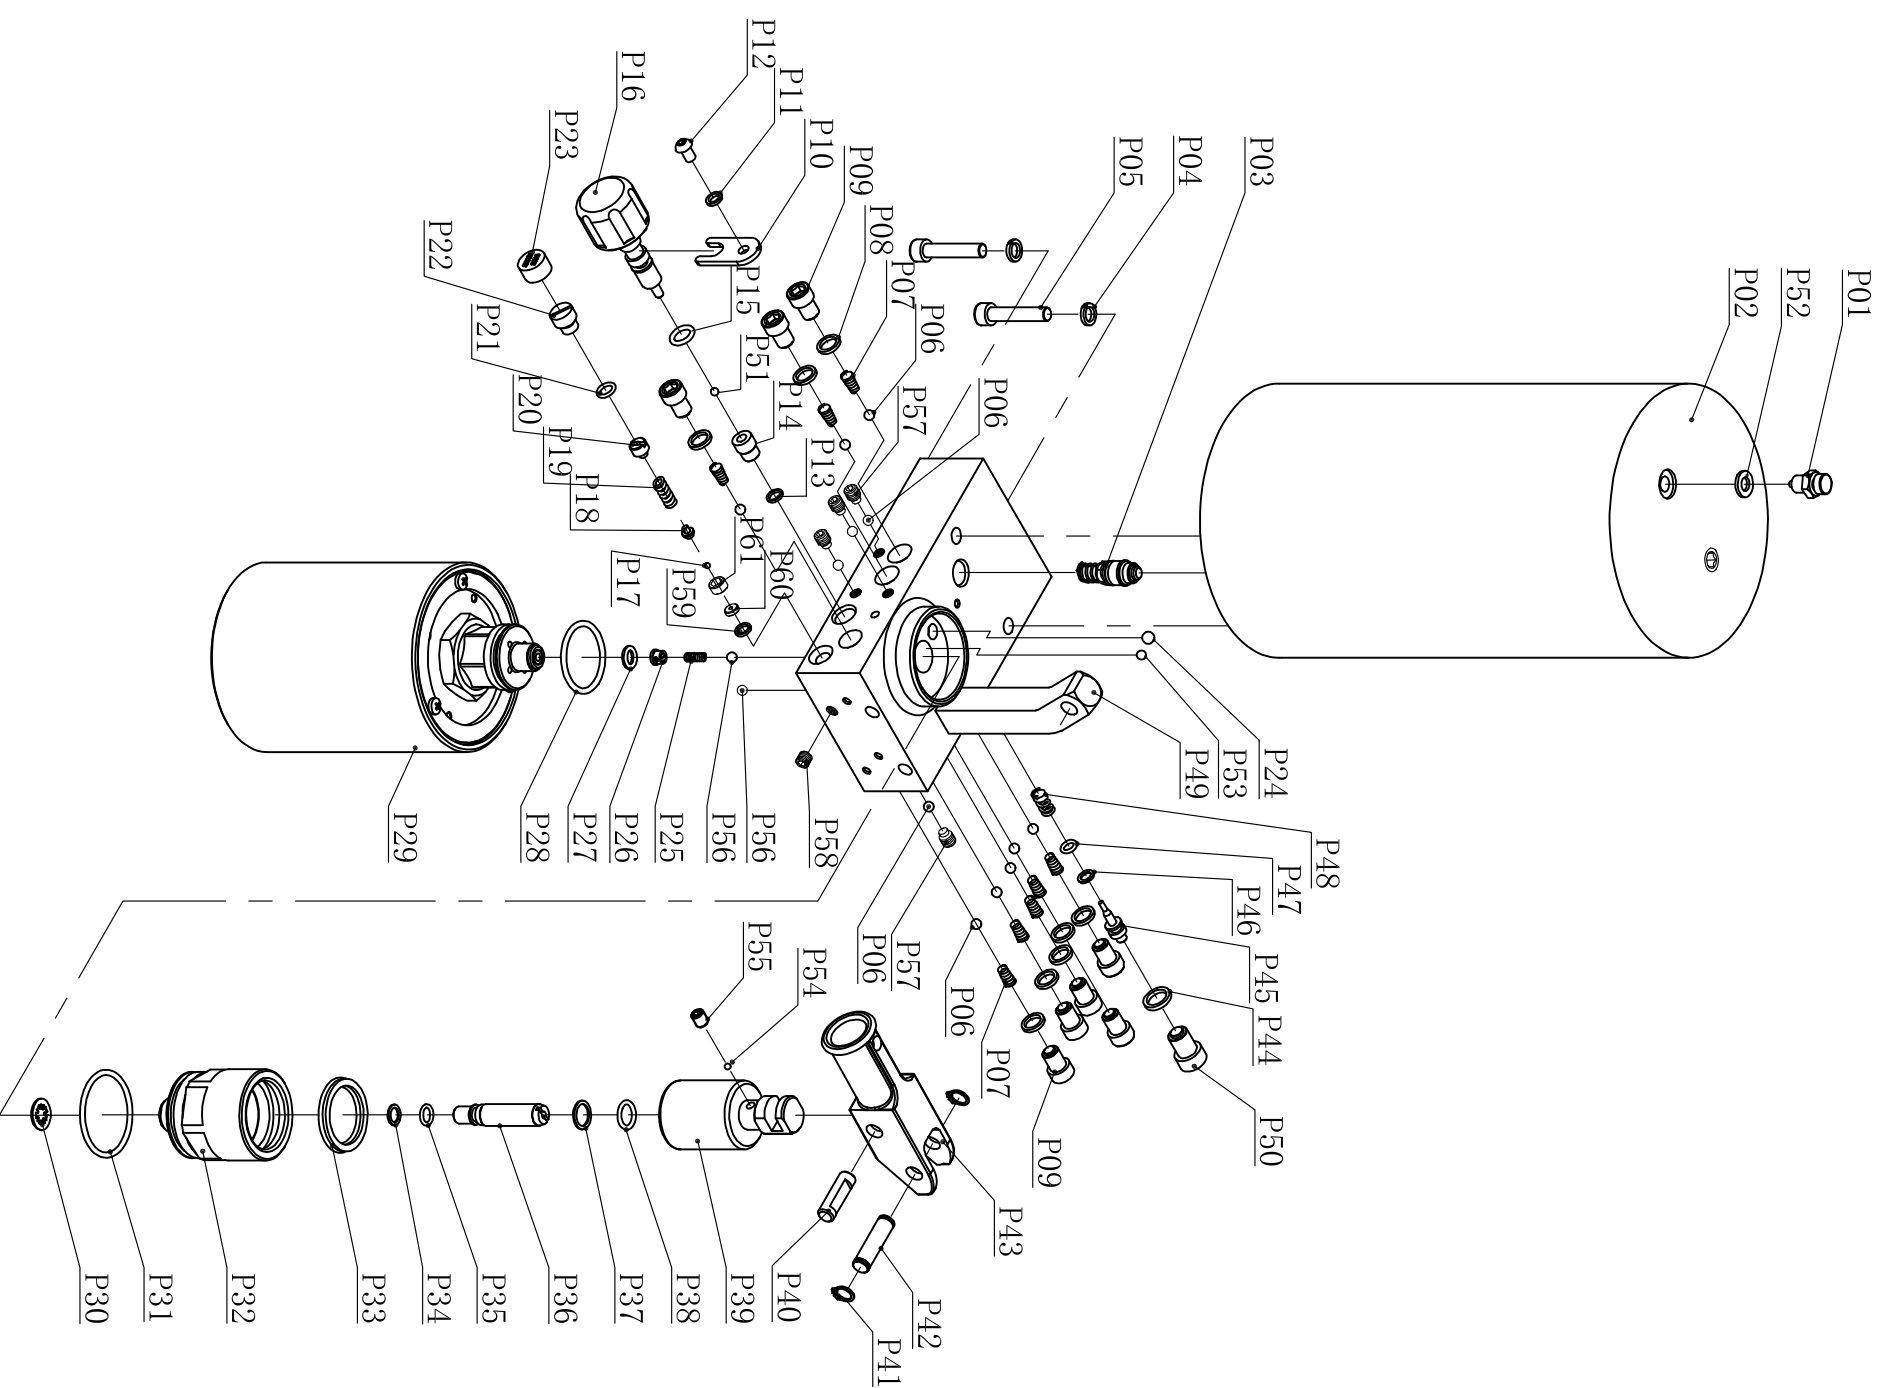

HJ0812CE pump Part list

PART#	DECRPTION	QTY	PART#	DECRPTION	QTY
P1	Filler-venting Screw	1	P32	Manual Pump Core Seat	1
P2	Reservoir	1	P33	U-Ring	1
P3	Fitting	1	P34	O-Ring	1
P4	Lock Washer	2	P35	Seal Ring	1
P5	Screw	2	P36	Small Pump Core	1
P6	Ball	12	P37	Seal Ring	1
P7	Spring	8	P38	O-Ring	1
P8	Copper Washer	8	P39	Big Pump Core	1
P9	Plug Screw	8	P40	Pin	1
P10	U limit	1	P41	Circlip	2
P11	Lock Washer	1	P42	Pin	1
P12	Screw	1	P43	Handle Socket	1
P13	Washer	1	P44	Copper Washer	1
P14	Release Valve Seat	1	P45	Control Valve Core	1
P15	O-Ring	1	P46	O-Ring	1
P16	Release Valve	1	P47	Seal Ring	1
P17	Valve Ball	1	P48	Spring	1
P18	Steel Ball Seat	1	P49	Pump	1
P19	Spring	1	P50	Screw	1
P20	Screw	1	P51	Ball	1
P21	O-Ring	1	P52	Nylon ring	1
P22	Screw	1	P53	Ball	1
P23	Cap	1	P54	Ball	1
P24	Ball	1	P55	Screw	1
P25	Spring	1	P56	Ball	2
P26	Spring Seat	1	P57	Screw	4
P27	Copper Washer	1	P58	Screw	1
P28	O-Ring	1	P59	Copper Washer	1
P29	Air motor	1	P60	Seal Ring	1
P30	Copper Washer	1	P61	Screw	1
P31	O-Ring	1			