

 
# ProLine

## TOOL & SUPPLY, LLC

### **LK4053**

### **BOX ATTACHMENT**

**Assembly Guide**

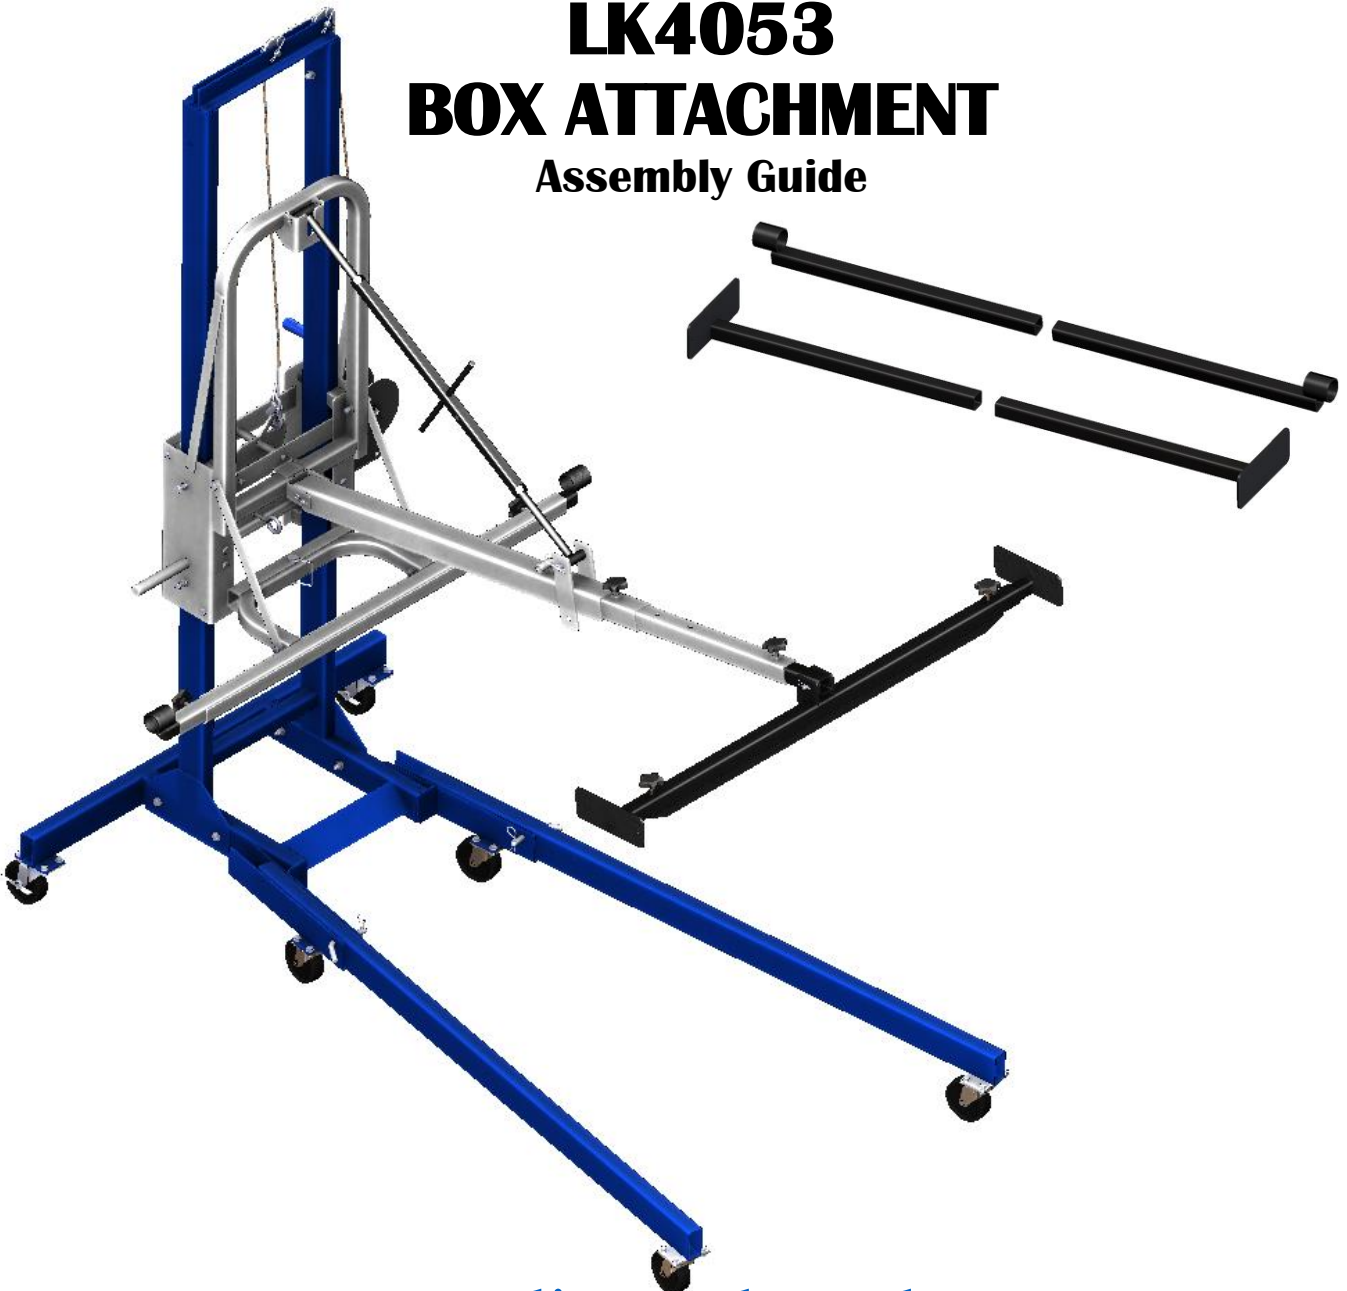

[www.prolinetoolsupply.com](http://www.prolinetoolsupply.com)

(989) 315-8946

# Table of Contents

BOX ATTACHMENT	3
SPECIFICATIONS	3
PARTS & HARDWARE	4
ASSEMBLY GUIDE	4
OPERATION	5

 
If you have any questions or comments, please call 1 (989) 315-8946.

**Proline Tool & Supply, LLC**  
**210 Pigeon Rd Bad Axe MI 48413 US**  
**(989) 315-8946**

# Box Attachment

The LK4053 Box Attachment installs on the LK4000 Lift King (Main Component) in a matter of seconds and allows one person to install or remove a pickup box with little effort. It is a safe and fast way to increase productivity. Pickup boxes are removed to change fuel pumps, perform collision and restoration work, and many other reasons. The Lift King LK4053 Box Attachment is not the only way to remove a pickup box, but it is the safest and best.

## Specifications

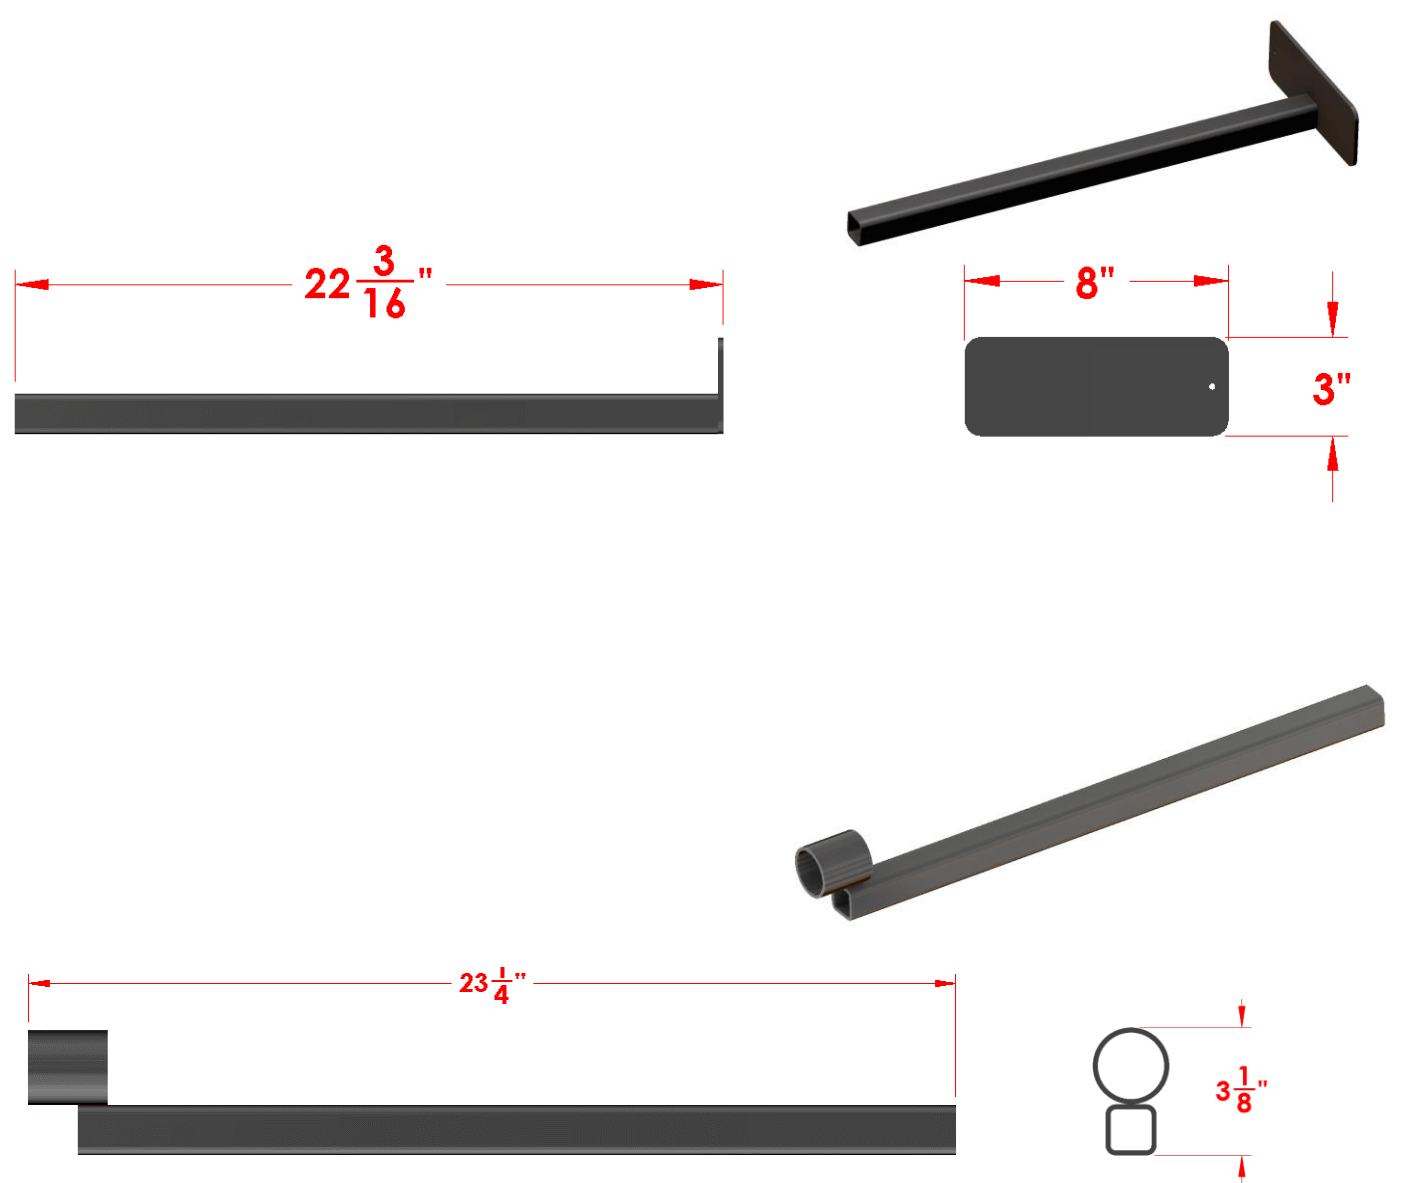

# Parts

 
PART NUMBER	DESCRIPTION	QTY.
LK4011	ADJUSTABLE FRONT SLIDE BAR	2
LK4014	ADJUSTABLE REAR SLIDE BAR	2
*	1-1/2" NOMINAL PIPE CAP	2
*	3"x3"x.75" FLAT GRIPS-BLACK SLEEVE	4



# Assembly


## STEP 1

Slide the 3 x 3 x .75 flat grips-black sleeves on to the LK4011 adjustable front slide bars, as shown. Slide the 1 1/2 " nominal pipe caps on to the LK4012 adjustable rear slide bars, as shown.

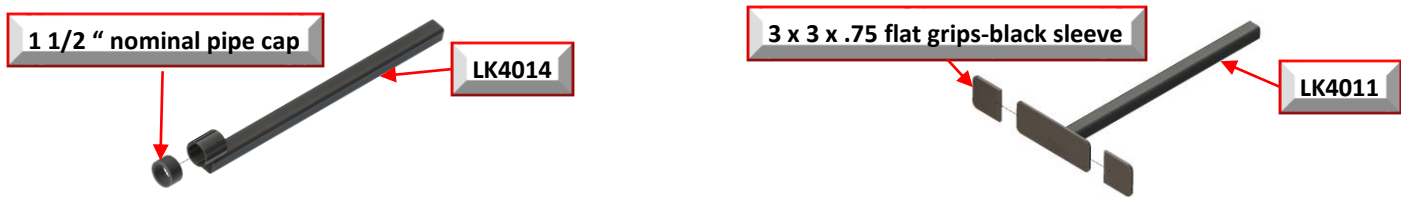

## STEP 2

 
Slide the LK4011 adjustable front slide bar into the front tube of the LK4000 Lift King (Main Component), as shown, and tighten the star knob. Do the same for the opposite side.

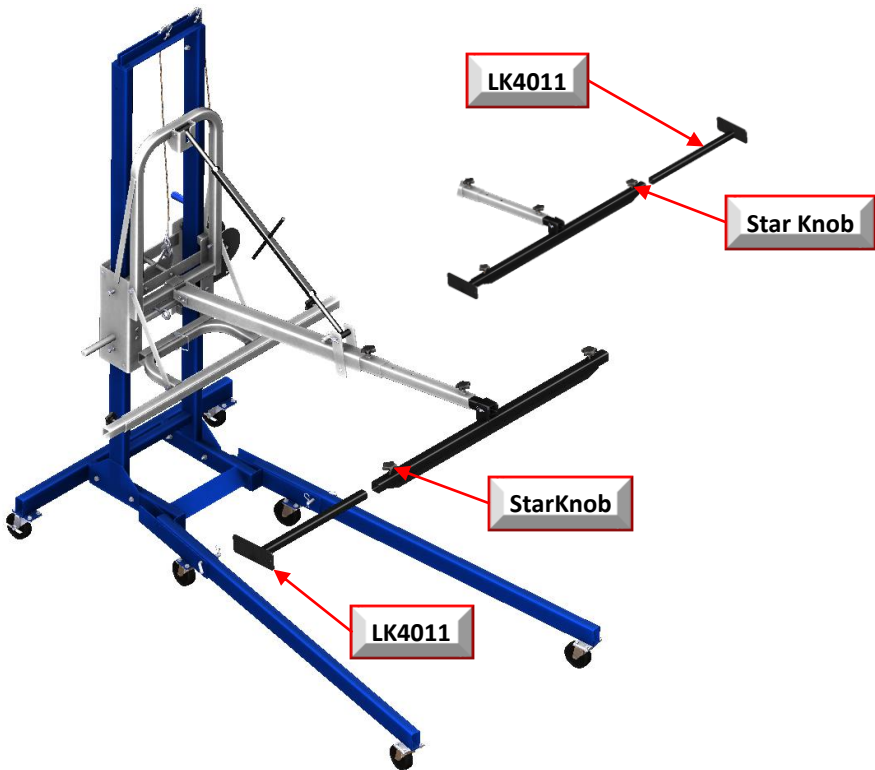

# Assembly

## STEP 3

 Slide the LK4014 adjustable rear slide bar into the rear tube of the LK4000 Lift King (Main Component), as shown, and tighten the star knob. Do the same for the opposite side.

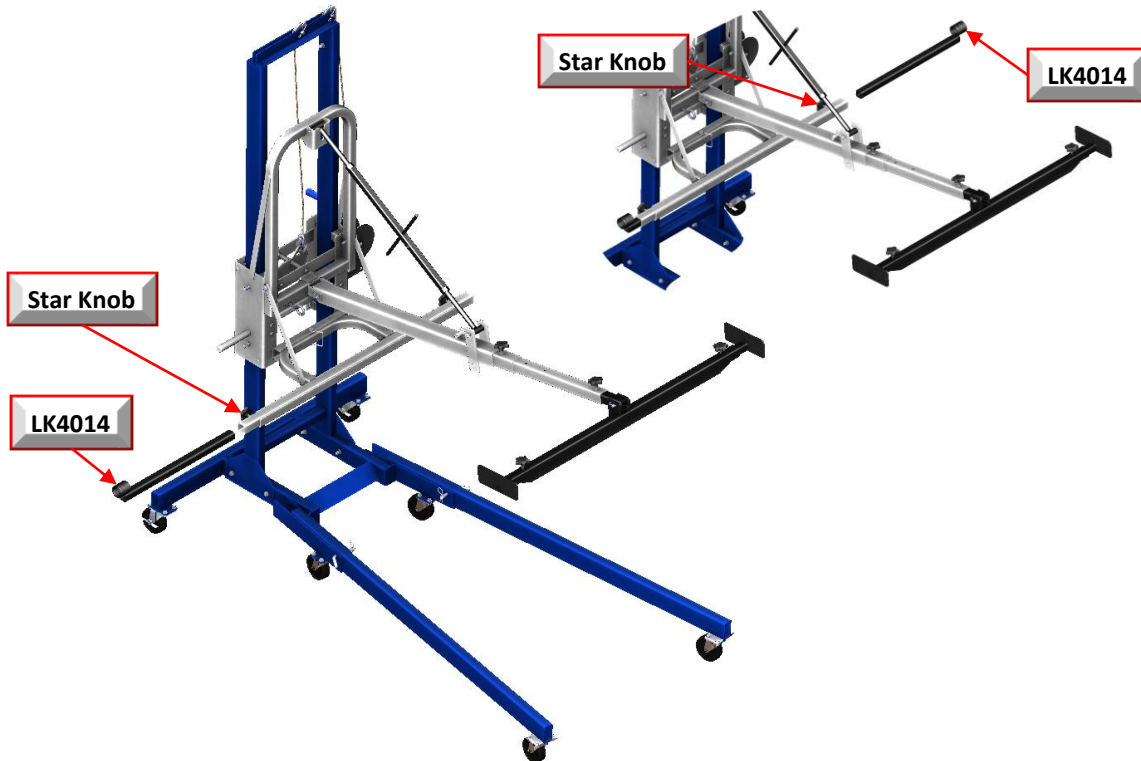

# Operation

## STEP 1

Attach rear slide bar LK4014 to the pickup's tailgate mounting post, as shown, and tighten the star knob. Do the same for the opposite side. **Make sure that the LK4000 Lift King (Main Component) is centered to the pickup bed. Not centering the pickup bed to the Main Component may result in injury to the operator or damage to the tool.**



 
# Operation

## STEP 2

Extend the LK4011 front slide bar until just before it touches the side of the pickup bed, as shown, and tighten the star knob. Do the same for the opposite side. **Make sure that the LK4000 Lift King (Main Component) is centered to the pickup bed. Not centering the pickup bed to the Main Component may result in injury to the operator or damage to the tool.**



LK4011 adjustable front slide bar

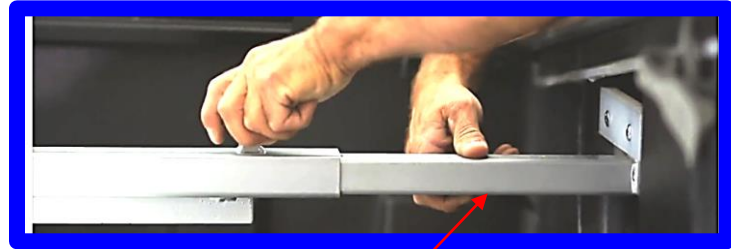

LK4011 adjustable front slide bar

## STEP 3

Use the turnbuckle of the LK4000 Lift King (Main Component) to raise the LK4011 front slide bar until it catches the bed rail of the pickup bed, as shown. Use the winch to raise the pickup bed off of the truck chassis.



turnbuckle

LK4011 adjustable front slide bar

winch



LK4011 adjustable front slide bar