


30 GALLON MULTI-FUNCTIONAL OIL DRAINER
NEW METHOD OF CLEANING UP SPILLS
ASSEMBLY & OPERATING INSTRUCTIONS

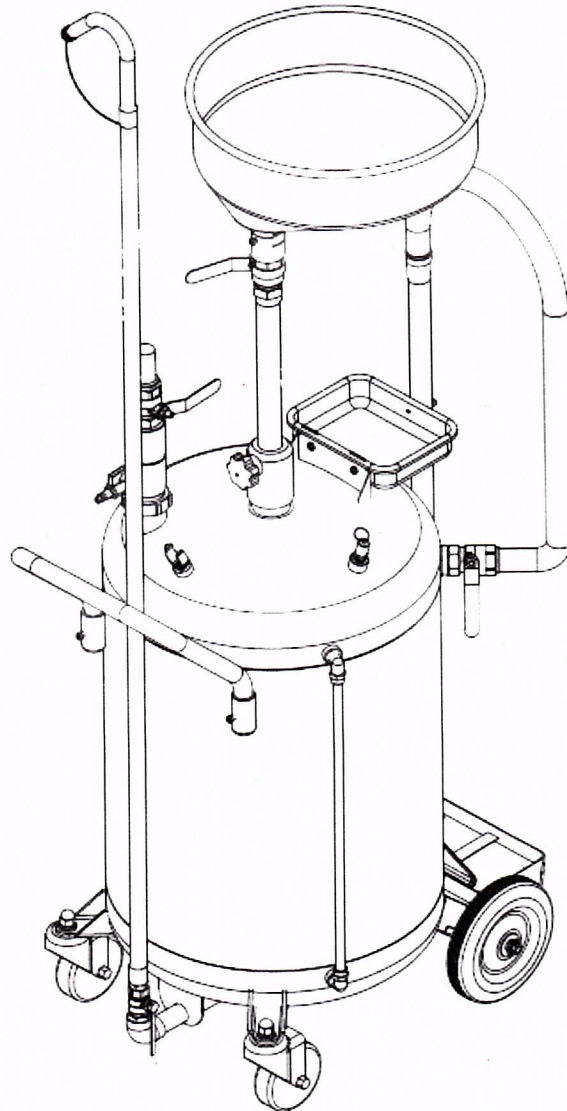

TECHNICAL SPECIFICATIONS

Model: ODT-30-E

Capacity: 30 Gallon

Drain Funnel: Adjusts from 1200 mm to 1800 mm

Drain Funnel Diameter: 400mm

Plastic Screen: 300 x 300 x 55 mm

Swivel Castors: 2pc 4" X 1.2"

Wheels: 2pc 7" X 1.5"

Working Pressure: ≤ 7 psi (0.5bar)

IMPORTANT

READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT.

READ AND UNDERSTOOD ALL SAFETY WARNINGS AND PRECAUTIONS CONTAINED IN THIS MANUAL.

KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.

Warning: When using product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Warning: The warnings cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factor which cannot be built into this product, but must be supplied by the operator.

INSPECTION

Check for worn parts, air leaks, and damaged, loose or missing parts before operating.

Check tank operation by connecting air to air nipple and closing ball valve.

Verify that there is sufficient air flow coming from nozzle/hose assembly.

An annual tank/component inspection is recommended.

READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

1. **Keep Work area clean.** Cluttered areas invite injuries.
2. **Observe work area conditions.** Keep area well lighted.
3. **Store idle equipment.** When not in use, the product must be stored in a safe and clean location. Always lock up products and keep out of reach of children.
4. **Use the right product for the job.** There are certain applications for which the product was designed. **DO NOT** modify the product and **DO NOT** use the product for a purpose for which it was not intended.
5. **Check for damaged parts.** Before using any product, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for any broken or damaged parts and any other conditions that may affect its operation. Replace or repair damaged or worn parts immediately.
6. **Replacement parts and accessories.** When servicing, use only identical replacement parts. Use of any other parts will void the warranty.
7. **DO NOT operate product if under the influence of alcohol or drugs.**
8. **DO NOT exceed the product's working pressure of 7 psi (0.5bar)**
9. **Only use on a flat surface capable of supporting the product and its maximum load.**
10. **Dress safely.** Non-skid footwear or safety boots should be used when working with the product. **DO NOT** wear loose clothing or jewelry as they can become caught in moving parts. Wear a protective hair covering to prevent long hair from becoming caught in moving parts.
11. **DO NOT allow children in the work area.**
12. **Always check hardware and assembled parts after assembling.** All connections should be checked and hardware tightened.
13. **DO NOT overreach.** Keep proper footing and balance at all times to prevent tripping, falling and injury.

14. **Always secure the wheels and casters in place while operating the product.**
15. **Know and obey city and state laws for proper disposal of oil.** Dispose of oil properly in accordance with all local laws and regulations.

SPECIFIC PRODUCT WARNING AND PRECAUTIONS

Note: This Product is to be used only for transporting oil. **DO NOT** use to transport any other liquid.

1. **Always disconnect equipment from its air supply source and release all compressed air from the system before performing any service or maintenance.**
2. **Never leave this product unattended while operating or evacuating oil.**
3. **Never use this equipment near open flame or heat sources.**
4. **Always raise Drain Bowl and close ball valve (1#) before evacuating oil. Never attempt to pressurize the tank with the ball valve open.**
5. **If the safe valve ever relieves any air pressure from the tank, remove the unit from service immediately and contact a qualified service technician.**
6. **If used oil does not evacuate from tank upon pressurization, check that ball valves are fully in the correct positions. If this does not correct the problem, removed the unit from service and contact a qualified service technician.**


ASSEMBLY

This unit requires some assembly before use. It is important that you read the entire manual to become familiar with the product BEFORE you assemble and use the product. Before operating the tool, be sure that you have all parts described in parts list in and assembly diagram located on the last pages of this manual.

1. Insert the bolts on top of the casters (#5) into the flange plates. slide flat washer (#7), circlip (#6) and M12 cover nut (#8) onto bolt. tighten securely.
2. Slide two wheels (#2) onto each end of the axle located at the base of the tank (#1), secure with washer (#4) and M8X16 bolt (#3). tighten securely.
3. Insert handle (#10) into the two slots on the side of the oil tank . tighten down handle the M6X8 screws (#9).
4. Insert the drain tube (#16) into the oil tank (#1), tighten the tension knob.
5. Attach the funnel assembly (#15) to the top of the drain tube, tighten securely. then put the plastic screen (#14) into the funnel assembly.
6. Insert the high power vacuum valve (#11) into the oil tank (#1), tighten securely. then assemble the tray (#17), tighten with the M6 screw (#18) and M6 nut (#19).
7. Insert the suction hose connector (#20) into the tank (#1) and tighten securely. the assemble the suction tube (#21) and the suction head (#22). slide the oil box (#23) onto the axle located at the base of the tank (#1).
8. Check all connections to hoses and valves to ensure that there will be no leaks.
9. Check to make sure all hardware is secured tightly. Also check to make sure the wheels rolls properly before using your oil drain tank.

TO DRAIN OIL

Raise the drain tube to desired height and lock in place with tension adjusting knob.
With valve (1#) fully open, drain oil into bowl/tank assembly. **DO NOT** fill the reservoir above the maximum oil level as shown.

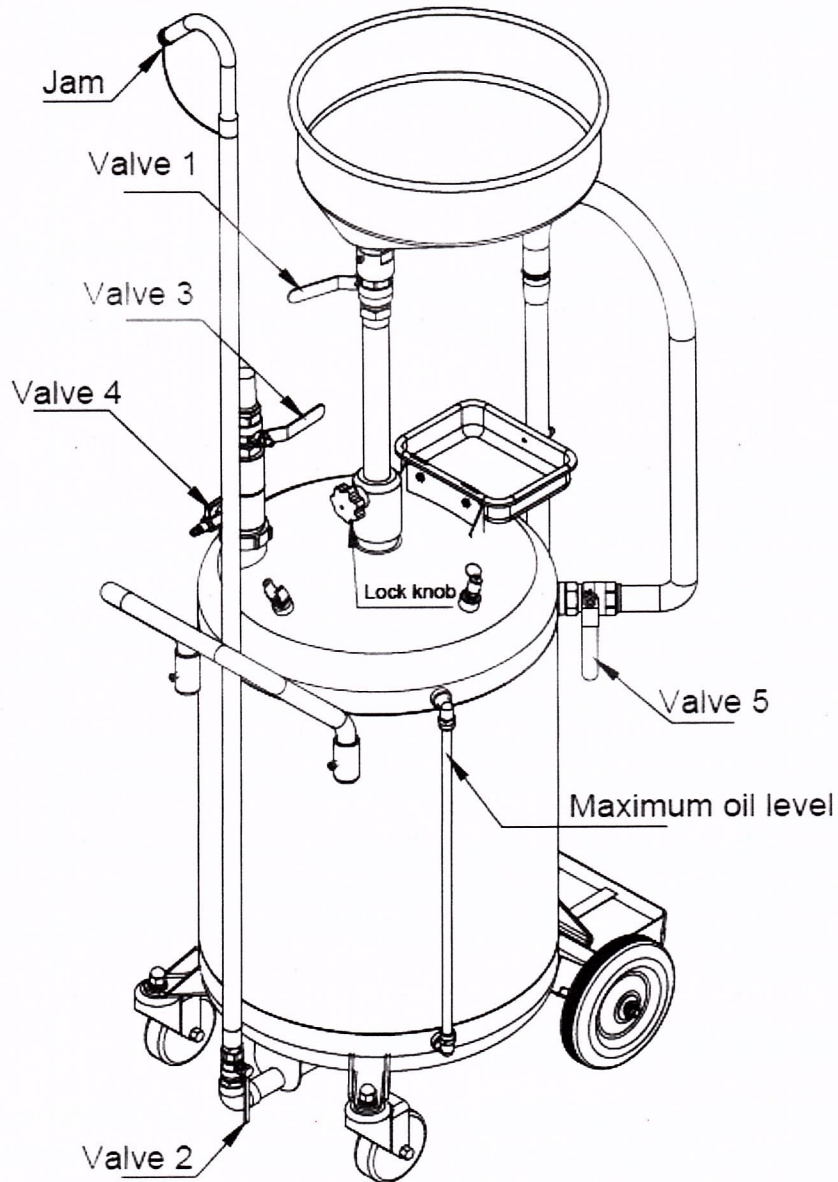

TO SUCTION OIL

Before suction oil, please close the valve 1 and valve 2, connect the air compressor, then open the valve 3 and the valve 4 to take out the air in the tank. Connect the oil suction head, open the valve 5 to suction oil.

Immediately disconnect air supply when the oil suction is end.

Never leave unit unattended when suctioning oil.

TO EVACUATE OIL

Bring the equipment to the waste oil collection stations, please close the valve 1, valve 3 and valve 5. place the evacuation hose/ nozzle assembly **SECURELY** into your used oil collection reservoir, then connect the air compressor and open the valve 4, when the tank has some gas, open the valve 2 and the jam to evacuate oil.

Immediately disconnect air supply when oil is no longer discharging into reservoir.

Never leave unit unattended when evacuating oil.

TO TRANSPORT TANK

With the valve 1 fully open (valve handle in vertical position), lower drain tube to desired height. Always use the tank handle to transport the tank assembly. Always grasp the handle with two hands while moving the load. **Do not pull unit by the funnel, tube or hoses.**

CLEANING AND MAINTENANCE

1. Before each use, examine the general condition of the entire oil drain system. Inspect air hoses for damage. Check for loose screws, misalignment, binding of moving parts, improper mounting, broken parts and any other condition that may affect its safe operation. If abnormal noise or vibration occurs, turn off the air compressor immediately and have the problem corrected before further use. Refer to "Warnings and precautions" sections. **DO NOT** use a damaged product.
2. **CAUTION:** Always disconnect this product from its air supply, and release all compressed air from the system before performing any cleaning, servicing maintenance.
3. Keep the outside of the equipment free of oil grease. Use only a mild soap and damp cloth when cleaning. **DO NOT** use a flammable or combustible solvent.
4. Before and during each use, inspect the oil indicator level. **DO NOT** fill tank above maximum oil level.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY A CERTIFIED AND LICENSED TECHNICIAN AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.