



On the top side of the PP15HD pump reservoir is a brass-colored plug that inserts into a black rubber grommet. This is the air vent, and it allows air to come in and out of the reservoir as the fluid level rises and lowers. Please pull this brass vent into the upward position. Failure to do so will result in the pump's inability to allow air to flow in and out of the pump's reservoir, causing the pump to quit working. This does not need to be done with each use, but instead should only be performed upon first usage. This vent is shipped in the downward position to help minimize the possibility for fluid loss during transit should the pump be oriented any way other than right side up. We thank you for your business and attention to this matter.

