

NO.	DESC.
P01	Base
P02	Seal ring
P03	Oil filter
P04	Washer
P05	Ram
P06	O ring
P07	Seal ring
P08	Piston head
P09	Piston
P10	Reservior
P11	O ring
P12	Top nut
P13	Handle socket
P14	R pin
P15	Bolt
P16	Washer
P17	Liffting pedal
P18	Pin
P19	Pump core
P20	Circlip
P21	O ring

HJ1003P PUMP

Q'TY	NO.
1	P22
1	P23
1	P24
1	P25
1	P26
1	P27
1	P28
1	P29
1	P30
1	P31
1	P32
1	P33
1	P34
2	P35
1	P36
1	P37
1	P38
1	P39
1	P40
1	P41
1	P42
	P43

DESC.	Q'TY
Dust ring	1
Spring cover	1
Spring	1
Pump core seat	1
Washer	1
Steel ball	3
Release pedal	1
Steel ball	1
Ball cup	2
Spring	2
O ring	1
Screw	1
Release valve rod	1
O ring	1
Ball cup	1
O ring	1
Pin	1
Seal ring	1
Nylon ring	1
Samll filter	1
Pin	1
Rubber pad	1