




## RL 135 Assembly Manual

Verify all hardware and parts are included



Using a 6mm allen  
install the pump  
to the frame.



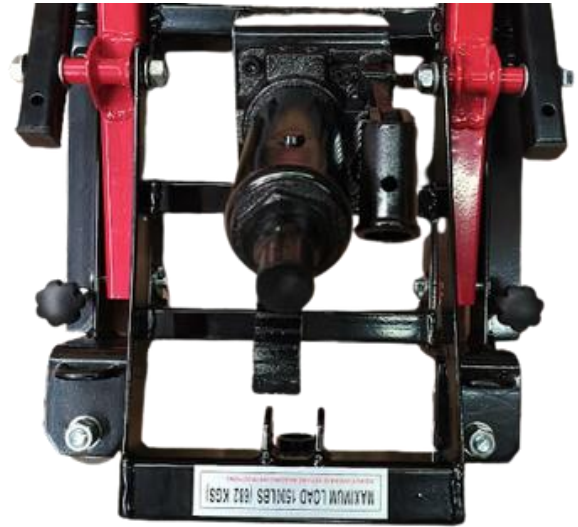

Remove the lock nuts with a 19mm Wrench. Install the lifting frame. Be sure the washers are on the outside and the lifting frame is over the shoulders as pictured .



The 10mm bolt will attach the spring to the bottom left of the pump.

Slide the spring pin through the cylinder and lifting frame bracket. Install the cotter pin in the hole marked by the red arrow.



Align the hole in the handle with the hole in the lifting frame. Use a 14mm wrench to tighten handle to the frame

Use a Phillips screwdriver to install the foot pedal to the pump.



Using a 10mm wrench and Phillips screwdriver. Install the clip.

Attach the safety handle with a 14mm wrench. The handle should snap into the clip for storage when not needed.



We hope you enjoy your new  
RL 135