


Transmission Jack Parts List

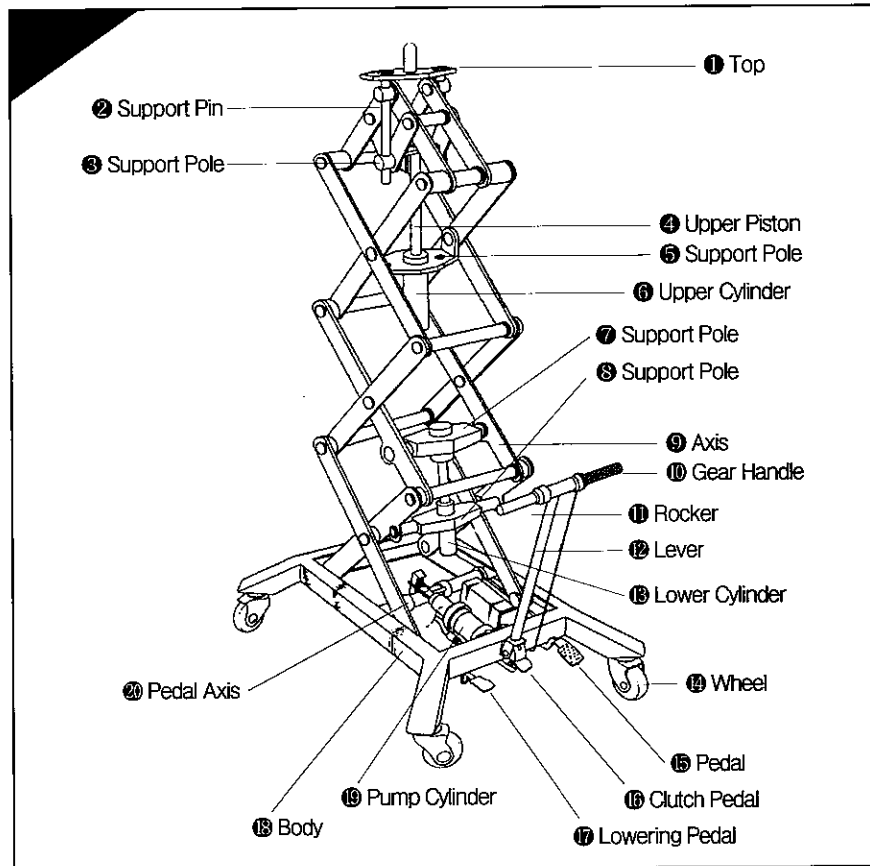

Part Number	Description	Part Number	Description
1	Top	11	Rocker
2	Support Pin	12	Lever
3	Support Pole	13	Lower Cylinder
4	Upper Piston	14	Wheel
5	Support Pole	15	Pedal
6	Upper Cylinder	16	Clutch Pedal
7	Support Pole	17	Lowering Pedal
8	Support Pole	18	Body
9	Axis	19	Pump Cylinder
10	Gear Handle	20	Pedal Axis