

Innovative Parts Cart A™


Assembly Instructions



1 Install wheels to leg support tubes.



2 Bolt leg support tubes to lower frame support. If you want to nest the SuperStorage Parts Cart, move leg support to outward position.

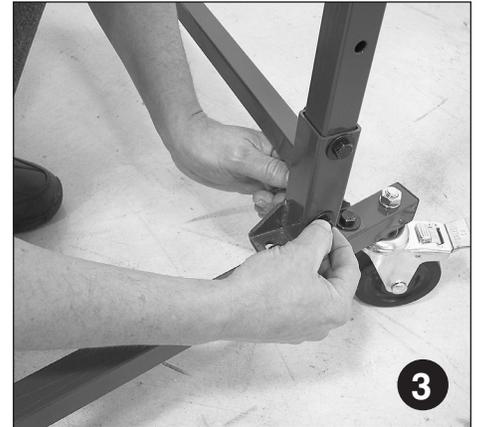


3 Slide side rail tube into lower base support. Insert bolts. *Note: do not tighten bolts until frame is completed.*



4 Install upper frame support, then tighten all bolts.



5 Mount support arms on top of basket.

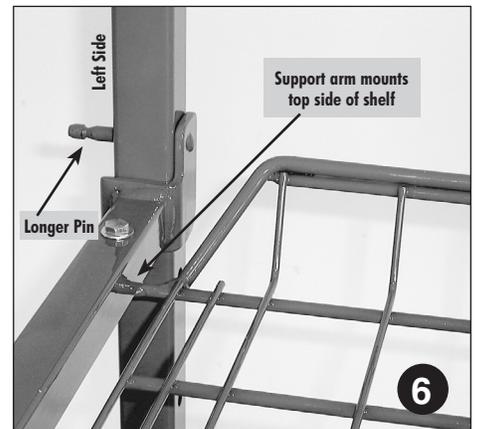

6 **Shelf assembly**
Put longer pin on the left side of all shelves.



7 Put shelves in desired positions. Always put heavier objects on lower shelves. Bungee cords work well to secure larger boxes and other awkward parts.




8 **Nesting instructions**
Fold shelving from bottom to top.



9 For restoring shelves to operating position, fold out from top to bottom.

Innovative Parts Cart A™

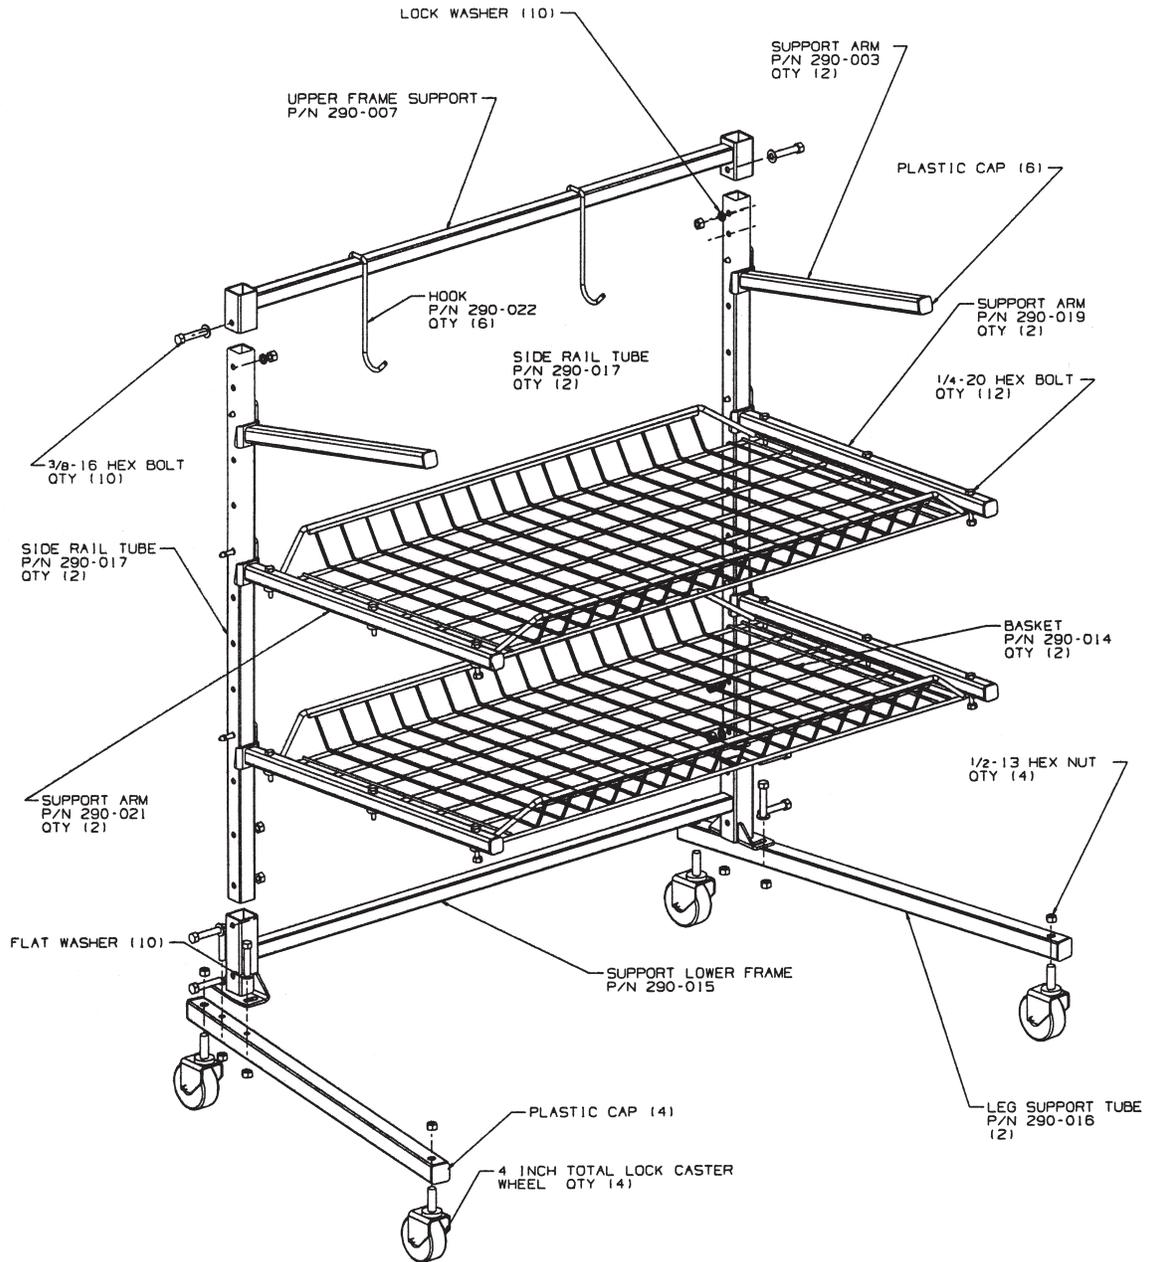

DEC 2005