



# P O W E R T R A I N L I F T



# CONTENTS



- M20 2
- M16x100 1
- M16x110 6
- M16x130 2
- M16x165 1
- M12x88 2
- Socket cap 4
- M10 4





Begin by attaching the vertical stand to the base using the 6xM16X110mm bolts.



At the base of the vertical install the cylinder using M16X100mm bolt.




Install the lower arms  
using a M20 bolt.  
(Note lower arms have  
3 holes.)



Install the pump shelf on  
the lower holes using  
2 silver M10 bolts.

Thread the included  
hydraulic fitting  
to the pump.

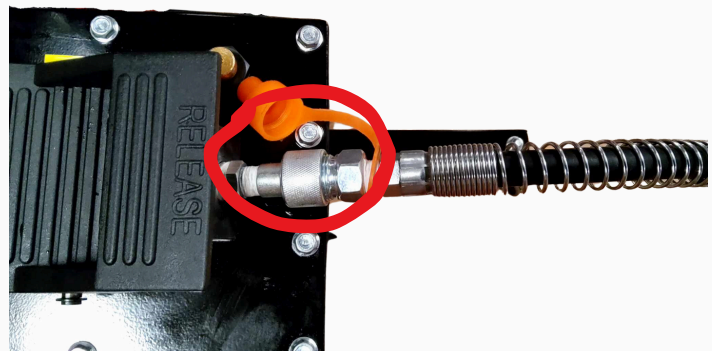



Place the pump on the shelf.  
Connect the cylinder.



Connect the cylinder to the  
lower arms using the  
M16X165mm bolt.

Install the handle with the  
last 2 silver M10 bolts.



Install upper arms with  
the last M20 bolt.




Connect main  
lift arm using  
2xM16X130  
bolts.



Install pivot plate using the  
M12X88MM . Then install the 3  
adjustment screws to level head.



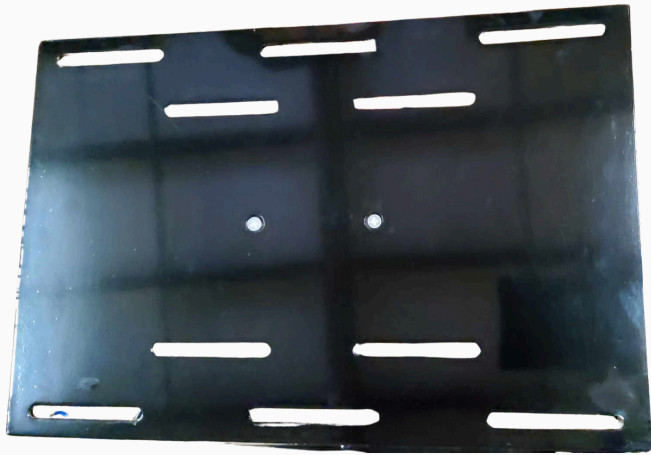

Attach the lift plate to the level head using the 2 silver flat screws.



Add the blocks to the top  
Using the 4 socket cap bolts.



# Finished



[WWW.REDLINESTANDS.COM](http://WWW.REDLINESTANDS.COM)